



UNICA-2 90

Manual for placing the Fire Glow Light Bulbs


1. Unplug the unit from the wall socket.



2. Remove the door by loosening left-and right under a screw, pull it a little forward at the bottom, lift it carefully



3. Carefully separate the aluminum caps, left and right, with a nut driver No. 7 (or standard screwdriver).

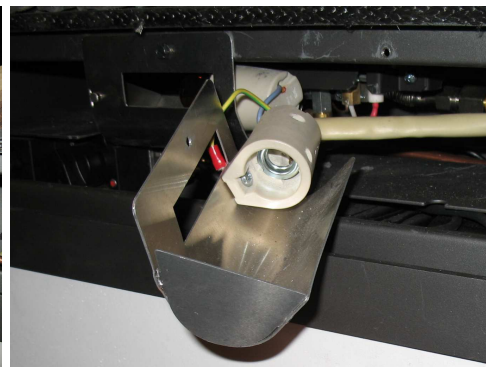

4. Carefully turn the light bulbs (*), left and right, in the ceramic fittings.



 Turn the Fire Glow light bulbs completely into the socket

5. Assemble the aluminum caps.
6. Plug the unit into the wall socket.
7. Check the operation of the lamps using the remote control.
See Instructions for use,  **Setting light / dimmer.**
8. Check the seal of the door. If necessary, replace the sealing.
9. Clean, if necessary, the inside of the glass with glass spray or ceramic hob cleaner.

 *Caution! : Careful with glass cleaner!
Make sure that no glass cleaner liquid flows in the sealing of the inside of the glass pane at the bottom of the door. Spray each time a little glass cleaner liquid on the glass, and polish it off immediately.
Glass cleaner liquid in the sealing of the door can cause dissolving of the black border on the inside of the glass. It will become very spotty and can't be repaired.*

10. Mount the door.

(*) Use only the Bellfires Fire Glow light bulb:
Art. No. 333748.....Light bulb, 230-240V - 25W - E14 - 300 ° C. - Color: Amber
