


barbas .

User manual

BOX 35-52-65

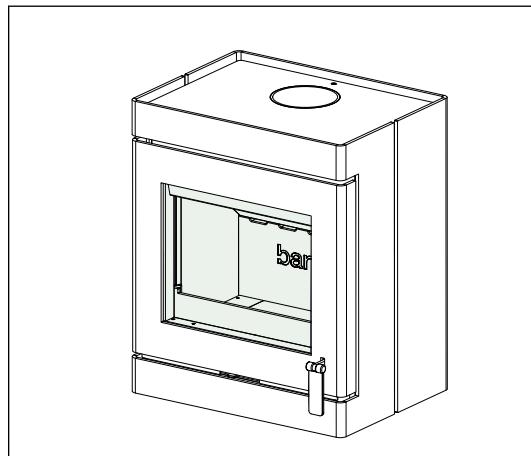

This product is not suitable for primary heating purposes



Serial number:

Production date:

© Barbas Bellfires BV

This document or parts thereof may not be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, nor otherwise, without the prior written permission of Barbas Bellfires BV. This document could contain technical inaccuracies or typographical errors. Barbas Bellfires BV reserves the right to revise this document from time to time in the contents thereof.

Contact information

Barbas Bellfires BV

Hallenstraat 17, 5531 AB Bladel, The Netherlands

E-mail: info@barbas.com

www.barbas.com

Contents

1	Declaration of Performance.....	5
1.1	BOX 35-52-65	5
1.2	BOX 35-52-65 with wall support frame.....	6
2	About this document.....	7
2.1	How to work with this document.....	7
2.2	Warnings and cautions used in this document.....	7
2.3	Related documentation.....	7
3	Description.....	8
3.1	Overview of the front of the appliance.....	8
3.2	Intended use.....	9
4	Safety.....	10
4.1	Safety instructions for operation.....	10
4.2	Safety instructions with regard to the environment.....	11
5	Fuel.....	12
5.1	Fuel types.....	12
5.2	Fuel amount.....	12
6	Operation.....	14
6.1	Preparation before first use.....	14
6.2	First use of the appliance.....	14
6.3	Firing the appliance.....	14
6.3.1	First load and ignition.....	14
6.3.2	Reload for nominal heat output.....	16
6.3.3	Reload for minimum heat output.....	16
6.3.4	Control the burn process	17
6.3.5	Increase the flue draught	18
6.3.6	General firing tips.....	20
7	Maintenance.....	21
7.1	Maintenance schedule.....	21
7.2	Remove the ashes.....	21
7.3	Clean the glass.....	21
8	Troubleshooting.....	22
9	Information on disposal of the appliance	24

10	Technical data.....	25
10.1	Technical data	25
10.2	Product information according regulation (EU) 2015/1185.....	27
11	Warranty Terms.....	28

1 Declaration of Performance

1.1 BOX 35-52-65

EU-declaration of conformity																																																																																																								
<p>This EC declaration of conformity applies to the product described below and describes the conformity with the following directives: 2009/125/EC Directive for the setting of eco-design requirements for energy-related products (eco-design directive) Relevant Regulation: (EU) 2015/1185</p>																																																																																																								
Declaration of Performance																																																																																																								
No. 2.109.080-0 - CPR-2013/07/01																																																																																																								
Unique identification code of the product type: BOX 35-52-65 Intended use: Space heating in residential buildings Manufacturer: Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands																																																																																																								
System of AVCP: 3 Harmonised technical specifications: EN 16510-2-1:2022 Notified body: No. 1639																																																																																																								
Essential characteristics <table border="1"> <tr> <td><i>Mechanical resistance and stability</i></td> <td>Load bearing capacity</td> <td>120 kg</td> </tr> <tr> <td colspan="3"> Safety in case of fire - Protection of combustible materials <table border="1"> <tr> <td>Bottom (d₈):</td> <td>3 cm</td> </tr> <tr> <td>Floor in front (d₉):</td> <td>40 cm</td> </tr> <tr> <td>Ceiling (d₁₀):</td> <td>50 cm</td> </tr> <tr> <td>Rear (d₁₁):</td> <td>30 cm</td> </tr> <tr> <td>Side (d₁₂):</td> <td>25 cm</td> </tr> <tr> <td>Side radiation area (d₁₃):</td> <td>50 cm</td> </tr> <tr> <td>Front (d₁₄):</td> <td>120 cm</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> Hygiene, health and the environment <table border="1"> <tr> <td>Carbon monoxide emission (CO)</td> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>908 mg/m³</td> <td>1447 mg/m³</td> <td></td> </tr> <tr> <td>Nitrogen oxides emission (NO_x)</td> <td></td> <td>78 mg/m³</td> </tr> <tr> <td>91 mg/m³</td> <td></td> <td>88 mg/m³</td> </tr> <tr> <td>Emission of organic gaseous carbon (OGC)</td> <td></td> <td></td> </tr> <tr> <td>36 mg/m³</td> <td></td> <td>13 mg/m³</td> </tr> <tr> <td>Particulate matter emission (PM)</td> <td></td> <td></td> </tr> <tr> <td>18 mg/m³</td> <td></td> <td></td> </tr> </table> </td> </tr> <tr> <td colspan="3"> Safety and accessibility in use <table border="1"> <tr> <td>Flue gas outlet temperature</td> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>368 °C</td> <td>314 °C</td> <td></td> </tr> <tr> <td>Minimum flue draught</td> <td></td> <td>7 Pa</td> </tr> <tr> <td>Flue gas mass flow</td> <td>7.3 g/s</td> <td>5.1 g/s</td> </tr> <tr> <td>Fire safety of installation to the chimney</td> <td colspan="2">T400 G minimum</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> Energy economy and heat retention <table border="1"> <tr> <td colspan="3">Appliance's thermal heat output and energy efficiency</td> </tr> <tr> <td colspan="3"> <table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>8 kW</td> <td>5 kW</td> </tr> <tr> <td>77.6 %</td> <td>78.4 %</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> <table border="1"> <tr> <td>Space heat output</td> <td>Space heating efficiency</td> </tr> <tr> <td>Efficiency</td> <td></td> </tr> <tr> <td>67.6 %</td> <td></td> </tr> <tr> <td>103</td> <td></td> </tr> <tr> <td>A</td> <td></td> </tr> </table> </td> </tr> <tr> <td colspan="3"> <table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> <td>Standby mode</td> </tr> <tr> <td>Electric power consumption</td> <td>N/A</td> <td>N/A</td> </tr> </table> </td> </tr> </table></td></tr></table>			<i>Mechanical resistance and stability</i>	Load bearing capacity	120 kg	Safety in case of fire - Protection of combustible materials <table border="1"> <tr> <td>Bottom (d₈):</td> <td>3 cm</td> </tr> <tr> <td>Floor in front (d₉):</td> <td>40 cm</td> </tr> <tr> <td>Ceiling (d₁₀):</td> <td>50 cm</td> </tr> <tr> <td>Rear (d₁₁):</td> <td>30 cm</td> </tr> <tr> <td>Side (d₁₂):</td> <td>25 cm</td> </tr> <tr> <td>Side radiation area (d₁₃):</td> <td>50 cm</td> </tr> <tr> <td>Front (d₁₄):</td> <td>120 cm</td> </tr> </table>			Bottom (d ₈):	3 cm	Floor in front (d ₉):	40 cm	Ceiling (d ₁₀):	50 cm	Rear (d ₁₁):	30 cm	Side (d ₁₂):	25 cm	Side radiation area (d ₁₃):	50 cm	Front (d ₁₄):	120 cm	Hygiene, health and the environment <table border="1"> <tr> <td>Carbon monoxide emission (CO)</td> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>908 mg/m³</td> <td>1447 mg/m³</td> <td></td> </tr> <tr> <td>Nitrogen oxides emission (NO_x)</td> <td></td> <td>78 mg/m³</td> </tr> <tr> <td>91 mg/m³</td> <td></td> <td>88 mg/m³</td> </tr> <tr> <td>Emission of organic gaseous carbon (OGC)</td> <td></td> <td></td> </tr> <tr> <td>36 mg/m³</td> <td></td> <td>13 mg/m³</td> </tr> <tr> <td>Particulate matter emission (PM)</td> <td></td> <td></td> </tr> <tr> <td>18 mg/m³</td> <td></td> <td></td> </tr> </table>			Carbon monoxide emission (CO)	At nominal heat output	At part load heat output	908 mg/m ³	1447 mg/m ³		Nitrogen oxides emission (NO _x)		78 mg/m ³	91 mg/m ³		88 mg/m ³	Emission of organic gaseous carbon (OGC)			36 mg/m ³		13 mg/m ³	Particulate matter emission (PM)			18 mg/m ³			Safety and accessibility in use <table border="1"> <tr> <td>Flue gas outlet temperature</td> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>368 °C</td> <td>314 °C</td> <td></td> </tr> <tr> <td>Minimum flue draught</td> <td></td> <td>7 Pa</td> </tr> <tr> <td>Flue gas mass flow</td> <td>7.3 g/s</td> <td>5.1 g/s</td> </tr> <tr> <td>Fire safety of installation to the chimney</td> <td colspan="2">T400 G minimum</td> </tr> </table>			Flue gas outlet temperature	At nominal heat output	At part load heat output	368 °C	314 °C		Minimum flue draught		7 Pa	Flue gas mass flow	7.3 g/s	5.1 g/s	Fire safety of installation to the chimney	T400 G minimum		Energy economy and heat retention <table border="1"> <tr> <td colspan="3">Appliance's thermal heat output and energy efficiency</td> </tr> <tr> <td colspan="3"> <table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>8 kW</td> <td>5 kW</td> </tr> <tr> <td>77.6 %</td> <td>78.4 %</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> <table border="1"> <tr> <td>Space heat output</td> <td>Space heating efficiency</td> </tr> <tr> <td>Efficiency</td> <td></td> </tr> <tr> <td>67.6 %</td> <td></td> </tr> <tr> <td>103</td> <td></td> </tr> <tr> <td>A</td> <td></td> </tr> </table> </td> </tr> <tr> <td colspan="3"> <table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> <td>Standby mode</td> </tr> <tr> <td>Electric power consumption</td> <td>N/A</td> <td>N/A</td> </tr> </table> </td> </tr> </table>			Appliance's thermal heat output and energy efficiency			<table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>8 kW</td> <td>5 kW</td> </tr> <tr> <td>77.6 %</td> <td>78.4 %</td> </tr> </table>			At nominal heat output	At part load heat output	8 kW	5 kW	77.6 %	78.4 %	<table border="1"> <tr> <td>Space heat output</td> <td>Space heating efficiency</td> </tr> <tr> <td>Efficiency</td> <td></td> </tr> <tr> <td>67.6 %</td> <td></td> </tr> <tr> <td>103</td> <td></td> </tr> <tr> <td>A</td> <td></td> </tr> </table>			Space heat output	Space heating efficiency	Efficiency		67.6 %		103		A		<table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> <td>Standby mode</td> </tr> <tr> <td>Electric power consumption</td> <td>N/A</td> <td>N/A</td> </tr> </table>			At nominal heat output	At part load heat output	Standby mode	Electric power consumption	N/A	N/A
<i>Mechanical resistance and stability</i>	Load bearing capacity	120 kg																																																																																																						
Safety in case of fire - Protection of combustible materials <table border="1"> <tr> <td>Bottom (d₈):</td> <td>3 cm</td> </tr> <tr> <td>Floor in front (d₉):</td> <td>40 cm</td> </tr> <tr> <td>Ceiling (d₁₀):</td> <td>50 cm</td> </tr> <tr> <td>Rear (d₁₁):</td> <td>30 cm</td> </tr> <tr> <td>Side (d₁₂):</td> <td>25 cm</td> </tr> <tr> <td>Side radiation area (d₁₃):</td> <td>50 cm</td> </tr> <tr> <td>Front (d₁₄):</td> <td>120 cm</td> </tr> </table>			Bottom (d ₈):	3 cm	Floor in front (d ₉):	40 cm	Ceiling (d ₁₀):	50 cm	Rear (d ₁₁):	30 cm	Side (d ₁₂):	25 cm	Side radiation area (d ₁₃):	50 cm	Front (d ₁₄):	120 cm																																																																																								
Bottom (d ₈):	3 cm																																																																																																							
Floor in front (d ₉):	40 cm																																																																																																							
Ceiling (d ₁₀):	50 cm																																																																																																							
Rear (d ₁₁):	30 cm																																																																																																							
Side (d ₁₂):	25 cm																																																																																																							
Side radiation area (d ₁₃):	50 cm																																																																																																							
Front (d ₁₄):	120 cm																																																																																																							
Hygiene, health and the environment <table border="1"> <tr> <td>Carbon monoxide emission (CO)</td> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>908 mg/m³</td> <td>1447 mg/m³</td> <td></td> </tr> <tr> <td>Nitrogen oxides emission (NO_x)</td> <td></td> <td>78 mg/m³</td> </tr> <tr> <td>91 mg/m³</td> <td></td> <td>88 mg/m³</td> </tr> <tr> <td>Emission of organic gaseous carbon (OGC)</td> <td></td> <td></td> </tr> <tr> <td>36 mg/m³</td> <td></td> <td>13 mg/m³</td> </tr> <tr> <td>Particulate matter emission (PM)</td> <td></td> <td></td> </tr> <tr> <td>18 mg/m³</td> <td></td> <td></td> </tr> </table>			Carbon monoxide emission (CO)	At nominal heat output	At part load heat output	908 mg/m ³	1447 mg/m ³		Nitrogen oxides emission (NO _x)		78 mg/m ³	91 mg/m ³		88 mg/m ³	Emission of organic gaseous carbon (OGC)			36 mg/m ³		13 mg/m ³	Particulate matter emission (PM)			18 mg/m ³																																																																																
Carbon monoxide emission (CO)	At nominal heat output	At part load heat output																																																																																																						
908 mg/m ³	1447 mg/m ³																																																																																																							
Nitrogen oxides emission (NO _x)		78 mg/m ³																																																																																																						
91 mg/m ³		88 mg/m ³																																																																																																						
Emission of organic gaseous carbon (OGC)																																																																																																								
36 mg/m ³		13 mg/m ³																																																																																																						
Particulate matter emission (PM)																																																																																																								
18 mg/m ³																																																																																																								
Safety and accessibility in use <table border="1"> <tr> <td>Flue gas outlet temperature</td> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>368 °C</td> <td>314 °C</td> <td></td> </tr> <tr> <td>Minimum flue draught</td> <td></td> <td>7 Pa</td> </tr> <tr> <td>Flue gas mass flow</td> <td>7.3 g/s</td> <td>5.1 g/s</td> </tr> <tr> <td>Fire safety of installation to the chimney</td> <td colspan="2">T400 G minimum</td> </tr> </table>			Flue gas outlet temperature	At nominal heat output	At part load heat output	368 °C	314 °C		Minimum flue draught		7 Pa	Flue gas mass flow	7.3 g/s	5.1 g/s	Fire safety of installation to the chimney	T400 G minimum																																																																																								
Flue gas outlet temperature	At nominal heat output	At part load heat output																																																																																																						
368 °C	314 °C																																																																																																							
Minimum flue draught		7 Pa																																																																																																						
Flue gas mass flow	7.3 g/s	5.1 g/s																																																																																																						
Fire safety of installation to the chimney	T400 G minimum																																																																																																							
Energy economy and heat retention <table border="1"> <tr> <td colspan="3">Appliance's thermal heat output and energy efficiency</td> </tr> <tr> <td colspan="3"> <table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>8 kW</td> <td>5 kW</td> </tr> <tr> <td>77.6 %</td> <td>78.4 %</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> <table border="1"> <tr> <td>Space heat output</td> <td>Space heating efficiency</td> </tr> <tr> <td>Efficiency</td> <td></td> </tr> <tr> <td>67.6 %</td> <td></td> </tr> <tr> <td>103</td> <td></td> </tr> <tr> <td>A</td> <td></td> </tr> </table> </td> </tr> <tr> <td colspan="3"> <table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> <td>Standby mode</td> </tr> <tr> <td>Electric power consumption</td> <td>N/A</td> <td>N/A</td> </tr> </table> </td> </tr> </table>			Appliance's thermal heat output and energy efficiency			<table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>8 kW</td> <td>5 kW</td> </tr> <tr> <td>77.6 %</td> <td>78.4 %</td> </tr> </table>			At nominal heat output	At part load heat output	8 kW	5 kW	77.6 %	78.4 %	<table border="1"> <tr> <td>Space heat output</td> <td>Space heating efficiency</td> </tr> <tr> <td>Efficiency</td> <td></td> </tr> <tr> <td>67.6 %</td> <td></td> </tr> <tr> <td>103</td> <td></td> </tr> <tr> <td>A</td> <td></td> </tr> </table>			Space heat output	Space heating efficiency	Efficiency		67.6 %		103		A		<table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> <td>Standby mode</td> </tr> <tr> <td>Electric power consumption</td> <td>N/A</td> <td>N/A</td> </tr> </table>			At nominal heat output	At part load heat output	Standby mode	Electric power consumption	N/A	N/A																																																																				
Appliance's thermal heat output and energy efficiency																																																																																																								
<table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> </tr> <tr> <td>8 kW</td> <td>5 kW</td> </tr> <tr> <td>77.6 %</td> <td>78.4 %</td> </tr> </table>			At nominal heat output	At part load heat output	8 kW	5 kW	77.6 %	78.4 %																																																																																																
At nominal heat output	At part load heat output																																																																																																							
8 kW	5 kW																																																																																																							
77.6 %	78.4 %																																																																																																							
<table border="1"> <tr> <td>Space heat output</td> <td>Space heating efficiency</td> </tr> <tr> <td>Efficiency</td> <td></td> </tr> <tr> <td>67.6 %</td> <td></td> </tr> <tr> <td>103</td> <td></td> </tr> <tr> <td>A</td> <td></td> </tr> </table>			Space heat output	Space heating efficiency	Efficiency		67.6 %		103		A																																																																																													
Space heat output	Space heating efficiency																																																																																																							
Efficiency																																																																																																								
67.6 %																																																																																																								
103																																																																																																								
A																																																																																																								
<table border="1"> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> <td>Standby mode</td> </tr> <tr> <td>Electric power consumption</td> <td>N/A</td> <td>N/A</td> </tr> </table>			At nominal heat output	At part load heat output	Standby mode	Electric power consumption	N/A	N/A																																																																																																
At nominal heat output	At part load heat output	Standby mode																																																																																																						
Electric power consumption	N/A	N/A																																																																																																						

Sustainable use of natural resources					------------------------------	--	--		Environmental sustainability				NPD					
The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.																		
Signed for and on behalf of the manufacturer by: Danny Baijens, CEO Bladel, The Netherlands 25 August 2025																		

1.2

BOX 35-52-65 with wall support frame

barbas bellfires . Crafted to wonder																																
EU-declaration of conformity																																
<p>This EC declaration of conformity applies to the product described below and describes the conformity with the following directives: 2009/125/EC Directive for the setting of eco-design requirements for energy-related products (eco-design directive) Relevant Regulation: (EU) 2015/1185</p>																																
Declaration of Performance No. 2.109.084-0 - CPR-2013/07/01																																
Unique identification code of the product type:	BOX 35-52-65 with support frame																															
Intended use:	Space heating in residential buildings																															
Manufacturer:	Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands																															
System of AVCP:	3																															
Harmonised technical specifications:	EN 16510-2-1:2022																															
Notified body:	No. 1639																															
Essential characteristics																																
<table border="1"> <thead> <tr> <th colspan="2"><i>Mechanical resistance and stability</i></th> </tr> </thead> <tbody> <tr> <td>Load bearing capacity</td> <td>120 kg</td> </tr> </tbody> </table>			<i>Mechanical resistance and stability</i>		Load bearing capacity	120 kg																										
<i>Mechanical resistance and stability</i>																																
Load bearing capacity	120 kg																															
<table border="1"> <thead> <tr> <th colspan="2"><i>Safety in case of fire - Protection of combustible materials</i></th> <th><i>Minimum distance to combustible materials</i></th> </tr> </thead> <tbody> <tr> <td>Bottom (d₈):</td> <td colspan="2">3 cm</td> </tr> <tr> <td>Floor in front (d₄):</td> <td colspan="2">200-400</td> </tr> <tr> <td>Ceiling (d₅):</td> <td colspan="2">50 cm</td> </tr> <tr> <td>Rear (d₆):</td> <td colspan="2">non flammable wall</td> </tr> <tr> <td>Side (d₇):</td> <td colspan="2">25 cm</td> </tr> <tr> <td>Side radiation area (d₁):</td> <td colspan="2">50 cm</td> </tr> <tr> <td>Front (d₉):</td> <td colspan="2">120 cm</td> </tr> </tbody> </table>			<i>Safety in case of fire - Protection of combustible materials</i>		<i>Minimum distance to combustible materials</i>	Bottom (d ₈):	3 cm		Floor in front (d ₄):	200-400		Ceiling (d ₅):	50 cm		Rear (d ₆):	non flammable wall		Side (d ₇):	25 cm		Side radiation area (d ₁):	50 cm		Front (d ₉):	120 cm							
<i>Safety in case of fire - Protection of combustible materials</i>		<i>Minimum distance to combustible materials</i>																														
Bottom (d ₈):	3 cm																															
Floor in front (d ₄):	200-400																															
Ceiling (d ₅):	50 cm																															
Rear (d ₆):	non flammable wall																															
Side (d ₇):	25 cm																															
Side radiation area (d ₁):	50 cm																															
Front (d ₉):	120 cm																															
<table border="1"> <thead> <tr> <th colspan="2"><i>Hygiene, health and the environment</i></th> <th><i>At nominal heat output</i></th> <th><i>At part load heat output</i></th> </tr> </thead> <tbody> <tr> <td>Carbon monoxide emission (CO)</td> <td colspan="2">608 mg/m³</td> <td>1447 mg/m³</td> </tr> <tr> <td>Nitrogen oxides emission (NO_x)</td> <td colspan="2">91 mg/m³</td> <td>78 mg/m³</td> </tr> <tr> <td>Emission of organic gaseous carbon (OGC)</td> <td colspan="2">36 mg/m³</td> <td>88 mg/m³</td> </tr> <tr> <td>Particulate matter emission (PM)</td> <td colspan="2">18 mg/m³</td> <td>13 mg/m³</td> </tr> </tbody> </table>			<i>Hygiene, health and the environment</i>		<i>At nominal heat output</i>	<i>At part load heat output</i>	Carbon monoxide emission (CO)	608 mg/m ³		1447 mg/m ³	Nitrogen oxides emission (NO _x)	91 mg/m ³		78 mg/m ³	Emission of organic gaseous carbon (OGC)	36 mg/m ³		88 mg/m ³	Particulate matter emission (PM)	18 mg/m ³		13 mg/m ³										
<i>Hygiene, health and the environment</i>		<i>At nominal heat output</i>	<i>At part load heat output</i>																													
Carbon monoxide emission (CO)	608 mg/m ³		1447 mg/m ³																													
Nitrogen oxides emission (NO _x)	91 mg/m ³		78 mg/m ³																													
Emission of organic gaseous carbon (OGC)	36 mg/m ³		88 mg/m ³																													
Particulate matter emission (PM)	18 mg/m ³		13 mg/m ³																													
<table border="1"> <thead> <tr> <th colspan="3"><i>Safety and accessibility in use</i></th> </tr> <tr> <th colspan="2"><i>At nominal heat output</i></th> <th><i>At part load heat output</i></th> </tr> </thead> <tbody> <tr> <td>Flue gas outlet temperature</td> <td colspan="2">368 °C</td> </tr> <tr> <td>Minimum flue draught</td> <td colspan="2">12 Pa</td> </tr> <tr> <td>Flue gas mass flow</td> <td colspan="2">7.3 g/s</td> </tr> <tr> <td>Fire safety of installation to the chimney</td> <td colspan="2">T400 G minimum</td> </tr> </tbody> </table>			<i>Safety and accessibility in use</i>			<i>At nominal heat output</i>		<i>At part load heat output</i>	Flue gas outlet temperature	368 °C		Minimum flue draught	12 Pa		Flue gas mass flow	7.3 g/s		Fire safety of installation to the chimney	T400 G minimum													
<i>Safety and accessibility in use</i>																																
<i>At nominal heat output</i>		<i>At part load heat output</i>																														
Flue gas outlet temperature	368 °C																															
Minimum flue draught	12 Pa																															
Flue gas mass flow	7.3 g/s																															
Fire safety of installation to the chimney	T400 G minimum																															
<table border="1"> <thead> <tr> <th colspan="3"><i>Energy economy and heat retention</i></th> </tr> <tr> <th colspan="2"><i>Appliance's thermal heat output and energy efficiency</i></th> <th><i>At part load heat output</i></th> </tr> </thead> <tbody> <tr> <td>Space heat output</td> <td colspan="2">8 kW</td> </tr> <tr> <td>Efficiency</td> <td colspan="2">77.6 %</td> </tr> <tr> <td>Seasonal space heating efficiency</td> <td colspan="2">67.6 %</td> </tr> <tr> <td>Energy efficiency index (EEI)</td> <td colspan="2">103</td> </tr> <tr> <td>Energy efficiency class</td> <td colspan="2">A</td> </tr> <tr> <td><i>Space heating efficiency</i></td> <td colspan="2"></td> </tr> <tr> <td><i>At nominal heat output</i></td> <td><i>At part load heat output</i></td> <td><i>Standby mode</i></td> </tr> <tr> <td>Electric power consumption</td> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table>			<i>Energy economy and heat retention</i>			<i>Appliance's thermal heat output and energy efficiency</i>		<i>At part load heat output</i>	Space heat output	8 kW		Efficiency	77.6 %		Seasonal space heating efficiency	67.6 %		Energy efficiency index (EEI)	103		Energy efficiency class	A		<i>Space heating efficiency</i>			<i>At nominal heat output</i>	<i>At part load heat output</i>	<i>Standby mode</i>	Electric power consumption	N/A	N/A
<i>Energy economy and heat retention</i>																																
<i>Appliance's thermal heat output and energy efficiency</i>		<i>At part load heat output</i>																														
Space heat output	8 kW																															
Efficiency	77.6 %																															
Seasonal space heating efficiency	67.6 %																															
Energy efficiency index (EEI)	103																															
Energy efficiency class	A																															
<i>Space heating efficiency</i>																																
<i>At nominal heat output</i>	<i>At part load heat output</i>	<i>Standby mode</i>																														
Electric power consumption	N/A	N/A																														
<table border="1"> <thead> <tr> <th colspan="3"><i>Sustainable use of natural resources</i></th> </tr> <tr> <th colspan="3"><i>Environmental sustainability</i></th> </tr> </thead> <tbody> <tr> <td colspan="3">NPD</td> </tr> </tbody> </table>			<i>Sustainable use of natural resources</i>			<i>Environmental sustainability</i>			NPD																							
<i>Sustainable use of natural resources</i>																																
<i>Environmental sustainability</i>																																
NPD																																
<p>The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.</p> <p>Signed for and on behalf of the manufacturer by:</p> <p>Danny Baijens, CEO</p>  <p>Bladel, The Netherlands 25 August 2025</p>																																

2 About this document

This document shows the necessary information to do these tasks on the BOX 35-52-65:

- Operate the appliance
- Do basic maintenance

This document refers to the BOX 35-52-65 as 'the appliance'. This document is an essential part of your appliance. Read it carefully before you do work on the appliance. Keep it in a safe place.

The original instructions of the document are in English. All other language versions of the document are translations of the original instructions. It is not always possible to provide a detailed illustration of every single item of the equipment. The illustrations in this document show a typical setup. The illustrations are for instructional use only.

2.1 How to work with this document

1. Make yourself familiar with the structure and content of the document.
2. Read the safety section in detail.
3. Make sure that you understand all the instructions.
4. Do the procedures completely and in the given sequence.

2.2 Warnings and cautions used in this document

Warning

If you do not obey these instructions, there is a risk that can cause personal injury or death.

Caution

If you do not obey these instructions, there is a risk of damage to the appliance, installation or to property.

Note

A note shows more information.


Symbol	Description
	Visual sign that there is a hazard
	Visual sign that there is a notice

2.3 Related documentation

- Installation and maintenance manual
- User manual

3 Description

3.1 Overview of the front of the appliance

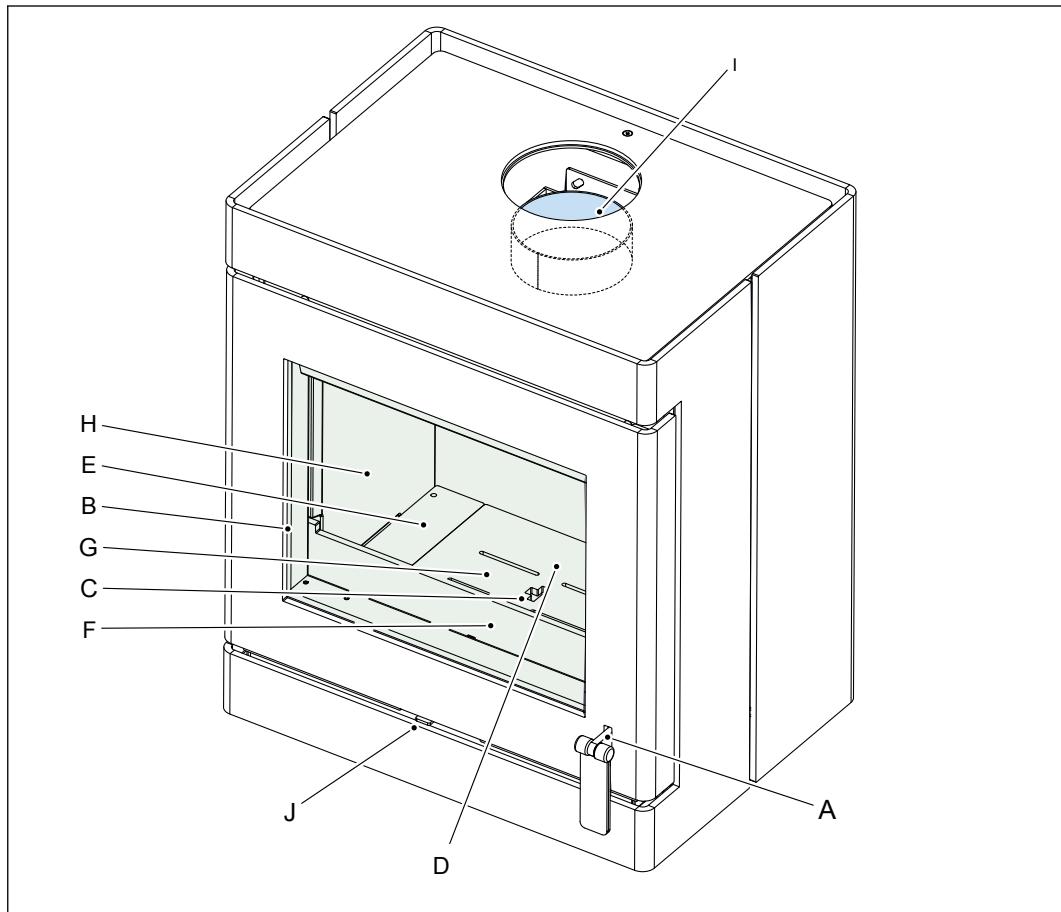

A	Door handle	F	Log guard Ash tray (under the grate)
B	Glass	G	Grate
C	Primary air inlet	H	Combustion chamber panels
D	Grate	I	Flue connection
E	Bottom plates	J	Control lever

3.2

Intended use

The appliance is intended for indoor use to heat the room wherein it is installed. Do not use it for other purposes.

It is not allowed to use the appliance as primary heating appliance.

The appliance is intended for use with wood logs or wood briquettes as fuel. Do not use other fuels and waste.

The appliance is intended for use with the door closed.

The appliance may only be used at the location that meets the requirements for the installation of the appliance.

The appliance is intended for intermittent use and is not intended for continuous use.

It is not allowed to connect the appliance on a shared flue gas channel.

The appliance is intended to heat the room by direct heating. It is not allowed to connect the appliance to a central-heating installation.

4 Safety

4.1 Safety instructions for operation

Warning:



- Do not put objects on the top of the appliance.
- Do not let the appliance unattended when the fuel burns.
- Do not put flammable items within 120 cm from the front of the appliance.
- Do not put flammable items within 25 cm from the side of the appliance.
- If applicable, make sure the distance between the top of the wood log storage module and the wood logs in the storage module is minimum 10 cm. Make sure the wood logs in the storage do not touch the top of the wood log storage module.
- Do not use mineral fuel (example: coal, anthracite)
- Do not use liquid fuels.
- Do not use gasoline-type lantern fuel, kerosene, gasoline, kerosene, charcoal lighter fluid, alcohol, or similar liquids to start or re-ignite a fire in the appliance. Make sure to keep these liquids away from the appliance.
- Do not use the appliance with the door open. Smoke can escape from the appliance. Only open the appliance door for a short time to reload with fuel or to remove the ash.
- Make sure that children are supervised when they can reach the appliance.
- Make sure that there is sufficient ventilation in the room in which the appliance is installed.
- Do not use the appliance in case of visual glass damage.
- Do not use the appliance in case of damage of the door gaskets
- Make sure that the appliance is installed correctly. Refer to the Installation and Maintenance manual. You can find the manuals on www.barbasbellfires.com.
- The simultaneous use of an extractor fan (e.g. a cooker hood), can cause smoke escape from the appliance, when the appliance door is open.
- Wear the glove and use the operating hook or a poker when refilling the appliance
- Make sure that your clothing does not touch the appliance. Especially synthetic clothing ignites easily and burns intensely.
- Do not use the appliance when there is fog, haze or no wind.
- Do not make modifications to the appliance. Any modification will also make your warranty invalid.

Caution:



- Make sure to clean your chimney minimum every year to prevent a chimney fire.
- Do not use freshly cut wood.
- Do not use more wood per load than prescribed. Refer to section [5.2](#) for the recommended fuel amount.
- Do not burn waste in the appliance.
- Do not prepare food in the appliance. This causes damage to your appliance and chimney.



Note:

- Do inspect and clean the appliance, the chimney and the external combustion air supply by a Barbas dealer minimum every year.
- Do not use the appliance continuously. The intended use is as intermittent appliance.

4.2

Safety instructions with regard to the environment

- Dispose of the packing materials in an environmentally friendly way.
- Dispose of ceramic heat-resistant glass as household waste. Do not dispose of ceramic heat-resistant glass in a glass recycling container.
- Dispose of an obsolete appliance according to instructions of the authorities or the fitter.
- Obey the local regulations.

5 Fuel

5.1 Fuel types

Warning:



Do not use coal, anthracite, coal briquettes, liquid fuel or gel fuel. The appliance is not designed for these fuels. Use of these fuels is dangerous and can lead to bodily harm and to serious damage to the appliance.

Suitable fuels are:

- Hard wood (example: birch, beech, oak, ash).
- Soft wood (example: spruce, pine, poplar).
- Wood briquettes without binder.

Before use, wood must dry for minimum 2 years when freshly chopped. Kiln-dried wood must dry for an extra half year. Dried wood logs must have a moisture content of 10 - 20 %.

Unsuitable fuels are:

- Painted wood.
- Impregnated wood.
- MDF, chipboard.
- Any kind of combustible waste.
- Paraffin impregnated compressed wood logs
- Freshly chopped wood
- Coal, anthracite and other bituminous fuels
- Lignite , peat

Using unsuitable fuels cause excess smoke, black glass, combustible deposits in the chimney and can damage the appliance.

5.2 Fuel amount

Load the appliance with the amount of fuel as listed hereunder. Put the load as one layer on the floor of the combustion chamber. For the amount of fuel for the first load see chapter [6.3.1](#).

Caution:



The amount of fuel specified for the nominal heat output should not be exceeded, overloading can cause excess smoke.

Fuel load for nominal heat output

	Wood logs	Wood briquettes
Amount	2 pieces	2 pieces
Weight	Approximately 1.0 kg per piece	Approximately 0.9 kg per piece
Length	Approximately 25 cm	Approximately 25 cm

Fuel load for minimum heat output

	Wood logs	Wood briquettes
Amount	1 piece	1 piece
Weight	Approximately 1.1 kg per piece	Approximately 1.0 kg per piece
Length	Approximately 25 cm	Approximately 25 cm

The above listed amount burns for approximately 45 minutes. This time can be different, dependent on the chimney draught and the position of the combustion air valve.

6 Operation

6.1 Preparation before first use

Report any defects to your dealer immediately.

Procedure

1. Make sure that the appliance is not damaged.
2. Make sure that the ceramic plate and the baffles are in the correct position.
3. Make sure that the glass is not damaged.
4. Make sure that the door opens and closes completely, by moving the door handle
5. Remove document and components from the combustion chamber.
6. Make sure that the control lever moves easy.
7. Make sure that the ash tray is empty.
8. Make sure that all package material, stickers, etc, have been removed from the vicinity of the appliance after installation.

6.2 First use of the appliance

Caution:



Make sure there is sufficient ventilation in the room in which the appliance is installed.

Note:



The appliance has a heat-resistant coating. When you use the appliance for the first time, the coating can cause an unpleasant, but harmless smell.

After first few times of use of the appliance, a light deposit on the inside of the glass may occur caused by curing of the paint. This can be removed with glass cleaner or ceramic hob cleaner.

6.3 Firing the appliance

6.3.1 First load and ignition

At the beginning the appliance and chimney are cold. It is important that both the appliance and chimney reach a temperature that guarantees a good functioning of the appliance. A too low temperature results in incomplete combustion and a poor chimney draught. To avoid this do the following:


Warning:




Do not use the appliance when there is fog or haze or no wind.

1. Put the control lever in the far right position.
2. If applicable, open the valve in the external combustion air supply line.
3. If applicable, open the chimney valve completely.
4. Open the door of the appliance.


5. Put minimum 4 wood logs crosswise on the floor of the combustion chamber.

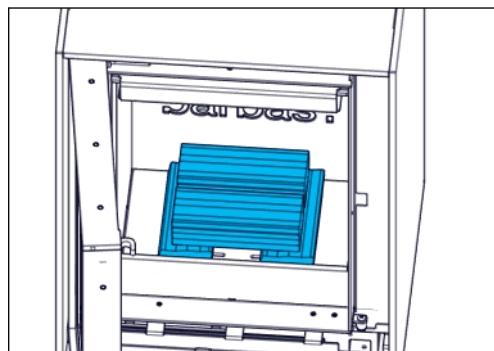

6. Put some kindling wood and 1 or 2 firestarter cubes on top of the wood logs.

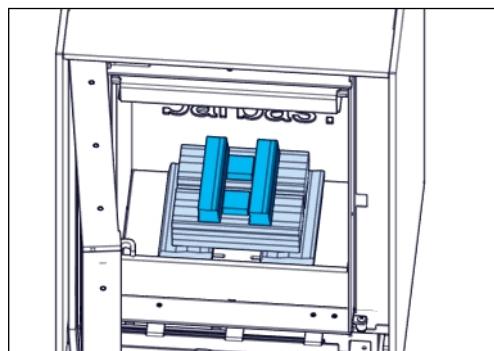

7. Put some kindling wood above the firestarter cubes.

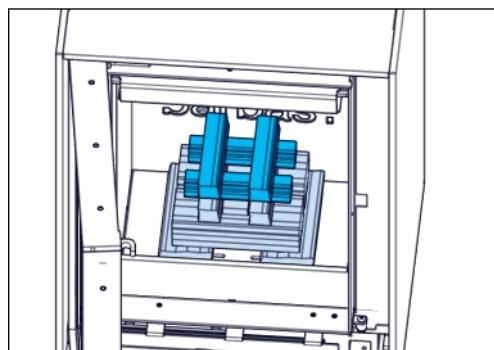

8. Light the firestarter cubes with a lighter or a match.

9. Close the door of the appliance.

After approximately 20 minutes the wood logs burn. Dependent on the quality of the chimney the wood logs burn for approximately 1 to 1.5 hours. Do not open the door of the appliance before the last flames have almost disappeared.

6.3.2

Reload for nominal heat output


Caution:

If there is insufficient burning material in the firebed to light a new fuel charge, excessive smoke emission can occur. Refueling must be done onto a sufficient quantity of glowing embers and ash to make sure that the new fuel charge will ignite in a reasonable period. If there are too few embers in the fire bed, add suitable kindling to prevent excessive smoke.

Note:

The procedure hereunder is a general description to fire with nominal heat output. The best reloading moment is dependent on the flue draught. A high flue draught requires reloading when the flames have completely disappeared. If the flue draught is low, reloading must be done when there are still flames.

1. Wait until the last flames have almost disappeared.
2. Set the control lever in the far right position.
3. Open the door.
4. Reload the appliance with 2 wood logs or 2 wood briquettes. Refer to section [5.2](#) for the weight and length of the wood logs.

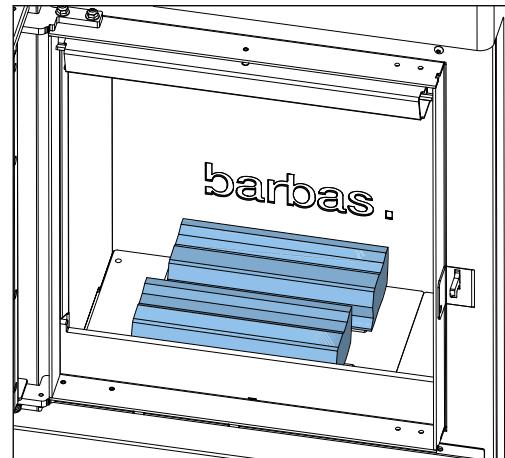

5. Close the door.
6. After ignition of the fuel, move the control lever to a position that gives a quiet burning fire.

6.3.3

Reload for minimum heat output


Caution:

If there is insufficient burning material in the firebed to light a new fuel charge, excessive smoke emission can occur. Refueling must be done onto a sufficient quantity of glowing embers and ash to make sure that the new fuel charge will ignite in a reasonable period. If there are too few embers in the fire bed, add suitable kindling to prevent excessive smoke.

Note:

The procedure hereunder is a general description to fire with minimum heat output. The best reloading moment is dependent on the flue draught. A high flue draught requires reloading when the flames have completely disappeared. If the flue draught is low, reloading must be done when there are still flames.

1. Wait until the last flames have almost disappeared.
2. Set the control lever in the far right position.
3. Open the door.
4. Reload the appliance with 1 wood log or 1 wood briquette. Refer to section [5.2](#) for the weight and the length of the wood log.

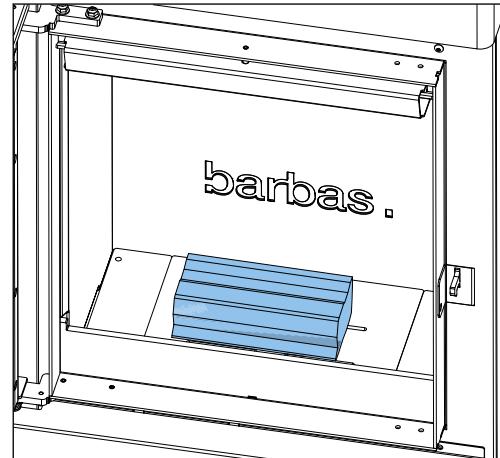

5. Close the door.
6. After ignition of the fuel, move the control lever to a position that gives a quiet burning fire.

6.3.4

Control the burn process

Control the burn process with the control lever. This lever controls the amount of primary combustion air and both the secondary combustion air and airwash amount.

Warning:




Setting the control lever in the far left position (all air inlets closed) when the fuel is burning leads to excessive emission of hazardous gasses (example: carbon monoxide) and soot deposit on the glass of the door and in the chimney. Never close the air inlets when the fuel is burning. Always keep the secondary air inlet and air wash inlet open by setting the control lever somewhere in-between the center position and the far left position.

Caution:



Continuous firing with the primary air inlet fully open (control lever in the far right position) causes a white-hot fire that can damage the appliance. Use the primary air only during the first fuel load and for ignition of a new fuel load.

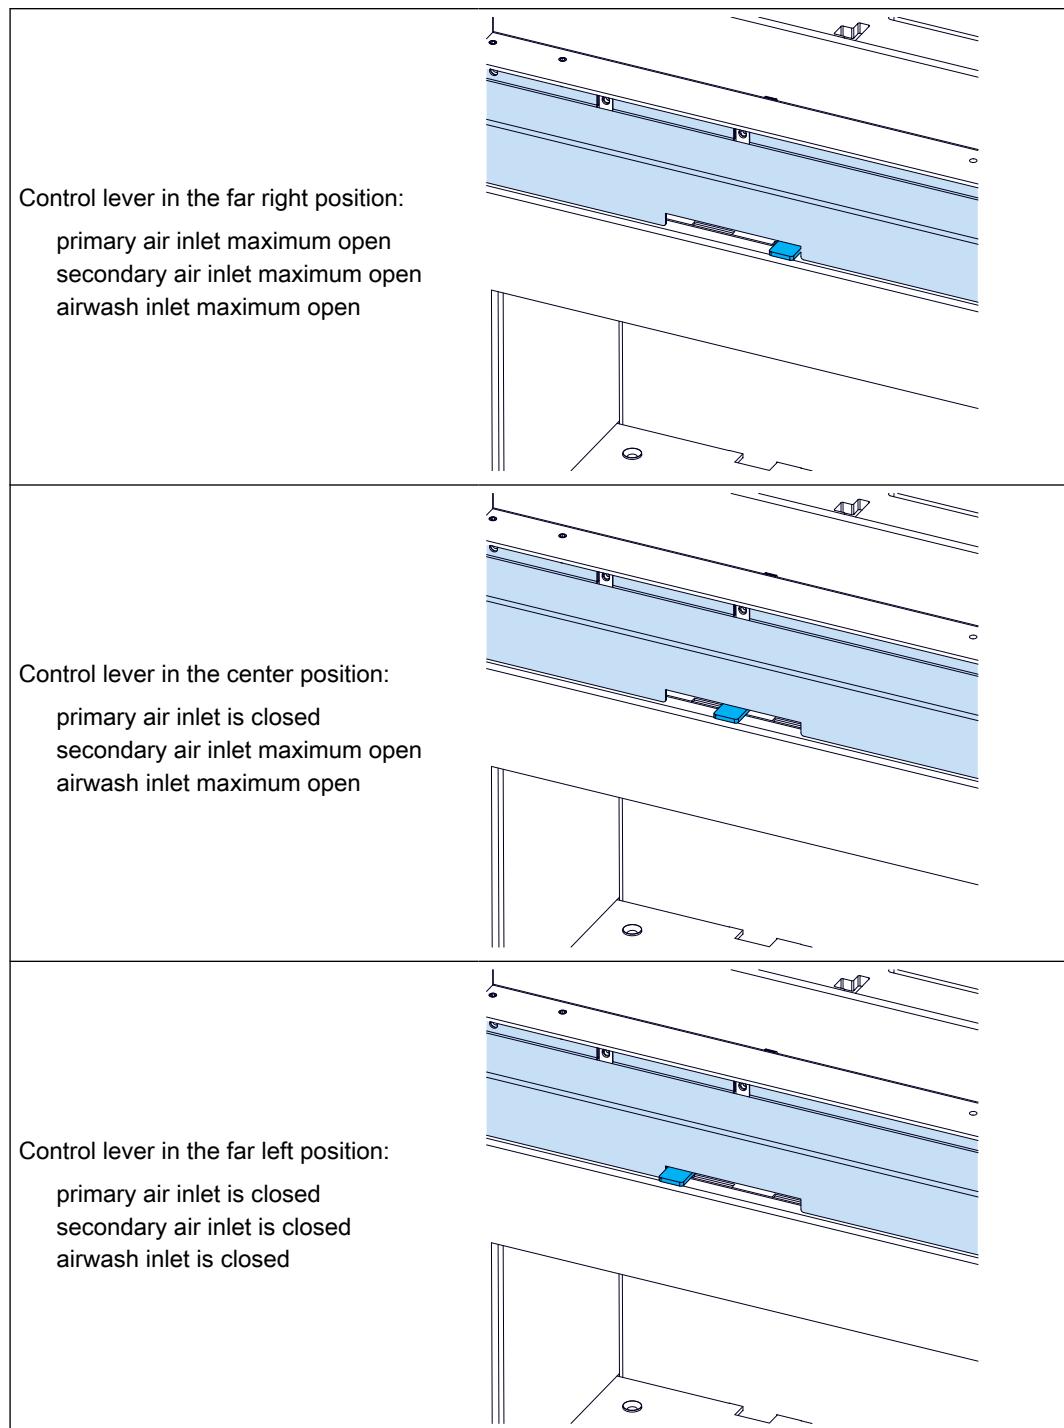

6.3.5


Increase the flue draught

Warning: Do the procedure hereunder when you have made sure the appliance has cooled down and there are no glowing embers.




A low flue draught is caused by too much flow resistance. This causes insufficient flow of the flue gas in the chimney. Do the next steps to decrease the flow resistance


1. Open the door.
2. Loosen the nut above the heat shield with a 3 mm hexagonal key and a 10 mm fork spanner. Turn the nut down with the fork spanner and turn the screw up with the hexagonal key until the screw is loose from the heat shield.

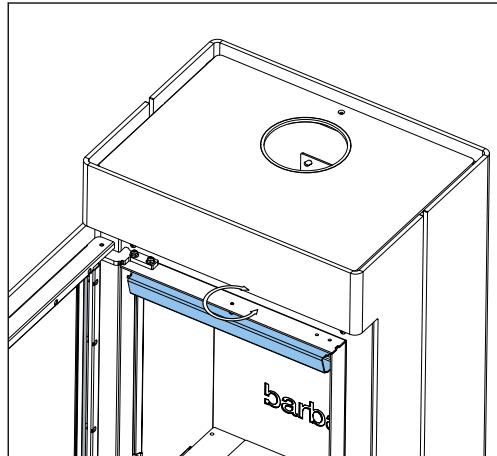


3. Push up the front of the heat shield (1) and pull it forward (2) and move downward to a vertical position (3).
4. Remove the heat shield from the appliance.

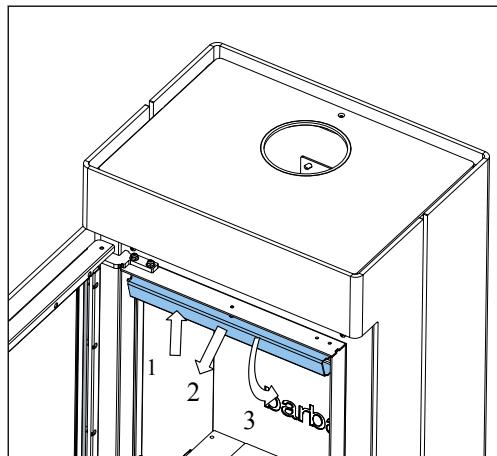


5. Remove the break strip from the baffle with a pair of pliers.

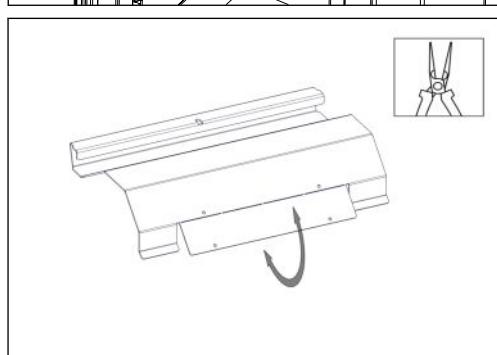

6. Move the heat shield up and put the rear side above the baffle (1).
7. Move the front of the heat shield up (2) and put the edge on the metal strip under the air wash inlet (3).

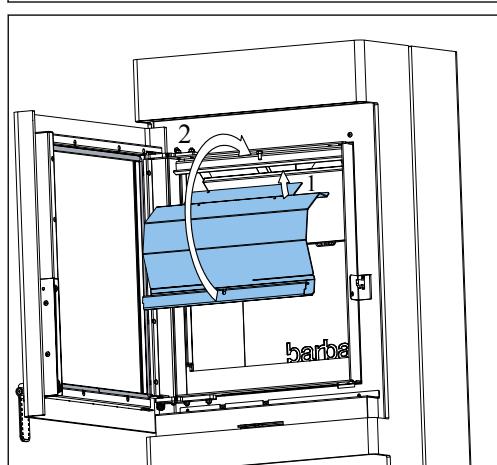

8. Turn the screw down with a 3 mm hexagonal key until it is in the screw hole in the heat shield.
9. Turn the nut up with a 10 mm fork spanner and tighten it.

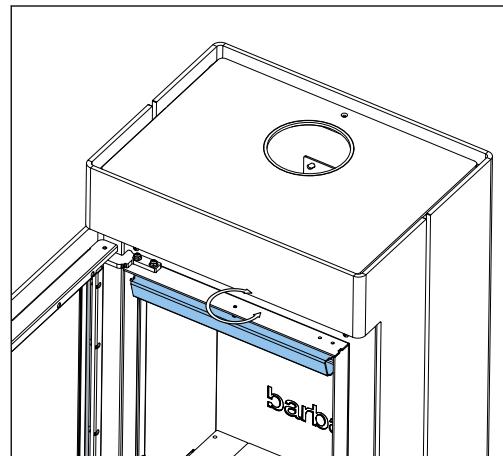

6.3.6 General firing tips

- The appliance works best when it has been heated up as described in section [6.3.1](#). Insufficient heating up leads to a low chimney draught, black deposits on the glass and incomplete combustion. Good combustion is recognized by bright orange flames, invisible smoke and no soot deposits on the glass. Use the control lever to get good combustion. Refer to section [6.3.4](#) for advice on the required fuel quality.
- Make sure the door of the appliance is closed when in use. Only open the door for ignition and to refuel.
- Do not remove all the ashes. An ash layer in the combustion chamber forms a heat insulating layer, that helps the fuel to ignite easy.
- Do not set the control lever in the far left position (all combustion air inlets closed) when the appliance is used. This will cause severe smoke development, soot formation and increases the chance of a chimney fire.
- After the first load, do not overload the appliance with fuel. Refer to section [5.2](#) for the recommended amount of fuel. Too much fuel leads to incomplete combustion, soot formation and a chance of a chimney fire.
- When the appliance is not in use and completely cooled down, put the control lever in the far left position to close the combustion air supply.

7 Maintenance

7.1 Maintenance schedule

Caution:



Clean the glass when it is dirty. If the glass is not cleaned when it is dirty the glass can become permanently dull.

Task	Frequency	Procedure
Remove the ashes	When necessary	Refer to section 7.2
Clean the glass	When necessary	Refer to section 7.3
Maintenance by your fitter	Yearly	Refer to your dealer
Chimney sweep	Yearly (or more often when necessary)	Refer to the Installation and maintenance manual
Appliance inspection	Yearly	Refer to the Installation and maintenance manual

7.2 Remove the ashes

1. Make sure that the appliance has cooled down and there are no glowing embers.
2. Remove the ashes with a small scoop.
3. Lift the grate with the operating hook and remove the grate.
4. Remove the ashtray and empty it.
5. Make sure there are no ashes in the space under the ash tray. Remove these ashes when necessary.
6. Put the ash tray back in the appliance.
7. Put the grate back in the appliance.

7.3 Clean the glass

1. Make sure the appliance has cooled down and there are no glowing embers in the combustion chamber.
2. To avoid any up swirl of ashes during cleaning, remove the ashes from the appliance.
3. Clean the glass with a soft cloth, a sponge or paper. Use glass cleaner or ceramic hob cleaner.
4. Make sure that the glass is dry. Water droplets can leave a mark on the glass.



Note:

Damaged or broken glass must be replaced before the appliance can be used again.

8 Troubleshooting

Problem	Possible cause	Possible solution
Chimney fire (recognized by a roaring sound in the chimney)	Ignition of soot and tar deposits in the chimney.	<ul style="list-style-type: none"> Set the control lever in the far left position. Call the emergency services. (112) Put out the fire in the appliance with sand. <p>Warning:</p>  <p>Never use water to put out the fire.</p>
The wood logs do not ignite	The moisture content of the wood logs is too high	<ul style="list-style-type: none"> Use dried wood logs with a moisture content of 10 - 20 %. Use wood briquettes
	The combustion chamber is not warm enough	<ul style="list-style-type: none"> Do the recommended ignition procedure. Refer to section 6.3.1. Use the recommended amount of fuel. Refer to section 5.2.
The wood logs burn too fast	Primary air inlet is open.	<p>Close the primary air supply. Adjust the amount of secondary air and air wash with the control lever. Refer to section 6.3.4.</p>
	The chimney draught is too high	<ul style="list-style-type: none"> Reduce the amount of secondary air and airwash with the control lever. Refer to section 6.3.4 Contact your installer.
The temperature of the room does not rise sufficient	The fuel amount is too low	Use the recommended amount of fuel. Refer to section 5.2 .
	The chimney draught is too high	Contact your installer.
Excessive smoke escapes when the door of the combustion chamber is open	The chimney draught is too low	<ul style="list-style-type: none"> Do the recommended ignition procedure. Refer to section 6.3.1. Contact your installer.

Problem	Possible cause	Possible solution
The glass becomes black	The combustion chamber is not hot enough	<ul style="list-style-type: none">• Use the recommended amount of fuel. Refer to section 5.2.• Increase the amount of combustion air with the control lever. Refer to section 6.3.4.• Put the wood logs diagonally and as wide as possible on the combustion chamber floor.
	The moisture content of the wood logs is too high	<ul style="list-style-type: none">• Use dried wood logs with a moisture content of 10 - 20 %.• Use wood briquettes
	The seal around the door is damaged	Contact your dealer.
Some cold air flows out from the front of the appliance when the appliance is not in use.	The valve in the external combustion air supply line is missing or is open.	Close the valve in the external combustion air supply line.
	The underpressure in the installation room is too high	Reduce the underpressure, for example by opening a ventilation opening in the installation room.

9**Information on disposal of the appliance**

- Dispose of an obsolete appliance according to instructions of the authorities or the installer.
- The information in this section is informative. Always obey the national and local regulations on recycling and disposal of the appliance or parts of the appliance.
- Before disassembly and disposal of the appliance, remove ashes and unburnt fuel from the appliance. Dispose ashes as rest waste. Do not dispose ashes as organic waste.

Appliance component	Material	Disassembly	Recycling / Disposal
Combustion chamber (walls)	Cast iron	Refer to the Installation Manual	Dispose as metal waste
Combustion chamber (walls and baffle)	Vermiculite	Refer to the Installation Manual	Vermiculite in contact with combustion gases cannot be re-used or recycled. Dispose as rest waste.
Combustion chamber (walls and baffle)	Heat resistant ceramic	Refer to the Installation Manual	Ceramic in contact with combustion gases cannot be re-used or recycled. Dispose as rest waste.
Combustion chamber (grate and bottom)	Steel	Refer to the Installation Manual	Dispose as metal waste
Combustion chamber (Heat shield)	Steel	Refer to the Installation Manual	Dispose as metal waste
Glass	Ceramic glass	Remove glass holder with suitable tools. Remove gaskets and cord from the glass	Dispose as rest waste or ceramic waste. Do not dispose as glass waste.
Appliance body	Steel	Make sure to remove all components other than metal	Dispose as metal waste
Ash tray	Steel	Remove from appliance	Dispose as metal waste
Gaskets	Glass fibre cord or plates	Remove from appliance and components	Dispose as glass fibre (non-flammable waste)
Stone base	Natural stone	Remove from appliance	Dispose as building construction waste (stone)

10 Technical data

10.1 Technical data

Name	Barbas	
Model	• BOX 35-52-65 • BOX 35-52-65 with support frame	
EPREL registration number	2075862	
Tested in accordance with	EN16510-2-1	
Energy efficiency index	103	
Energy efficiency class	A	
Fuel	Wood logs, Wood briquettes	
Indirect heating function	No	
Room sealed	No	
Leak rate at 10 Pa	not applicable	
Seasonal efficiency	67.6 %	
	At nominal heat output	At part load heat output
Fuel load	2.0 kg	1.1 kg
Heat output (net)	8.0 kW	5.0 kW
Useful efficiency	77.6 %	78.4 %
Emissions (at 13 % O₂, 273 K, 1013 hPa)		
• carbon monoxide (CO)	608 mg/Nm ³	1447 mg/Nm ³
• particles (PM)	18 mg/Nm ³	13 mg/Nm ³
• organic gaseous compounds (OGC)	36 mg/Nm ³	88 mg/Nm ³
• nitrogen oxides (NO _x)	91 mg/Nm ³	78 mg/Nm ³
Flue gas mass flow	7.3 g/s	5.1 g/s
Flue gas outlet temperature	368 °C	314 °C
Flue gas temperature	307 °C	262 °C
Minimum chimney draught	12 Pa	7 Pa
Minimum temperature class of the chimney	T 400	
Flue gas connection	Outer diameter 128 mm, suitable for a pipe with an inner diameter of 130 mm	
External combustion air connection	80 mm	
• BOX 35-52-65 • BOX 35-52-65 with support frame	• 141 kg • 162 kg	
Minimum distance to flammable materials	Refer to the installation and maintenance manual	
Used materials		

• Combustion chamber side and back panels	Vermiculite 750 kg/m ³
• Combustion floor and grate	Steel
• Lower baffle	Vermiculite 750 kg/m ³
• Heat shield	Steel
• Front glass	Heat resistant ceramic glass
The specific precautions that shall be taken when the local space heater is assembled, installed or maintained, are listed in the attached documents:	<ul style="list-style-type: none"> • Installation and maintenance manual • User manual
Maximum capacity to carry a chimney	120 kg *)

Additional information in order to achieve relevant test results for market surveillance

Mass of basic fire bed	120 g
Criterion for the end of the test cycle	5 vol% CO ₂

*) if the weight of the chimney or part of the chimney, being carried by the appliance, is more than indicated, the chimney must be supported with a wall bracket.

10.2

Product information according regulation (EU) 2015/1185

Model identifier	BOX 35-52-100															
Equivalent models	BOX 35-52-80; BOX 35-52-65; BOX 40-52-80; BOX 40-52-65															
Indirect heating function	No															
Direct heat output	8 kW															
Indirect heat output	- kW															
Fuel	Preferred fuel (only one)	Other suitable fuel(s)	Emissions at nominal heat output (*) [mg/Nm ³ (13 % O ₂)]				Emissions at minimum heat output (**) [mg/Nm ³ (13 % O ₂)]									
			PM	OGC	CO	NO _x	PM	OGC	CO	NO _x						
Wood logs, moisture content < 25 %	yes	no	≤ 40	≤ 120	≤ 1500	≤ 200	N.A.	N.A.	N.A.							
Compressed wood, moisture content < 12 %	no	no														
Other woody biomass	no	no														
Non-woody biomass	no	no														
Anthracite and dry steam coal	no	no														
Hard coke	no	no														
Low temperature coke	no	no														
Bituminous coal	no	no														
Lignite briquettes	no	no														
Peat briquettes	no	no														
Blended fossil fuel briquettes	no	no														
Other fossil fuel	no	no														
Blended biomass and fossil fuel briquettes	no	no														
Other blend of biomass and solid fuel	no	no														
Characteristics when operating with the preferred fuel																
Seasonal space heating efficiency η _s [%]	68															
Energy efficiency index (EEI)	103															
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit									
Heat output																
Nominal heat output	P _{nom}	8.0	kW	Useful efficiency at nominal heat output	η _{th,nom}	77.6	%									
Minimum heat output (indicative)	P _{min}	5.0	kW	Useful efficiency at minimum heat output (indicative)	η _{th,min}	78.4	%									
Auxiliary power consumption																
At nominal heat output	el _{max}	N.A.	kW	Single-stage heat output, no room temperature control												
At minimum heat output	el _{min}	N.A.	kW	Two or more manual stages, no room temperature control												
In standby mode	el _{SB}	N.A.	kW	With mechanic thermostat room temperature control												
Permanent pilot flame power requirement																
Pilot flame power requirement (if applicable)	P _{pilot}	N.A.	kW	With electronic room temperature control												
				With electronic room temperature control plus day timer												
				With electronic room temperature control plus week timer												
Other control options (multiple selection possible)																
				Room temperature control, with presence detection												
				Room temperature control, with open window detection												
				With distance control option												
Contact details	Barbas Bellfires BV Hallenstraat 17 5531 AB BLADEL The Netherlands				www.barbas.com											
(*) PM = particulate matter, OGC = organic gaseous compounds, CO = carbon monoxide, NO _x = nitrogen oxides																
(**) Only required if correction factors F(2) or F(3) are applied.																
Signed for and on behalf of the manufacturer by: Danny Baijens, CEO Bladel; 22 August 2024																

11 **Warranty Terms**

To make a claim under the warranty, it is important to register the Barbas appliance after purchase via www.barbasbellfires.com.

Barbas Bellfires Warranty Terms

Barbas Bellfires B.V. guarantees the quality of the supplied Barbas appliance and the quality of the materials used. All Barbas appliances are developed and manufactured according to the highest possible quality standards. If, despite all this, something should prove amiss with the Barbas appliance you have purchased, Barbas Bellfires B.V. offers the following manufacturer's warranty.

Article 1: Warranty

1. If Barbas Bellfires B.V. determines that the Barbas appliance you have purchased is defective as a result of a flaw in the construction or material, Barbas Bellfires B.V. guarantees to repair or replace the appliance free of charge, without charging any costs for labor or spare parts.
2. Repair or replacement of the Barbas appliance will be undertaken by Barbas Bellfires B.V. or by a Barbas dealer as designated by Barbas Bellfires B.V.
3. This warranty is supplementary to the existing legal national warranty of Barbas dealers and Barbas Bellfires B.V. in the country of purchase and is not intended to restrict your rights and claims based on the applicable legal provisions.

Article 2: Warranty conditions

1. Should you wish to claim under the warranty, please contact your Barbas dealer.
2. Complaints should be reported as quickly as possible after they have manifested themselves.
3. Complaints will only be accepted if they are reported to the Barbas dealer, together with the serial number of the Barbas appliance which is stated on the enclosed documents.
4. In addition, the original receipt (invoice, receipt, cash receipt) showing the date of purchase must also be submitted.
5. Repairs and replacements during the warranty period do not give any entitlement to an extension of the warranty period. After a repair or replacement of warranty parts, the warranty period shall be deemed to have started on the date of purchasing the Barbas appliance.
6. If a certain part is eligible for the warranty and the original part is no longer available, Barbas Bellfires B.V. shall ensure that an alternative part of at least the same quality shall be provided.

Article 3: Warranty exclusions

1. The warranty on the Barbas appliance ceases to be in effect if:
 - a. it is not installed according to the installation instructions, and to national and/or local regulations;
 - b. it has been installed, connected or repaired by a non-Barbas dealer;
 - c. it has not been used or maintained according to the instructions for use;

- d. it has been changed, neglected or roughly treated;
- e. it has been damaged as a result of external causes (outside the appliance itself), for example, lightning strike, water damage or fire;
- 2. In addition, the warranty lapses if the original purchase receipt shows any change, deletion, removal or if it is illegible.

Article 4: Warranty area

- 1. The warranty is only valid in those countries where Barbas appliances are sold through an official dealer network.

Article 5: Warranty period

- 1. This warranty will only be granted during the warranty period.
- 2. The body of the Barbas appliance is guaranteed for a period of 10 years against construction and/or material faults, starting from the moment of purchase.
- 3. For other parts of the Barbas appliance, a similar warranty applies from the moment of purchase for a period of two years.
- 4. For user parts such as glass, glass sealing cord and the interior of the combustion chamber, a similar guarantee is given until after the first burning.

Article 6: Liability

- 1. A claim granted by Barbas Bellfires B.V. under this warranty does not automatically imply that Barbas Bellfires B.V. also accepts liability for any possible damage. The liability of Barbas Bellfires B.V. never extends further than that stated in these warranty conditions. Any liability of Barbas Bellfires B.V. for consequential damage is expressly excluded.
- 2. That stated in this provision is not valid if and to the extent that it derives from a mandatory provision.
- 3. All agreements entered into by Barbas Bellfires B.V. are, unless specifically stated otherwise in writing and to the extent that they are permitted based on applicable law, subject to the FME-CWM general sales and delivery conditions for the technology industry.

Barbas Bellfires B.V.

Hallenstraat 175531 AB Bladel

The Netherlands

Tel: +31-497339200

Email: info@Barbas.com

Carefully retain the enclosed documents; they show the serial number of the appliance. You will need this if you wish to claim under the warranty.

barbas .

Your Barbas dealer

02.09.2025 - 357709 - 537-001