

barbas .

User manual

BOX Panorama 65



This product is not suitable for primary heating purposes



Version number: 01-347422
Date: 01-11-2018

Serial number:
Production date:

© Barbas Bellfires BV

This document or parts thereof may not be reproduced, stored in a retrieval system, ortransmitted, in any form or by any means, electronic, mechanical, photocopying,recording, nor otherwise, without the prior written permission of Barbas Bellfires BV.This document could contain technical inaccuracies or typographical errors. Barbas Bellfires BV reserves the right to revise this document from time to time in thecontents thereof.

Contact information

Barbas Bellfires BV

Hallenstraat 17, 5531 AB Bladel, The Netherlands

Phone: +31 49 733 9200

E-mail: info@barbas.com

Contents

1	Declaration of Performance.....	5
1.1	BOX Panorama 65.....	5
1.2	BOX Panorama 65 with wood log storage module.....	6
1.3	BOX Panorama 65 with support frame.....	7
2	The Clean Air Act 1993 and Smoke Control Areas.....	8
3	About this document.....	9
3.1	Warnings and cautions used in this document.....	9
3.2	Related documentation.....	9
3.3	How to work with this document.....	9
4	Description.....	10
4.1	Overview of the appliance.....	10
4.2	Intended use.....	13
5	Safety.....	14
5.1	Safety instructions for operation.....	14
5.2	Safety instructions with regard to the environment.....	15
6	Fuel.....	16
6.1	Fuel types.....	16
6.2	Fuel amount.....	16
7	Operation.....	17
7.1	Preparation before first use.....	17
7.2	First use of the appliance.....	17
7.3	Firing the appliance.....	18
7.3.1	First load and ignition.....	18
7.3.2	Reload with fuel.....	19
7.3.3	Control the burn process.....	19
7.3.4	Increase the flue draught	20
7.3.5	General firing tips.....	22
8	Maintenance.....	23
8.1	Maintenance schedule.....	23
8.2	Remove the ashes.....	23
8.3	Clean the glass.....	23
9	Troubleshooting.....	25
10	Technical data	27

11 Warranty Terms.....	28
---------------------------	----

1 Declaration of Performance

 
1.1 BOX Panorama 65

barbas bellfires fireplaces																																																							
Declaration of Performance																																																							
According to regulation (EU) 305/2011																																																							
No. 1.822.081-1 - CPR-2013/07/01																																																							
<table border="1"><tr><td>1. Unique identification code of the product-type</td><td>BOX Panorama 65</td></tr><tr><td>2. Intended use or uses of the construction product, in accordance with the applicable harmonised technical specification, as foreseen by the manufacturer</td><td>Room heater without hot water supply</td></tr><tr><td>3. Name, registered trade name or registered trade mark and contact address of the manufacturer as required pursuant to Article 11(5)</td><td>Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands</td></tr><tr><td>4. Where applicable, name and contact address of the authorised representative whose mandate covers the tasks specified in Article 12(2)</td><td>Not applicable</td></tr><tr><td>5. System or systems of assessment and verification of constancy of performance of the construction product as set out in Annex V</td><td>System 3</td></tr><tr><td>6. In case of the declaration of performance concerning a construction product covered by a harmonised standard</td><td>The notified laboratory SGS Nederland BV, No. 0608 performed the determination of the product type on the basis of type testing under system 3 and issued test report EZKA/2018-01/00004-5</td></tr><tr><td colspan="2">7. Declared performance</td></tr><tr><td>Harmonized technical specification</td><td>EN13240:2001/A2:2004/AC:2007</td></tr><tr><td>Essential characteristics</td><td>Performance</td></tr><tr><td>Fire safety</td><td>Pass</td></tr><tr><td>Distance to combustible materials</td><td>Minimum distances, in mm Rear = 200 Sides = 550 Ceiling = - Front = 1150 Floor = 30</td></tr><tr><td>Risk of burning fuel falling out</td><td>Pass</td></tr><tr><td>Emission of combustion products</td><td>CO = 0.1 vol%</td></tr><tr><td>Surface temperature</td><td>Pass</td></tr><tr><td>Electrical safety</td><td>Pass</td></tr><tr><td>Cleanability</td><td>Pass</td></tr><tr><td>Release of dangerous substances</td><td>NPD</td></tr><tr><td>Maximum operating pressure</td><td>Not applicable</td></tr><tr><td>Flue gas temperature at nominal heat output</td><td>T = 322 °C</td></tr><tr><td>Mechanical resistance (to carry a chimney/flue)</td><td>NPD</td></tr><tr><td>Thermal output</td><td>Pass</td></tr><tr><td>Nominal heat output</td><td>9.2 kW</td></tr><tr><td>Room heating output</td><td>9.2 kW</td></tr><tr><td>Water heating output</td><td>- kW</td></tr><tr><td>Energy efficiency</td><td>76.2 %</td></tr><tr><td colspan="2">8. The performance of the product identified in point 1 is in conformity with the declared performance in point 7.</td></tr><tr><td colspan="2">This declaration of performance is issued under the sole responsibility of the manufacturer identified in point 3.</td></tr></table>		1. Unique identification code of the product-type	BOX Panorama 65	2. Intended use or uses of the construction product, in accordance with the applicable harmonised technical specification, as foreseen by the manufacturer	Room heater without hot water supply	3. Name, registered trade name or registered trade mark and contact address of the manufacturer as required pursuant to Article 11(5)	Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands	4. Where applicable, name and contact address of the authorised representative whose mandate covers the tasks specified in Article 12(2)	Not applicable	5. System or systems of assessment and verification of constancy of performance of the construction product as set out in Annex V	System 3	6. In case of the declaration of performance concerning a construction product covered by a harmonised standard	The notified laboratory SGS Nederland BV, No. 0608 performed the determination of the product type on the basis of type testing under system 3 and issued test report EZKA/2018-01/00004-5	7. Declared performance		Harmonized technical specification	EN13240:2001/A2:2004/AC:2007	Essential characteristics	Performance	Fire safety	Pass	Distance to combustible materials	Minimum distances, in mm Rear = 200 Sides = 550 Ceiling = - Front = 1150 Floor = 30	Risk of burning fuel falling out	Pass	Emission of combustion products	CO = 0.1 vol%	Surface temperature	Pass	Electrical safety	Pass	Cleanability	Pass	Release of dangerous substances	NPD	Maximum operating pressure	Not applicable	Flue gas temperature at nominal heat output	T = 322 °C	Mechanical resistance (to carry a chimney/flue)	NPD	Thermal output	Pass	Nominal heat output	9.2 kW	Room heating output	9.2 kW	Water heating output	- kW	Energy efficiency	76.2 %	8. The performance of the product identified in point 1 is in conformity with the declared performance in point 7.		This declaration of performance is issued under the sole responsibility of the manufacturer identified in point 3.	
1. Unique identification code of the product-type	BOX Panorama 65																																																						
2. Intended use or uses of the construction product, in accordance with the applicable harmonised technical specification, as foreseen by the manufacturer	Room heater without hot water supply																																																						
3. Name, registered trade name or registered trade mark and contact address of the manufacturer as required pursuant to Article 11(5)	Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands																																																						
4. Where applicable, name and contact address of the authorised representative whose mandate covers the tasks specified in Article 12(2)	Not applicable																																																						
5. System or systems of assessment and verification of constancy of performance of the construction product as set out in Annex V	System 3																																																						
6. In case of the declaration of performance concerning a construction product covered by a harmonised standard	The notified laboratory SGS Nederland BV, No. 0608 performed the determination of the product type on the basis of type testing under system 3 and issued test report EZKA/2018-01/00004-5																																																						
7. Declared performance																																																							
Harmonized technical specification	EN13240:2001/A2:2004/AC:2007																																																						
Essential characteristics	Performance																																																						
Fire safety	Pass																																																						
Distance to combustible materials	Minimum distances, in mm Rear = 200 Sides = 550 Ceiling = - Front = 1150 Floor = 30																																																						
Risk of burning fuel falling out	Pass																																																						
Emission of combustion products	CO = 0.1 vol%																																																						
Surface temperature	Pass																																																						
Electrical safety	Pass																																																						
Cleanability	Pass																																																						
Release of dangerous substances	NPD																																																						
Maximum operating pressure	Not applicable																																																						
Flue gas temperature at nominal heat output	T = 322 °C																																																						
Mechanical resistance (to carry a chimney/flue)	NPD																																																						
Thermal output	Pass																																																						
Nominal heat output	9.2 kW																																																						
Room heating output	9.2 kW																																																						
Water heating output	- kW																																																						
Energy efficiency	76.2 %																																																						
8. The performance of the product identified in point 1 is in conformity with the declared performance in point 7.																																																							
This declaration of performance is issued under the sole responsibility of the manufacturer identified in point 3.																																																							

Signed for and on behalf of the manufacturer by:

Danny Baijens, CEO
(Name and function)


Bladel; September 18, 2018
(place and date of issue)



.....
(Signature)

1.2

 BOX Panorama 65 with wood log storage module

	 Declaration of Performance According to regulation (EU) 305/2011 No. 1.822.083-1 - CPR-2013/07/01																																																												
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%;">1.</td> <td>Unique identification code of the product-type</td> <td>BOX Panorama 65 with woodlog storage module</td> </tr> <tr> <td>2.</td> <td>Intended use or uses of the construction product, in accordance with the applicable harmonised technical specification, as foreseen by the manufacturer</td> <td>Room heater without hot water supply</td> </tr> <tr> <td>3.</td> <td>Name, registered trade name or registered trade mark and contact address of the manufacturer as required pursuant to Article 11(5)</td> <td>Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands</td> </tr> <tr> <td>4.</td> <td>Where applicable, name and contact address of the authorised representative whose mandate covers the tasks specified in Article 12(2)</td> <td>Not applicable</td> </tr> <tr> <td>5.</td> <td>System or systems of assessment and verification of constancy of performance of the construction product as set out in Annex V</td> <td>System 3</td> </tr> <tr> <td>6.</td> <td>In case of the declaration of performance concerning a construction product covered by a harmonised standard</td> <td>The notified laboratory SGS Nederland BV, No. 0608 performed the determination of the product type on the basis of type testing under system 3 and issued test report EZKA/2018-01/00004-5</td> </tr> <tr> <td colspan="3"> 7. Declared performance <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%;">Harmonized technical specification</td> <td>EN13240:2001/A2:2004/AC:2007</td> </tr> <tr> <td>Essential characteristics</td> <td>Performance</td> </tr> <tr> <td>Fire safety</td> <td>Pass</td> </tr> <tr> <td>Distance to combustible materials</td> <td>Minimum distances, in mm Rear = 200 Sides = 550 Ceiling = - Front = 1150 Floor = -</td> </tr> <tr> <td>Risk of burning fuel failing out</td> <td>Pass</td> </tr> <tr> <td>Emission of combustion products</td> <td>CO = 0.1 vol%</td> </tr> <tr> <td>Surface temperature</td> <td>Pass</td> </tr> <tr> <td>Electrical safety</td> <td>Pass</td> </tr> <tr> <td>Cleanability</td> <td>Pass</td> </tr> <tr> <td>Release of dangerous substances</td> <td>NPD</td> </tr> <tr> <td>Maximum operating pressure</td> <td>Not applicable</td> </tr> <tr> <td>Flue gas temperature at nominal heat output</td> <td>T = 322 °C</td> </tr> <tr> <td>Mechanical resistance (to carry a chimney/flue)</td> <td>NPD</td> </tr> <tr> <td>Thermal output</td> <td>Pass</td> </tr> <tr> <td>Nominal heat output</td> <td>9.2 kW</td> </tr> <tr> <td>Room heating output</td> <td>9.2 kW</td> </tr> <tr> <td>Water heating output</td> <td>kW</td> </tr> <tr> <td>Energy efficiency</td> <td>76.2 %</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> 8. The performance of the product identified in point 1 is in conformity with the declared performance in point 7. This declaration of performance is issued under the sole responsibility of the manufacturer identified in point 3. </td> </tr> </table>		1.	Unique identification code of the product-type	BOX Panorama 65 with woodlog storage module	2.	Intended use or uses of the construction product, in accordance with the applicable harmonised technical specification, as foreseen by the manufacturer	Room heater without hot water supply	3.	Name, registered trade name or registered trade mark and contact address of the manufacturer as required pursuant to Article 11(5)	Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands	4.	Where applicable, name and contact address of the authorised representative whose mandate covers the tasks specified in Article 12(2)	Not applicable	5.	System or systems of assessment and verification of constancy of performance of the construction product as set out in Annex V	System 3	6.	In case of the declaration of performance concerning a construction product covered by a harmonised standard	The notified laboratory SGS Nederland BV, No. 0608 performed the determination of the product type on the basis of type testing under system 3 and issued test report EZKA/2018-01/00004-5	7. Declared performance <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%;">Harmonized technical specification</td> <td>EN13240:2001/A2:2004/AC:2007</td> </tr> <tr> <td>Essential characteristics</td> <td>Performance</td> </tr> <tr> <td>Fire safety</td> <td>Pass</td> </tr> <tr> <td>Distance to combustible materials</td> <td>Minimum distances, in mm Rear = 200 Sides = 550 Ceiling = - Front = 1150 Floor = -</td> </tr> <tr> <td>Risk of burning fuel failing out</td> <td>Pass</td> </tr> <tr> <td>Emission of combustion products</td> <td>CO = 0.1 vol%</td> </tr> <tr> <td>Surface temperature</td> <td>Pass</td> </tr> <tr> <td>Electrical safety</td> <td>Pass</td> </tr> <tr> <td>Cleanability</td> <td>Pass</td> </tr> <tr> <td>Release of dangerous substances</td> <td>NPD</td> </tr> <tr> <td>Maximum operating pressure</td> <td>Not applicable</td> </tr> <tr> <td>Flue gas temperature at nominal heat output</td> <td>T = 322 °C</td> </tr> <tr> <td>Mechanical resistance (to carry a chimney/flue)</td> <td>NPD</td> </tr> <tr> <td>Thermal output</td> <td>Pass</td> </tr> <tr> <td>Nominal heat output</td> <td>9.2 kW</td> </tr> <tr> <td>Room heating output</td> <td>9.2 kW</td> </tr> <tr> <td>Water heating output</td> <td>kW</td> </tr> <tr> <td>Energy efficiency</td> <td>76.2 %</td> </tr> </table>			Harmonized technical specification	EN13240:2001/A2:2004/AC:2007	Essential characteristics	Performance	Fire safety	Pass	Distance to combustible materials	Minimum distances, in mm Rear = 200 Sides = 550 Ceiling = - Front = 1150 Floor = -	Risk of burning fuel failing out	Pass	Emission of combustion products	CO = 0.1 vol%	Surface temperature	Pass	Electrical safety	Pass	Cleanability	Pass	Release of dangerous substances	NPD	Maximum operating pressure	Not applicable	Flue gas temperature at nominal heat output	T = 322 °C	Mechanical resistance (to carry a chimney/flue)	NPD	Thermal output	Pass	Nominal heat output	9.2 kW	Room heating output	9.2 kW	Water heating output	kW	Energy efficiency	76.2 %	8. The performance of the product identified in point 1 is in conformity with the declared performance in point 7. This declaration of performance is issued under the sole responsibility of the manufacturer identified in point 3.		
1.	Unique identification code of the product-type	BOX Panorama 65 with woodlog storage module																																																											
2.	Intended use or uses of the construction product, in accordance with the applicable harmonised technical specification, as foreseen by the manufacturer	Room heater without hot water supply																																																											
3.	Name, registered trade name or registered trade mark and contact address of the manufacturer as required pursuant to Article 11(5)	Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands																																																											
4.	Where applicable, name and contact address of the authorised representative whose mandate covers the tasks specified in Article 12(2)	Not applicable																																																											
5.	System or systems of assessment and verification of constancy of performance of the construction product as set out in Annex V	System 3																																																											
6.	In case of the declaration of performance concerning a construction product covered by a harmonised standard	The notified laboratory SGS Nederland BV, No. 0608 performed the determination of the product type on the basis of type testing under system 3 and issued test report EZKA/2018-01/00004-5																																																											
7. Declared performance <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%;">Harmonized technical specification</td> <td>EN13240:2001/A2:2004/AC:2007</td> </tr> <tr> <td>Essential characteristics</td> <td>Performance</td> </tr> <tr> <td>Fire safety</td> <td>Pass</td> </tr> <tr> <td>Distance to combustible materials</td> <td>Minimum distances, in mm Rear = 200 Sides = 550 Ceiling = - Front = 1150 Floor = -</td> </tr> <tr> <td>Risk of burning fuel failing out</td> <td>Pass</td> </tr> <tr> <td>Emission of combustion products</td> <td>CO = 0.1 vol%</td> </tr> <tr> <td>Surface temperature</td> <td>Pass</td> </tr> <tr> <td>Electrical safety</td> <td>Pass</td> </tr> <tr> <td>Cleanability</td> <td>Pass</td> </tr> <tr> <td>Release of dangerous substances</td> <td>NPD</td> </tr> <tr> <td>Maximum operating pressure</td> <td>Not applicable</td> </tr> <tr> <td>Flue gas temperature at nominal heat output</td> <td>T = 322 °C</td> </tr> <tr> <td>Mechanical resistance (to carry a chimney/flue)</td> <td>NPD</td> </tr> <tr> <td>Thermal output</td> <td>Pass</td> </tr> <tr> <td>Nominal heat output</td> <td>9.2 kW</td> </tr> <tr> <td>Room heating output</td> <td>9.2 kW</td> </tr> <tr> <td>Water heating output</td> <td>kW</td> </tr> <tr> <td>Energy efficiency</td> <td>76.2 %</td> </tr> </table>			Harmonized technical specification	EN13240:2001/A2:2004/AC:2007	Essential characteristics	Performance	Fire safety	Pass	Distance to combustible materials	Minimum distances, in mm Rear = 200 Sides = 550 Ceiling = - Front = 1150 Floor = -	Risk of burning fuel failing out	Pass	Emission of combustion products	CO = 0.1 vol%	Surface temperature	Pass	Electrical safety	Pass	Cleanability	Pass	Release of dangerous substances	NPD	Maximum operating pressure	Not applicable	Flue gas temperature at nominal heat output	T = 322 °C	Mechanical resistance (to carry a chimney/flue)	NPD	Thermal output	Pass	Nominal heat output	9.2 kW	Room heating output	9.2 kW	Water heating output	kW	Energy efficiency	76.2 %																							
Harmonized technical specification	EN13240:2001/A2:2004/AC:2007																																																												
Essential characteristics	Performance																																																												
Fire safety	Pass																																																												
Distance to combustible materials	Minimum distances, in mm Rear = 200 Sides = 550 Ceiling = - Front = 1150 Floor = -																																																												
Risk of burning fuel failing out	Pass																																																												
Emission of combustion products	CO = 0.1 vol%																																																												
Surface temperature	Pass																																																												
Electrical safety	Pass																																																												
Cleanability	Pass																																																												
Release of dangerous substances	NPD																																																												
Maximum operating pressure	Not applicable																																																												
Flue gas temperature at nominal heat output	T = 322 °C																																																												
Mechanical resistance (to carry a chimney/flue)	NPD																																																												
Thermal output	Pass																																																												
Nominal heat output	9.2 kW																																																												
Room heating output	9.2 kW																																																												
Water heating output	kW																																																												
Energy efficiency	76.2 %																																																												
8. The performance of the product identified in point 1 is in conformity with the declared performance in point 7. This declaration of performance is issued under the sole responsibility of the manufacturer identified in point 3.																																																													
Signed for and on behalf of the manufacturer by:  Danny Baijens, CEO (Name and function) Bladel; September 18, 2018 (place and date of issue)																																																													
..... (Signature)																																																													

1.3

BOX Panorama 65 with support frame

barbas bellfires fireplaces	
Declaration of Performance	
According to regulation (EU) 305/2011	
No. 1.822.082-1 - CPR-2013/07/01	
1. Unique identification code of the product-type	BOX Panorama 65 with support frame
2. Intended use or uses of the construction product, in accordance with the applicable harmonised technical specification, as foreseen by the manufacturer	Room heater without hot water supply
3. Name, registered trade name or registered trade mark and contact address of the manufacturer as required pursuant to Article 11(5)	Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands
4. Where applicable, name and contact address of the authorised representative whose mandate covers the tasks specified in Article 12(2)	Not applicable
5. System or systems of assessment and verification of constancy of performance of the construction product as set out in Annex V	System 3
6. In case of the declaration of performance concerning a construction product covered by a harmonised standard	The notified laboratory SGS Nederland BV, No. 0608 performed the determination of the product type on the basis of type testing under system 3 and issued test report EZKA/2018-01/00004-5
7. Declared performance	
Harmonized technical specification	EN13240:2001/A2:2004/AC:2007
Essential characteristics	Performance
Fire safety	Pass
Distance to combustible materials	Minimum distances, in mm Rear = Onbrandbare wand Sides = 550 Ceiling = Front = 1150 Floor = 30
Risk of burning fuel failing out	Pass
Emission of combustion products	CO = 0.1 vol%
Surface temperature	Pass
Electrical safety	Pass
Cleanability	Pass
Release of dangerous substances	NPD
Maximum operating pressure	Not applicable
Flue gas temperature at nominal heat output	T = 322 °C
Mechanical resistance (to carry a chimney/flue)	NPD
Thermal output	Pass
Nominal heat output	9.2 kW
Room heating output	9.2 kW
Water heating output	kW
Energy efficiency	76.2 %
8. The performance of the product identified in point 1 is in conformity with the declared performance in point 7.	
This declaration of performance is issued under the sole responsibility of the manufacturer identified in point 3.	

Signed for and on behalf of the manufacturer by:

Danny Baijens, CEO
(Name and function)

Bladel; September 18, 2018
(place and date of issue)

.....
(Signature)



2

The Clean Air Act 1993 and Smoke Control Areas

The following Barbas BOX Panorama 65 appliances have been exempted or recommended for exemption under section 21 of the Clean Air Act 1993 and can be used in accordance with the intended use as described in this manual in smoke control areas in the UK.

- Barbas BOX Panorama 65
- Barbas BOX Panorama 65 with wood storage
- Barbas BOX Panorama 65 with wall support frame

Under the Clean Air Act local authorities may declare the whole or part of the district of the authority to be a smoke control area. It is an offence to emit smoke from a chimney of a building, from a furnace or from any fixed boiler if located in a designated smoke control area. It is also an offence to acquire an "unauthorised fuel" for use within a smoke control area unless it is used in an "exempt" appliance ("exempted" from the controls which generally apply in the smoke control area).

In England appliances are exempted by publication on a list by the Secretary of State in accordance with changes made to sections 20 and 21 of the Clean Air Act 1993 by section 15 of the Deregulation Act 2015. In Scotland appliances are exempted by publication on a list by Scottish Ministers under section 50 of the Regulatory Reform (Scotland) Act 2014. Similarly, in Northern Ireland appliances are exempted by publication on a list by the Department of Agriculture, Environment and Rural Affairs under Section 16 of the Environmental Better Regulation Act (Northern Ireland) 2016. In Wales appliances are exempted by regulations made by Welsh Ministers.

Further information on the requirements of the Clean Air Act can be found here: <https://www.gov.uk/smoke-control-area-rules> .

Your local authority is responsible for implementing the Clean Air Act 1993 including designation and supervision of smoke control areas and you can contact them for details of Clean Air Act requirements.

3 About this document

This document shows the necessary information to do these tasks on the BOX Panorama 65:

- Operate the appliance
- Do basic maintenance

This document refers to the BOX Panorama 65 as 'the appliance'. This document is an essential part of your appliance. Read it carefully before you do work on the appliance. Keep it in a safe place.

The original instructions of the document are in English. All other language versions of the document are translations of the original instructions. It is not always possible to provide a detailed illustration of every single item of the equipment. The illustrations in this document show a typical setup. The illustrations are for instructional use only.

3.1 Warnings and cautions used in this document

Warning

If you do not obey these instructions, there is a risk that can cause personal injury or death.

Caution

If you do not obey these instructions, there is a risk of damage to the equipment or to property.

Note

A note shows more information.

Symbol	Description
	Visual sign that there is a hazard
	Visual sign that there is a notice

3.2 Related documentation

- Installation and maintenance manual
- User manual

3.3 How to work with this document

1. Make yourself familiar with the structure and content of the document.
2. Read the safety chapter in detail.
3. Make sure that you understand all the instructions.
4. Do the procedures completely and in the given sequence.

4 Description

4.1 Overview of the appliance

The appliance is optionally available with a support frame to attach the appliance against a wall or optional available with a wood log storage module under the appliance.

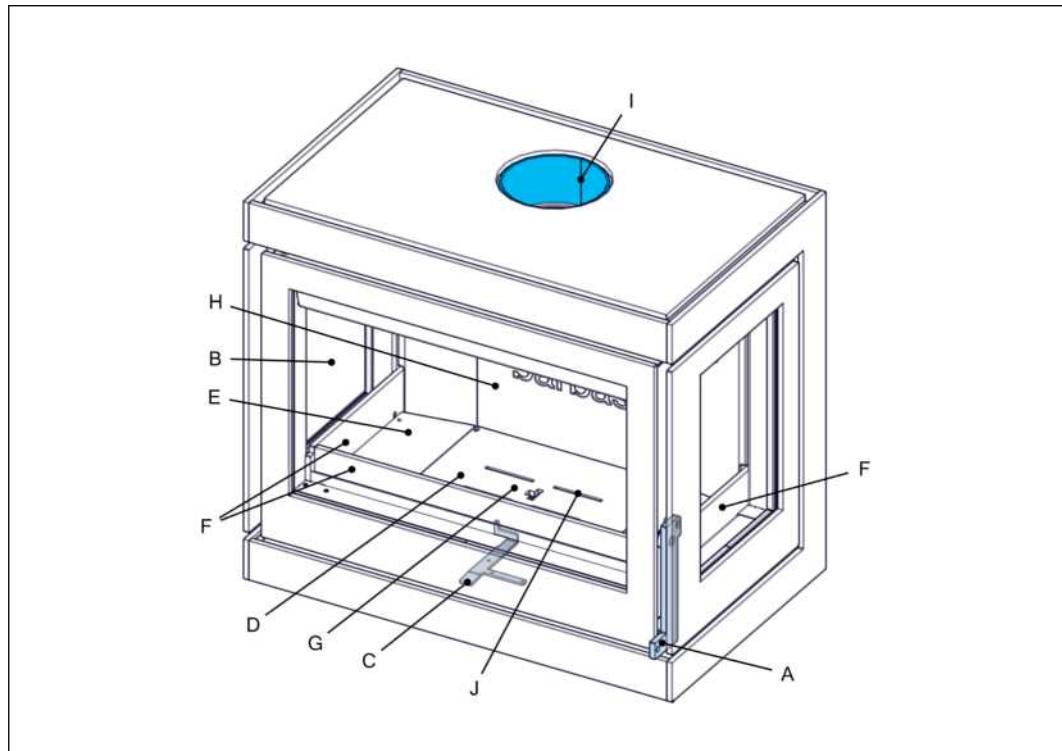


Table 1: Top view

Item	Description
A	Handle Use the handle to open and to close the door.
B	Glass The glass keeps the flue gases inside the appliance and closes the combustion chamber off.
C	Control lever Use the control lever to control the amount of combustion air.
D	Grate Cover of the ash tray. Inlet of the primary air into the combustion chamber.
E	Bottom plates Plates left and right from the grate, to protect the bottom of the appliance
F	Log guards 1 front plate and 2 side plates to prevent wood logs and ashes from falling out of the appliance
G	Ash tray Tray to collect the ashes that fall through the grate.
H	Ceramic panel Cover of the rear of the combustion chamber.
I	Flue connection The connection to the flue system that extracts the flue gases.
J	Primary air inlet Combustion air supply through the grate into the combustion chamber. The function of primary air is to start the fire.

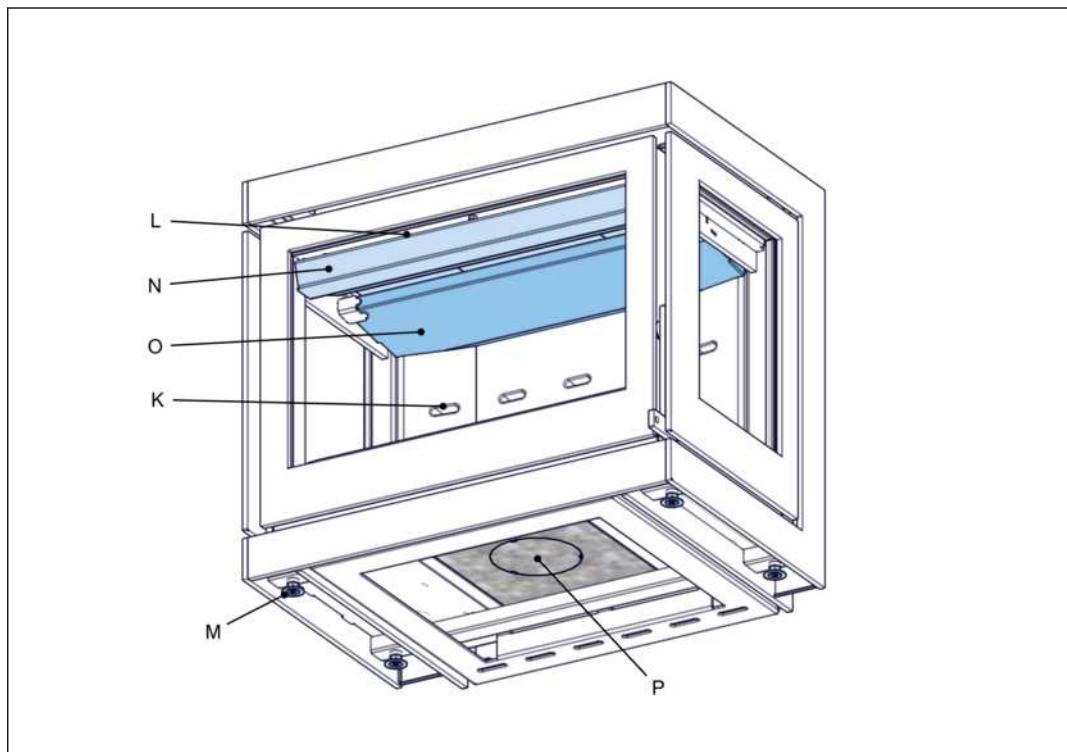
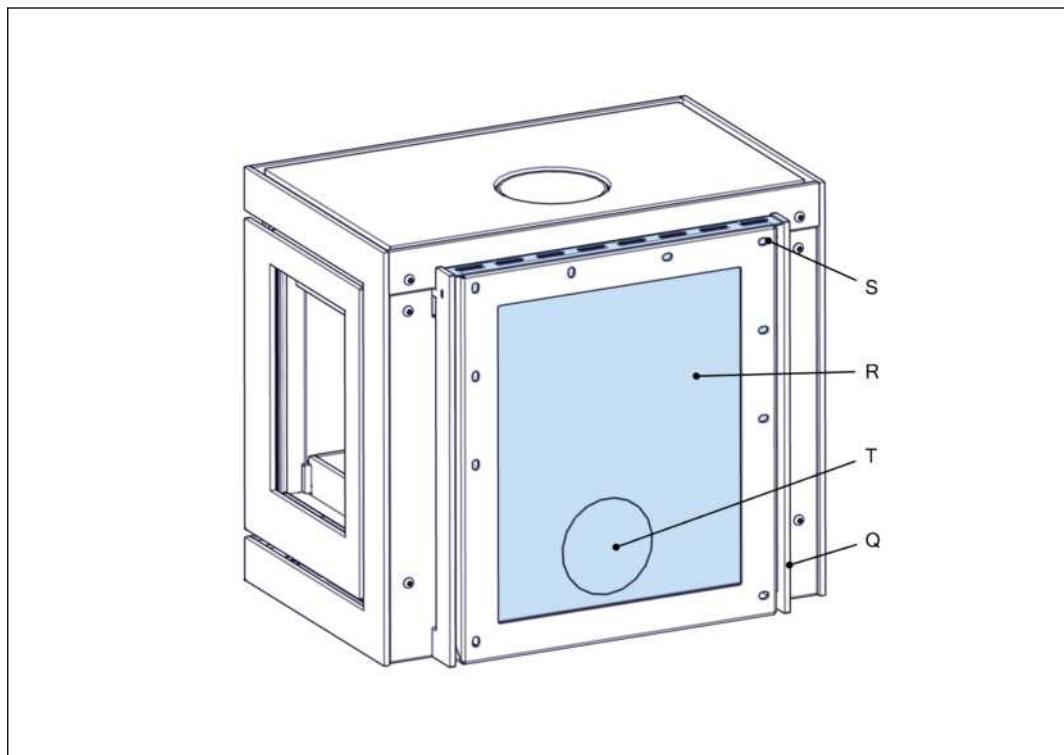


Table 2: Bottom view

	Item	Description
K	Secondary air inlet	Combustion air supply through the rear wall into the combustion chamber. The function of secondary air is to provide extra combustion air for clean combustion.
L	Air wash inlet	Combustion air supply through the top of the appliance into the combustion chamber. The function of air wash is to prevent deposition of soot on the glass.
M	Adjustable feet	4 adjustable feet to level the appliance
N	Upper baffle	Steel plate in the top of the combustion chamber above the lower baffle
O	Lower baffle	Ceramic plate in the top of the combustion chamber
P	External combustion air inlet (optional)	Provides the appliance with combustion air. This option is only available when ordered with the appliance.

**Table 3: Back view (for BOX Panorama 65 with optional support frame)**

	Item	Description
Q	Support frame	The optional support frame carries the appliance when put on a wall
R	Cover	Cover to protect the wall from heat radiation
S	Screw holes	Attach the support frame on a wall with screws through the screw holes
T	External combustion air inlet (optional)	Provides the appliance with combustion air. This option is only available when ordered with the appliance.

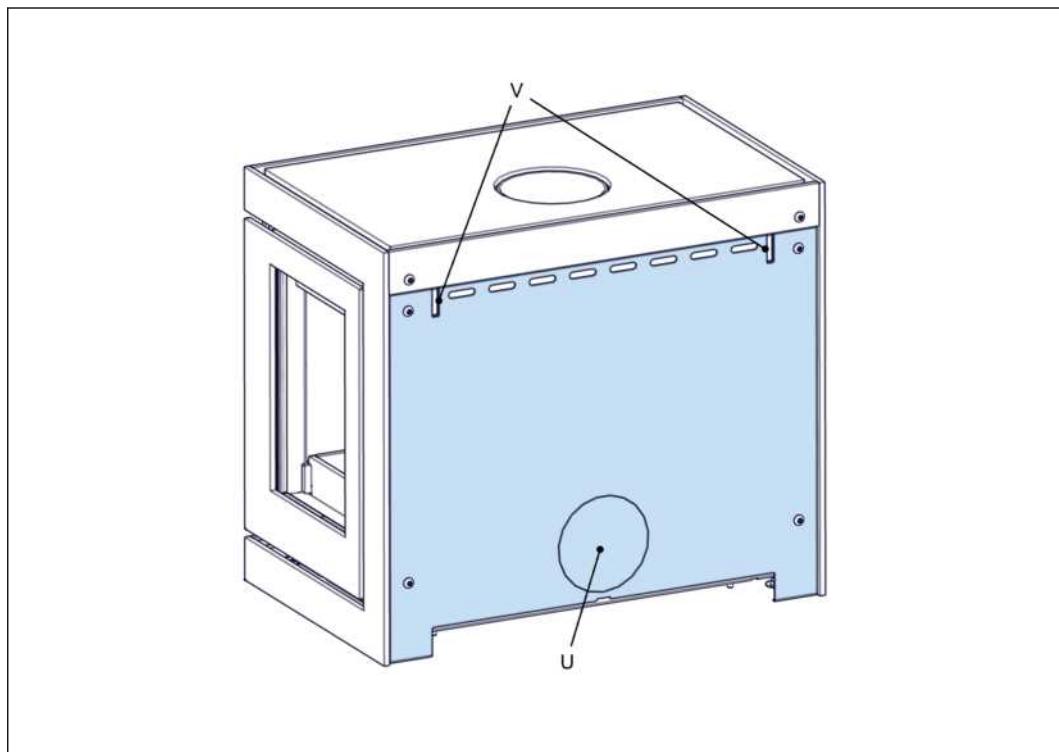


Table 4: Back view

	Item	Description
U	External combustion air inlet	Provides the appliance with combustion air. This option is only available when ordered with the appliance.
V	Slots	Only for BOX Panorama 65 with optional support frame. The slots make sure the appliance is in the correct position on the support frame.

4.2 Intended use

The appliance is intended for indoor use to heat the room wherein it is installed. Do not use it for other purposes.

The appliance is intended for use with wood logs or wood briquettes as fuel. Do not use other fuels.

The appliance is intended for use with the door closed.

The appliance may only be used at the location that meets the requirements for the installation of the appliance.

The appliance is intended for intermittent use and is not intended for continuous use.

The appliance is intended to heat the room by direct heating. It is not allowed to connect the appliance to a central-heating installation.

5 Safety

5.1 Safety instructions for operation

Warning:



- Do not put objects on top of the appliance.
- Do not let the appliance unattended when the fuel burns.
- Do not put flammable items within 180 cm from the front of the appliance.
- Do not put flammable items within 30 cm from the side of the appliance.
- If applicable, make sure the distance between the top of the wood log storage module and the wood logs in the storage module is minimum 10 cm. Make sure wood logs in the storage do not touch the top of the wood log storage module.
- Do not use mineral fuel (example: coal, anthracite)
- Do not use the appliance with the door open. Smoke can escape from the appliance. Only open the appliance door for a short time to reload with fuel or to remove the ash.
- Make sure that children are supervised when they can reach the appliance.
- Make sure that there is sufficient ventilation in the room in which the appliance is installed.
- Do not use the appliance in case of visual glass damage.
- Make sure that the appliance is installed correctly. Refer to the Installation and Maintenance manual. You can find the manuals on www.barbasbellfires.com.
- Wear the glove and use the operating hook or a poke when refilling the appliance
- Make sure that your clothing does not touch the appliance. Especially synthetic clothing ignites easily and burns intensely.
- Do not use the appliance when there is fog, haze or no wind.
- Do not make modifications to the appliance. Any modification will also make your warranty invalid.

Caution:



- Make sure to clean your chimney minimum every year to prevent a chimney fire.
- Do not use freshly cut wood.
- Do not use more wood per load than prescribed. Overloading can cause excess smoke. See also chapter [6.2](#).
- Operation with the control lever open can cause excess smoke. The appliance must not be operated with the control lever or door left open except as directed in this user manual.
- Do not burn waste in the appliance.
- Do not prepare food in the appliance. This causes damage to your appliance and chimney.

Note:



- Do inspect and clean the appliance, the chimney and the external combustion air supply by a Barbas dealer minimum every year.
- Do not use the appliance continuously. The intended use is as intermittent appliance.

5.2 Safety instructions with regard to the environment

- Dispose of the packing materials in an environmentally friendly way.
- Dispose of ceramic heat-resistant glass as household waste. Do not dispose of ceramic heat-resistant glass in a glass recycling container.
- Dispose of an obsolete appliance according to instructions of the authorities or the fitter.
- Obey the local regulations.

6 Fuel

6.1 Fuel types

Warning:



Do not use coal, anthracite, coal briquettes, liquid fuel or gel fuel. The appliance is not designed for these fuels. Use of these fuels is dangerous and can lead to bodily harm and to serious damage to the appliance.

The appliance has been recommended as suitable for use in smoke control areas when burning clean dried hard wood logs as stated hereunder. All suitable fuels listed hereunder can be used outside smoke control areas.

Suitable fuels are:

- Hard wood logs (example: birch, beech, oak, ash).
- Soft wood (example: spruce, pine, poplar).
- Wood briquettes without binder.

Before use, wood must dry for minimum 2 years when freshly chopped. Kiln-dried wood must dry for an extra half year. Dried wood logs must have a moisture content of 10 - 20 %.

Unsuitable fuels are:

- Painted wood.
- Impregnated wood.
- MDF, chipboard.
- Any kind of combustible waste.
- Paraffin impregnated compressed wood logs
- Freshly chopped wood
- Coal, anthracite and other bituminous fuels
- Lignite , peat

Using unsuitable fuels cause excess smoke, black glass, combustible deposits in the chimney and can damage the appliance.

6.2 Fuel amount

Load the appliance with the amount of fuel as listed hereunder. Put the load as one layer on the floor of the combustion chamber. For the amount of fuel for the first load see [7.3.1](#).

Table 5: Recommended amount of fuel

	Wood logs	Wood briquettes
Amount	2 pieces	2 pieces
Weight	Approximately 1.0 kg per piece	Approximately 0.75 kg per piece
Length	Approximately 30 cm	Approximately 30 cm
Outline	Approximately 25 cm	Approximately 25 cm

The above listed amount burns for approximately 45 minutes. This time can be different, dependent on the chimney draught and the position of the combustion air valve.


The amount of fuel specified here should not be exceeded, overloading can cause excess smoke.

7 Operation


7.1 Preparation before first use

Report any defects to your dealer immediately.

1. Make sure that the appliance is not damaged.
2. Make sure that the ceramic plate and the baffles are in the correct position.
3. Make sure that the glass is not damaged.
4. Make sure that the door opens and closes completely
 - a) Turn the handle forward to open the door.

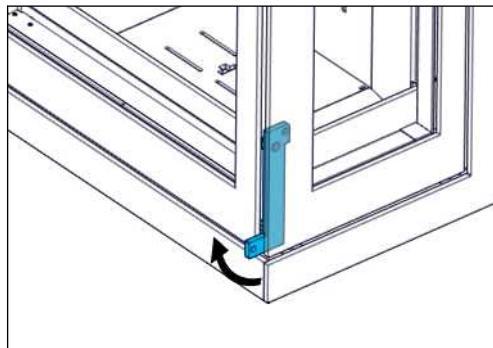

- b) Turn the handle downward to close the door.

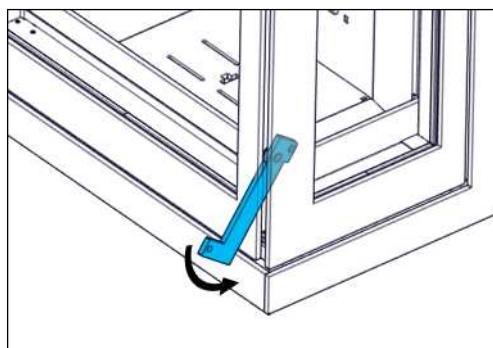

5. Remove document and components from the combustion chamber.
6. Make sure that the control lever moves easy.
7. Make sure that the ash tray is empty.
8. Make sure that all package material, stickers, etc, have been removed from the vicinity of the appliance after installation.

7.2 First use of the appliance

Caution:



- Make sure there is sufficient ventilation in the room in which the appliance is installed.

Note:



The appliance has a heat-resistant coating. When you use the appliance for the first time, the coating can cause an unpleasant, but harmless smell.

After first few times of use of the appliance, a light deposit on the inside of the glass may occur caused by curing of the paint. This can be removed with glass cleaner or ceramic hob cleaner.

7.3 Firing the appliance

7.3.1 First load and ignition

At the beginning the appliance and chimney is cold. It is important that both the appliance and chimney reach a temperature that guarantees a good functioning of the appliance. A too low temperature results in incomplete combustion and a poor chimney draught. To avoid this do the following:

Warning:




Do not use the appliance when there is fog or haze or no wind.


1. Put the control lever in the far right position.
2. When, present, open the valve in the external combustion air supply line.
3. When present, open the chimney valve completely.
4. Open the door of the appliance.
5. Put minimum 4 wood logs crosswise on the floor of the combustion chamber.



6. Put some kindling wood and 1 or 2 firestarter cubes on top of the wood logs.

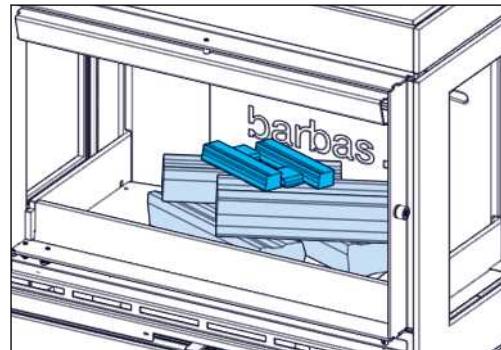

7. Put some kindling wood above the firestarter cubes.

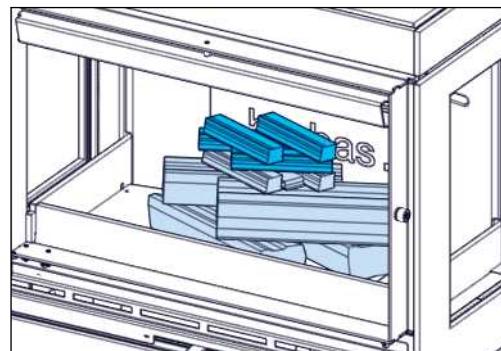

8. Light the firestarter cubes with a lighter or a match.
9. Close the door of the appliance.

After approximately 20 minutes the wood logs burn. Dependent on the quality of the chimney the wood logs burn for approximately 1 to 1.5 hours. Do not open the door of the appliance before the last flames have almost disappeared.

7.3.2 Reload with fuel

Caution:



If there is insufficient burning material in the firebed to light a new fuel charge, excessive smoke emission can occur. Refueling must be done onto a sufficient quantity of glowing embers and ash to make sure that the new fuel charge will ignite in a reasonable period. If there are too few embers in the fire bed, add suitable kindling to prevent excessive smoke.

Note:




The procedure hereunder is a general description. The best reloading moment is dependent on the flue draught. A high flue draught requires reloading when the flames have completely disappeared. If the flue draught is low, reloading must be done when there are still flames.

1. Wait until the last flames have almost disappeared.
2. Set the control lever in the far right position.
3. Open the door.
4. Reload the appliance with 2 wood logs, placed flat and diagonally on the combustion chamber floor. Use the recommended amount of fuel. Refer to chapter [6.2](#).




Note: Some black deposit can occur on the side windows during the combustion of the first and second fuel load. To avoid this, put the wood logs on the combustion floor as wide as possible, so that the side windows are heated good.

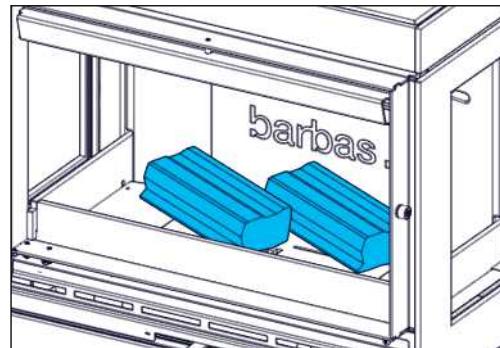

5. Close the door.
6. After ignition of the fuel, move the control lever to the left to a position that gives a quiet burning fire.

7.3.3 Control the burn process

Control the burn process with the control lever. This lever controls the amount of primary combustion air and both the secondary combustion air and airwash amount.

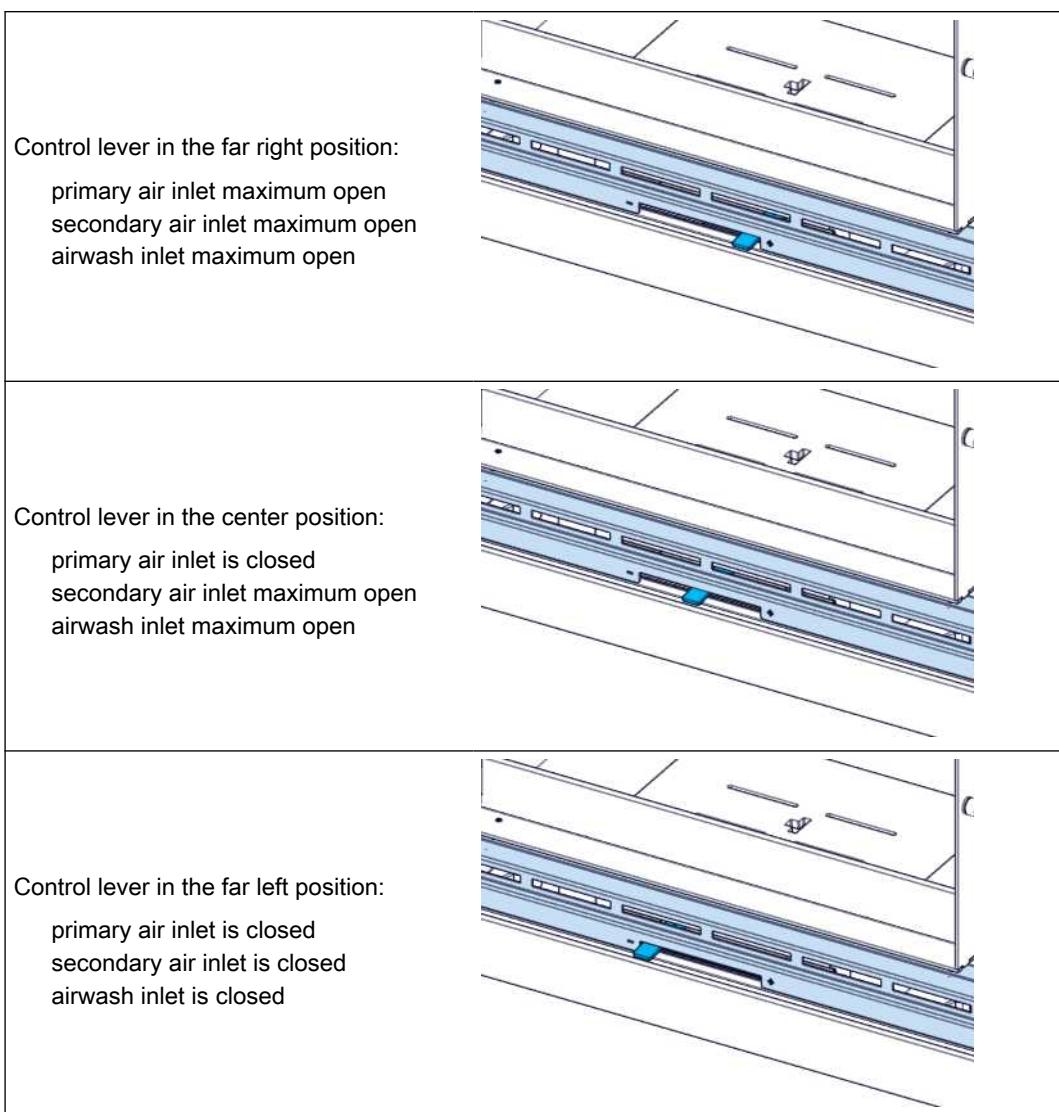**Warning:**

Setting the control lever in the far left position (all air inlets closed) when the fuel is burning leads to excessive emission of hazardous gasses (example: carbon monoxide) and soot deposit on the glass of the door and in the chimney. Never close the air inlets when the fuel is burning. Always keep the secondary air inlet and air wash inlet open by setting the control lever somewhere in-between the center position and the far left position.

Caution:

Continuous firing with the primary air inlet fully open (control lever in the far right position) causes a white-hot fire that can damage the appliance. Use the primary air only during the first fuel load and for ignition of a new fuel load.


7.3.4**Increase the flue draught**

Warning: Do the procedure hereunder when you have made sure the appliance has cooled down and there are no glowing embers.




A low flue draught is caused by too much flow resistance. This causes insufficient flow of the flue gas in the chimney. Do the next steps to decrease the flow resistance


1. Loosen the nut above the heat shield with a 3 mm hexagonal key and a 10 mm fork spanner. Unscrew the socket screw. Make sure the nut stays attached to the socket screw.

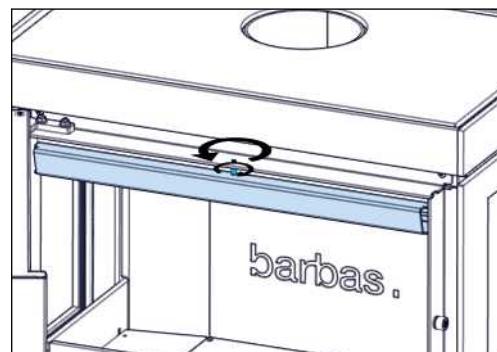


2. Push up (1) the front of the heat shield and pull it forward (2) and move downward to a vertical position (3).

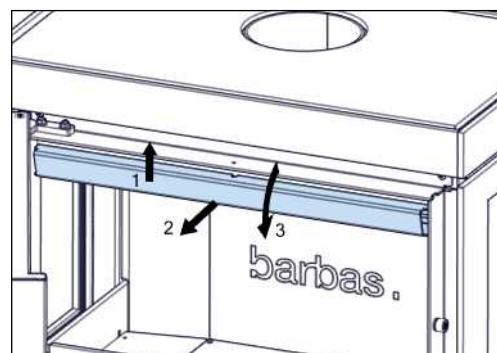

3. Remove the upper baffle from the appliance.

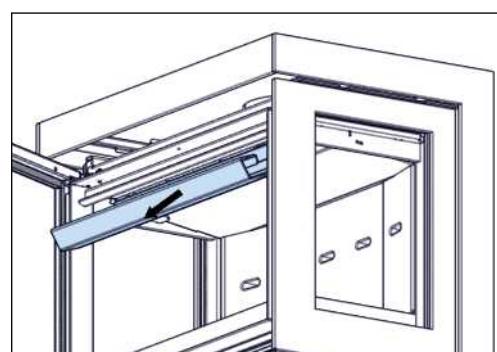

4. Break out 1 to 4 break strips from the baffle with a pair of pliers.

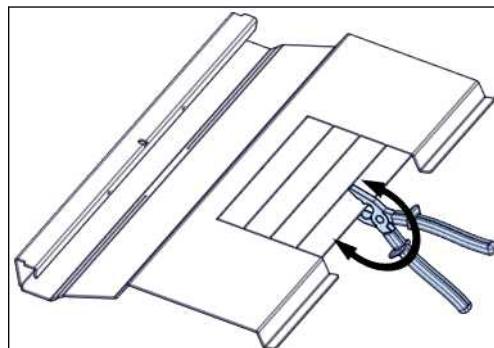

5. Do the steps 1 to 3 in opposite order to put the upper baffle in the appliance

7.3.5

General firing tips

- The appliance works best when it has heated up as described in chapter [7.3.1](#). Insufficient heating up leads to a low chimney draught, black deposits on the glass and incomplete combustion. Good combustion is recognized by bright orange flames, invisible smoke and no soot deposits on the glass. Use the control lever to get good combustion. Refer to [6.1](#) for advice on the required fuel quality.
- Make sure the door of the appliance is closed when in use. Only open the door for ignition and to refuel.
- Do not remove all the ashes. An ash layer in the combustion chamber forms a heat insulating layer, that helps the fuel to ignite easy.
- Do not set the control lever in the far left position (all combustion air inlets closed) when the appliance is used. This will cause severe smoke development, soot formation and increases the chance of a chimney fire.
- After the first load, do not overload the appliance with fuel. Refer to [6.2](#) for the recommended amount of fuel. Too much fuel leads to incomplete combustion, soot formation and a chance of a chimney fire.

8 Maintenance

8.1 Maintenance schedule

Caution:



Clean the glass when it is dirty. If the glass is not cleaned when it is dirty the glass can become permanently dull.

Table 6: Maintenance schedule

Task	Frequency	Procedure
Remove the ashes	When necessary	Refer to section 8.2
Clean the glass	When necessary	Refer to section 8.3
Maintenance by your fitter	Yearly	Refer to your dealer
Chimney sweep	Yearly (or more often when necessary)	Refer to the Installation and maintenance manual
Appliance inspection	Yearly	Refer to the Installation and maintenance manual

8.2 Remove the ashes

1. Make sure that the appliance has cooled down and there are no glowing embers.
2. Remove the ashes with a small scoop.
3. Lift the grate with the operating hook and remove the grate.
4. Remove the ashtray and empty it.
5. Make sure there are no ashes in the space under the ash tray. Remove these ashes when necessary.
6. Put the ash tray back in the appliance.
7. Put the grate back in the appliance.

8.3 Clean the glass

1. Make sure the appliance has cooled down and there are no glowing embers in the combustion chamber.
2. To avoid any up swirl of ashes during cleaning, remove the ashes from the appliance.

3. Clean the glass with a soft cloth, a sponge or paper. Use glass cleaner or ceramic hob cleaner.

Caution:




The side glass has a heat reflective coating on the outside. To avoid damage to this coating, **do not use scouring liquid, scouring powder or cleansing liquid that contains ammoniac** to clean the outside of the glass. Use only:

- neutral cleaning liquids
- soft cloth or sponge

Tip:



Remove the 2 side log guards before cleaning the 2 side glasses.

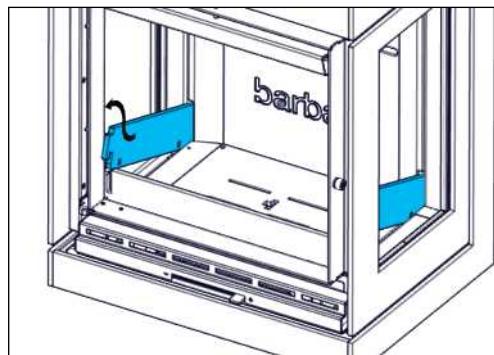

4. Make sure that the glass is dry. Water droplets can leave a mark on the glass.

Note:



Damaged or broken glass must be replaced before the appliance can be used again.

9 Troubleshooting

Table 7: Troubleshooting

Problem	Possible cause	Possible solution
Chimney fire (recognized by a roaring sound in the chimney)	Ignition of soot and tar deposits in the chimney.	<ul style="list-style-type: none"> Set the control lever in the far left position. Call the emergency services. (112) Put out the fire in the appliance with sand. <p>Warning:</p>  <p>Never use water to put out the fire.</p> <ul style="list-style-type: none"> Ventilate the house. <p>After the chimney has been extinguished, sweep the chimney and inspect for damage.</p> <p>Sweep the chimney minimum once a year by a certified chimney sweep.</p>
The wood logs do not ignite	The moisture content of the wood logs is too high	<ul style="list-style-type: none"> Use dried wood logs with a moisture content of 10 - 20 %. Use wood briquettes
	The combustion chamber is not warm enough	<ul style="list-style-type: none"> Do the recommended ignition procedure. Refer to chapter 7.3.1. Use the recommended amount of fuel. Refer to chapter 6.2.
The wood logs burn too fast	Primary air inlet is open.	<p>Close the primary air supply. Adjust the amount of secondary air and air wash with the control lever. Refer to chapter 7.3.3.</p>
	The chimney draught is too high	<ul style="list-style-type: none"> Reduce the amount of secondary air and airwash with the control lever. Refer to chapter 7.3.3 Contact your installer.
The temperature of the room does not rise sufficient	The fuel amount is too low	Use the recommended amount of fuel. Refer to chapter 6.2 .
	The chimney draught is too high	Contact your installer.
Excessive smoke escapes when the door of the combustion chamber is open	The chimney draught is too low	<ul style="list-style-type: none"> Do the recommended ignition procedure. Refer to chapter 7.3.1. Remove one or more break out strips from the upper baffle. Refer to chapter 7.3.4. Contact your installer.

Problem	Possible cause	Possible solution
The glass becomes black	The combustion chamber is not hot enough	<ul style="list-style-type: none"> • Use the recommended amount of fuel. Refer to chapter 6.2. • Increase the amount of combustion air with the control lever. Refer to chapter 7.3.3. • Put the wood logs diagonally and as wide as possible on the combustion chamber floor.
	The moisture content of the wood logs is too high	<ul style="list-style-type: none"> • Use dried wood logs with a moisture content of 10 - 20 %. • Use wood briquettes
	The seal around the door is damaged	Contact your dealer.
Some cold air flows out from the front of the appliance when the appliance is not in use.	The valve in the external combustion air supply line is missing or is open.	Close the valve in the external combustion air supply line.
	The underpressure in the installation room is too high	Reduce the underpressure, for example by opening a ventilation opening in the installation room.

10 Technical data

Name	Barbas
Model	BOX Panorama 65, BOX Panorama 65 with wood log storage module, BOX Panorama 65 with support frame
Tested in accordance with	EN 13240:2001-A2:2004 EN 16510-1 annex D, E, F
Energy efficiency index (according EU 2015/1186)	101,5
Energy efficiency class	A
Fuel	<ul style="list-style-type: none">• Wood logs• Wood briquettes (without binder)
Nominal fuel load	2 kg
Nominal heat output (net)	9.2 kW
Minimum heat output (net)	7 kW
Useful efficiency (Net Calorific Value (NCV)) at nominal heat output	76.2 %
Useful efficiency (Net Calorific Value (NCV)) at minimum heat output (indicative)	80 %
Indirect heating function	No
Room sealed	No
The specific precautions that shall be taken when the local space heater is assembled, installed or maintained, are listed in the attached documents:	<ul style="list-style-type: none">• Installation and maintenance manual• User manual

11 **Warranty Terms**

Barbas Bellfires Warranty Terms

Barbas Bellfires B.V. guarantees the quality of the supplied Barbas appliance and the quality of the materials used. All Barbas appliances are developed and manufactured according to the highest possible quality standards. If, despite all this, something should prove amiss with the Barbas appliance you have purchased, Barbas Bellfires B.V. offers the following manufacturer's warranty.

Article 1: Warranty

1. If Barbas Bellfires B.V. determines that the Barbas appliance you have purchased is defective as a result of a flaw in the construction or material, Barbas Bellfires B.V. guarantees to repair or replace the appliance free of charge, without charging any costs for labor or spare parts.
2. Repair or replacement of the Barbas appliance will be undertaken by Barbas Bellfires B.V. or by a Barbas dealer as designated by Barbas Bellfires B.V.
3. This warranty is supplementary to the existing legal national warranty of Barbas dealers and Barbas Bellfires B.V. in the country of purchase and is not intended to restrict your rights and claims based on the applicable legal provisions.

Article 2: Warranty conditions

1. Should you wish to claim under the warranty, please contact your Barbas dealer.
2. Complaints should be reported as quickly as possible after they have manifested themselves.
3. Complaints will only be accepted if they are reported to the Barbas dealer, together with the serial number of the Barbas appliance which is stated on the front of the instructions for use.
4. In addition, the original receipt (invoice, receipt, cash receipt) showing the date of purchase must also be submitted.
5. Repairs and replacements during the warranty period do not give any entitlement to an extension of the warranty period. After a repair or replacement of warranty parts, the warranty period shall be deemed to have started on the date of purchasing the Barbas appliance.
6. If a certain part is eligible for the warranty and the original part is no longer available, Barbas Bellfires B.V. shall ensure that an alternative part of at least the same quality shall be provided.

Article 3: Warranty exclusions

1. The warranty on the Barbas appliance ceases to be in effect if:
 - a. it is not installed according to the supplied installation instructions, and to national and/or local regulations;
 - b. it has been installed, connected or repaired by a non-Barbas dealer;
 - c. it has not been used or maintained according to the instructions for use;
 - d. it has been changed, neglected or roughly treated;
 - e. it has been damaged as a result of external causes (outside the appliance itself), for example, lightning strike, water damage or fire;
2. In addition, the warranty lapses if the original purchase receipt shows any change, deletion, removal or if it is illegible.

Article 4: Warranty area

1. The warranty is only valid in those countries where Barbas appliances are sold through an official dealer network.

Article 5: Warranty period

1. This warranty will only be granted during the warranty period.
2. The body of the Barbas appliance is guaranteed for a period of 10 years against construction and/or material faults, starting from the moment of purchase.
3. For other parts of the Barbas appliance, a similar warranty applies from the moment of purchase for a period of one year.
4. For user parts such as glass, glass (cord) and the interior of the combustion chamber, a similar guarantee is given until after the first burning.

Article 6: Liability

1. A claim granted by Barbas Bellfires B.V. under this warranty does not automatically imply that Barbas Bellfires B.V. also accepts liability for any possible damage. The liability of Barbas Bellfires B.V. never extends further than that stated in these warranty conditions. Any liability of Barbas Bellfires B.V. for consequential damage is expressly excluded.
2. That stated in this provision is not valid if and to the extent that it derives from a mandatory provision.
3. All agreements entered into by Barbas Bellfires B.V. are, unless specifically stated otherwise in writing and to the extent that they are permitted based on applicable law, subject to the FME-CWM general sales and delivery conditions for the technology industry.

Barbas Bellfires B.V.
Hallenstraat 175531 AB Bladel
The Netherlands
Tel: +31-497339200
Email: info@Barbas.com

Carefully retain the user manual; it shows the serial number of the appliance. You will need this if you wish to claim under the warranty.

barbas .

Your Barbas dealer

001 - -