


barbas .

Installation and maintenance manual

Universal-6 80

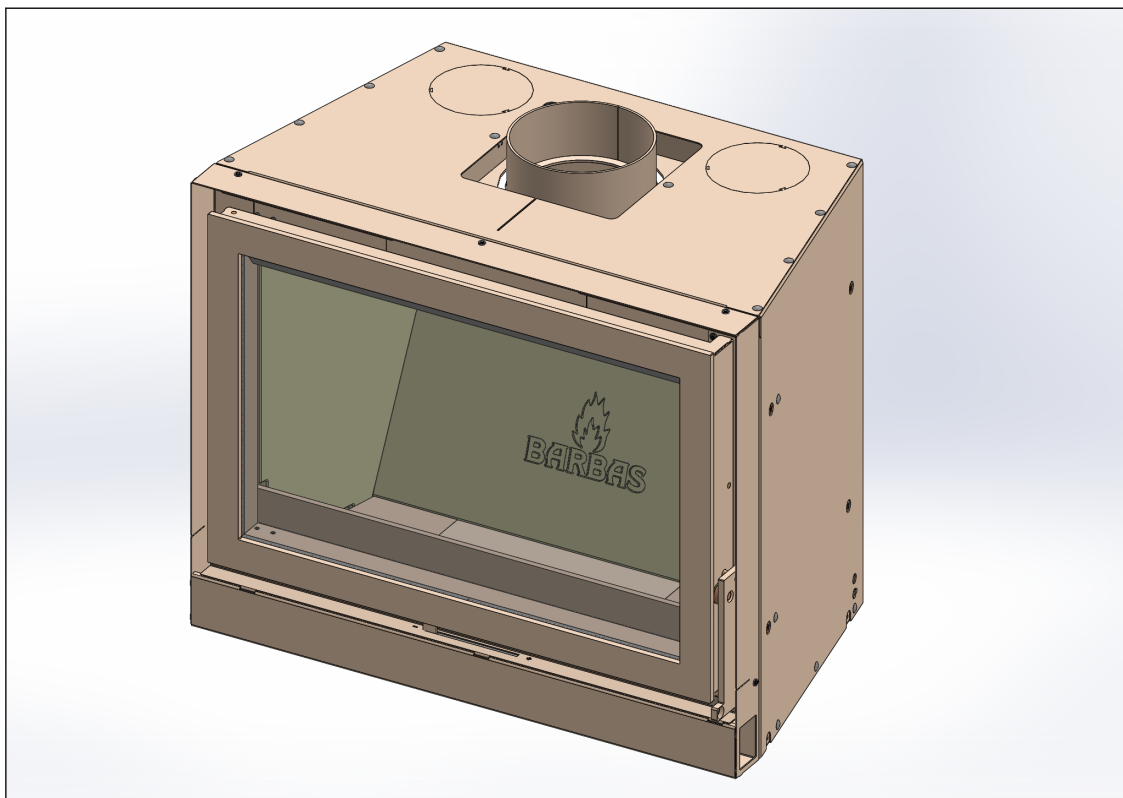

This product is not suitable for primary heating purposes



Serial number:

Production date:

© Barbas BV

This document or parts thereof may not be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, nor otherwise, without the prior written permission of Barbas BV. This document could contain technical inaccuracies or typographical errors. Barbas BV reserves the right to revise this document from time to time in the contents thereof.

Contact information

Barbas BV

Hallenstraat 17, 5531 AB Bladel, The Netherlands

E-mail: info@barbas.com

www.barbas.com

Contents

1	Declaration of performance.....	5
2	About this document.....	6
2.1	How to work with this document.....	6
2.2	Warnings and cautions used in this document.....	6
2.3	Related documentation.....	6
3	Description.....	7
3.1	Overview of the front of the appliance.....	7
3.2	Overview of the rear of the appliance.....	8
3.3	Overview of the bottom of the appliance.....	9
3.4	Appliance options.....	9
3.5	Intended use.....	9
3.6	Installation examples.....	10
3.6.1	Installation in an existing fireplace.....	10
3.6.2	Installation in a new fireplace, without convection air package.....	11
3.6.3	Installation in a new fireplace, with convection air package.....	11
4	Safety.....	12
4.1	Safety instructions for installation.....	12
4.2	Safety instructions with regard to the environment.....	12
5	Clearances.....	13
5.1	Insulating material requirements.....	13
5.2	Clearances to flammable or load-bearing walls.....	13
5.3	Clearance to flammable floor (under the appliance).....	14
5.4	Clearances to flammable ceiling.....	14
5.5	Clearances to non-flammable walls.....	15
5.6	Clearances to a non-flammable ceiling.....	17
5.7	Mantel clearances.....	18
5.8	Clearances in front of the appliance.....	21
6	Installation requirements.....	23
6.1	Requirements on the installation of the appliance in an existing fireplace.....	23
6.2	Requirements on the installation of the appliance in a new fireplace.....	23
6.3	Requirements on the chimney.....	24
6.4	Requirements on the external combustion air pipe.....	25
6.5	Requirements on the ventilation/convection air openings.....	25
7	Installation in an existing open fireplace.....	27
7.1	Install the appliance - general procedure.....	27
7.2	Preparation.....	27
7.3	Install the appliance.....	28
7.4	Aligning with adjustable feet.....	28
7.5	Final check on the appliance.....	28

8	Installation in a new fireplace.....	29
8.1	Install the appliance - general procedure.....	29
8.2	Preparation for installation.....	29
8.3	Install the appliance.....	29
8.4	Horizontally align the appliance.....	30
8.4.1	Aligning with adjustable feet.....	30
8.4.2	Aligning with adjustable high feet.....	30
8.5	Connect the convection ventilator (optional).....	30
8.6	Connect the flue gas pipe.....	30
8.7	Connect the external combustion air supply.....	31
8.7.1	Connect the optional external air supply (bottom connection).....	31
8.7.2	Connect the optional external air supply (rear connection).....	32
8.8	Connect the convection set (optional).....	32
8.8.1	Convection air via the front of the appliance.....	33
8.8.2	Convection air via the top outlet openings.....	33
8.9	Insulate the appliance.....	34
8.10	Build the fireplace.....	35
8.11	Final check on the appliance.....	35
9	Maintenance.....	37
9.1	Appliance.....	37
9.2	Combustion air supply.....	37
9.3	Convection air system.....	37
9.4	Chimney.....	37
9.5	Removal of the bottom plates, grate and ash tray.....	38
9.6	Removal of the baffle.....	39
9.6.1	Remove the heat shield.....	39
9.6.2	Remove the baffle.....	40
9.7	Install the bottom plates, ash tray and grate	40
9.8	Installation of the baffle.....	41
9.8.1	Install the baffle.....	41
9.8.2	Install the heat shield.....	42
9.9	Disassembly of the ventilator.....	43
10	Technical data.....	45
10.1	Technical data.....	45
10.2	Connection scheme convection ventilator	47
10.3	Product information according regulation (EU) 2015/1185.....	48
10.4	Explanation of used notations on typeshield.....	49
11	Dimensions	50
11.1	Universal-6 80, frameless.....	50
11.2	Universal-6 80 with built-in frame.....	51
11.3	Universal-6 80 with classic frame.....	52
11.4	BARBAS Airbox 160 with 4 insert models.....	53
11.5	BARBAS Airbox 320 with 4 insert models.....	54
12	Warranty Terms.....	55

1

Declaration of performance

barbas bellfires .
Crafted to wonder

EU-declaration of conformity			
This EC declaration of conformity applies to the product described below and describes the conformity with the following directives: 2009/125/EC Directive for the setting of eco-design requirements for energy-related products (eco-design directive) Relevant Regulation: (EU) 2015/1185			
Declaration of Performance			
No. 1.804.003-6 - CPR-2013/07/01			
Unique identification code of the product type:		Universal-6 80	
Intended use:		Space heating in residential buildings	
Manufacturer:		Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands	
System of AVCP:		3	
Harmonised technical specifications:		EN 16510-2-2:2022	
Notified body:		No. 0608	
Essential characteristics			
<i>Mechanical resistance and stability</i>			
Load bearing capacity		N/A	
<i>Safety in case of fire - Protection of combustible materials</i>			
Minimum distance to combustible materials			
Bottom (d _b):		0 cm	
Floor in front (d _f):		60 cm	
Ceiling (d _c):		0 cm	
Rear (d _a):		0 cm	
Side (d _s):		0 cm	
Side radiation area (d _r):		150 cm	
Front (d _p):		150 cm	
Insulation material:		10 cm plates with $\lambda \leq 0.1$ W/m.K	
<i>Hygiene, health and the environment</i>			
Carbon monoxide emission (CO)		At nominal heat output 801 mg/m ³	
Nitrogen oxides emission (NO _x)		109 mg/m ³	
Emission of organic gaseous carbon (OGC)		65 mg/m ³	
Particulate matter emission (PM)		27 mg/m ³	
<i>Safety and accessibility in use</i>			
Data for installation to a chimney			
At nominal heat output			
Flue gas outlet temperature		376 °C	
Minimum flue draught		12 Pa	
Flue gas mass flow		12.2 g/s	
Fire safety of installation to the chimney		T400 G minimum	
<i>Energy economy and heat retention</i>			
Appliance's thermal heat output and energy efficiency			
At nominal heat output			
Space heat output		12 kW	
Efficiency		75.7 %	
Seasonal space heating efficiency		65.4 %	
Energy efficiency index (EEI)		99	
Energy efficiency class		A	
At nominal heat output		At part load heat output	
Electric power consumption		0.031 kW	
		0.012 kW	
		Standby mode	
		0 kW	
<i>Sustainable use of natural resources</i>			
Environmental sustainability		NPD	
The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.			
Signed for and on behalf of the manufacturer by:			
Danny Baijens, CEO		Bladel, The Netherlands 10 December 2025	

2 About this document

This document shows the necessary information to do these tasks on the Universal-6 80

- Installation
- Maintenance

This document refers to the Universal-6 80 as 'the appliance'. This document is an essential part of your appliance. Read it carefully before you do work on the appliance. Keep it in a safe place.

The original instructions of the document are in English. All other language versions of the document are translations of the original instructions. It is not always possible to provide a detailed illustration of every single item of the equipment. The illustrations in this document show a typical setup. The illustrations are for instructional use only.

2.1 How to work with this document

1. Make yourself familiar with the structure and content of the document.
2. Read the safety section in detail.
3. Make sure that you understand all the instructions.
4. Do the procedures completely and in the given sequence.

2.2 Warnings and cautions used in this document

Warning

If you do not obey these instructions, there is a risk that can cause personal injury or death.

Caution

If you do not obey these instructions, there is a risk of damage to the appliance, installation or to property.

Note

A note shows more information.

Symbol	Description
	Visual sign that there is a hazard
	Visual sign that there is a notice

2.3 Related documentation

- Installation and maintenance manual
- User manual


3 Description



Note:

The appliance is a room-sealed appliance only if combustion air comes from the outer side of the building through a pipe that is connected to the combustion air inlet of the appliance. In all other cases the appliance is not a room-sealed appliance and the data for leak tightness as given in section 10 are not valid.


3.1 Overview of the front of the appliance

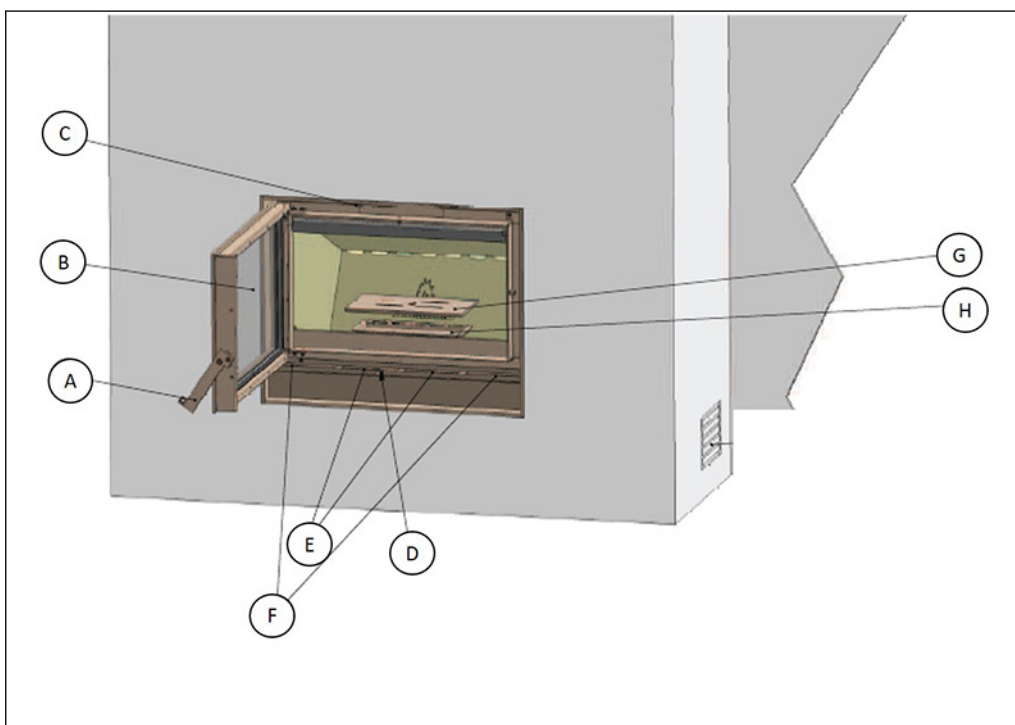

- A Door handle
- B Glass
- C Front convection air outlet
- D Control lever

- E Combustion air inlet
- F Convection air inlet
- G Grate
- H Ash tray


3.2 Overview of the rear of the appliance

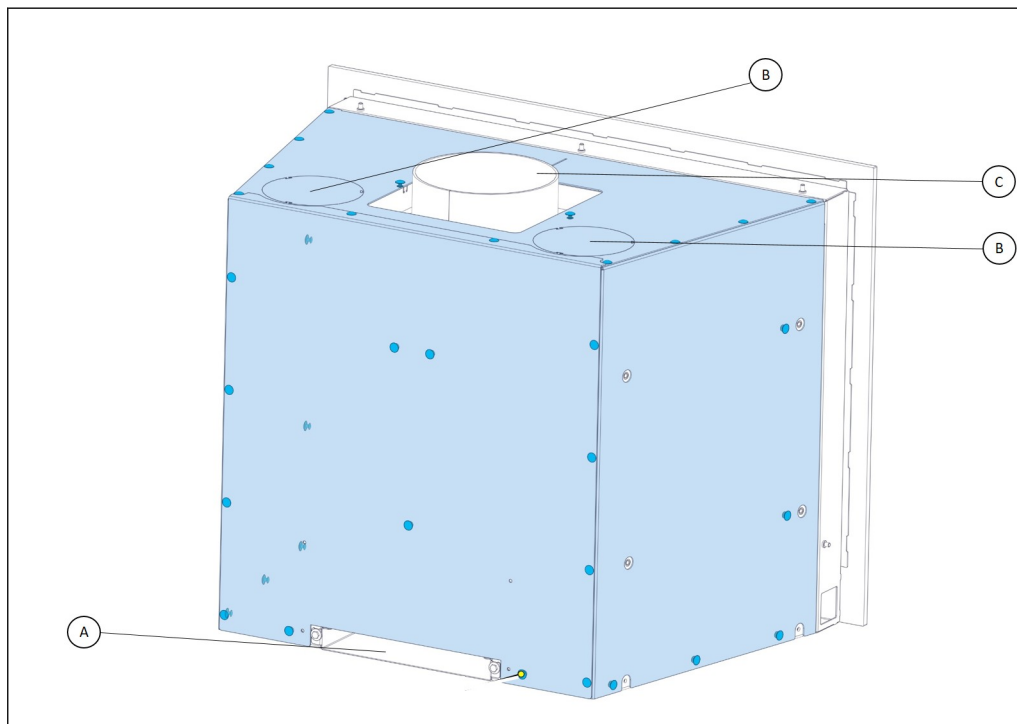

A Rear combustion air inlet

C Flue gas outlet


B Convection air outlet

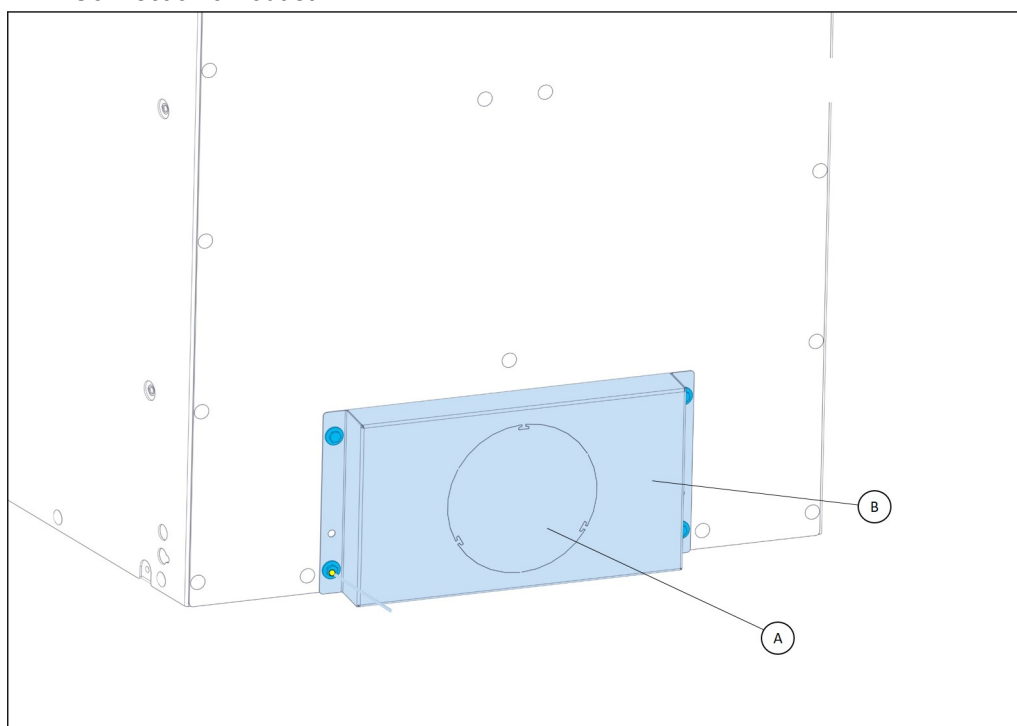

A Break plate for combustion air supply connection

B Adapter box for the combustion air supply connection

3.3 Overview of the bottom of the appliance

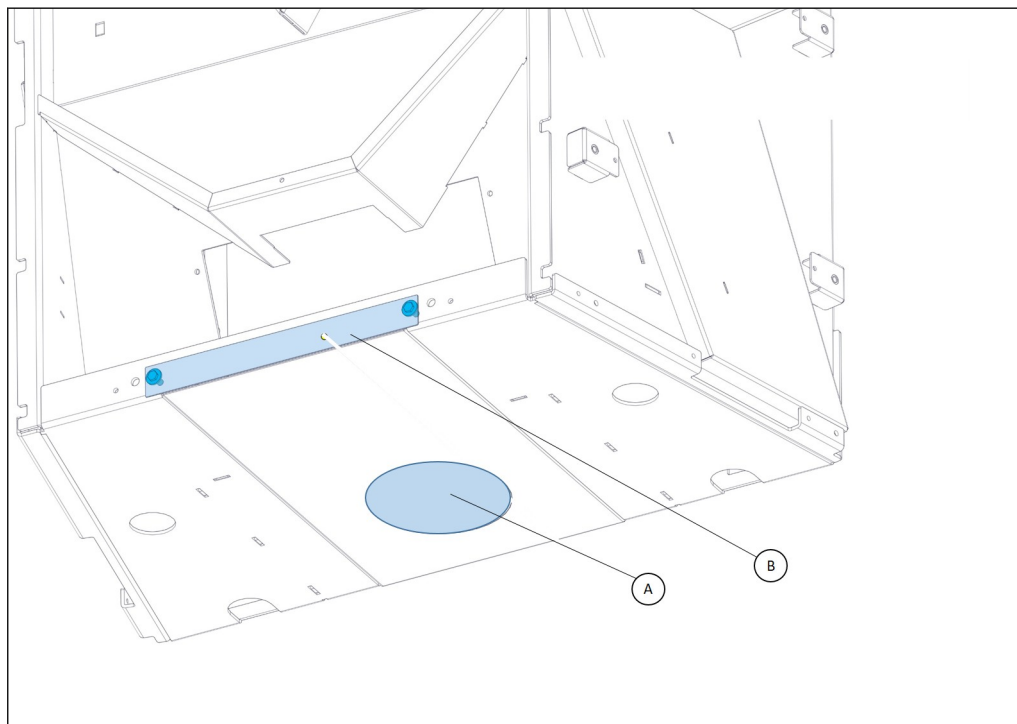

A Break plate for combustion air supply connection

B Cap on the combustion air box. Necessary if the appliance has an external combustion air supply

3.4 Appliance options

Option	Description
Convection ventilator	The appliance can be equipped with a convection ventilator.
Convection set	The appliance can be installed with a convection set. The convection set collects the heated convection air from the appliance and releases this air into the room.
Adjustable high feet	The appliance can be equipped with 4 adjustable high feet, for installation on an elevated level.

3.5 Intended use

The appliance is intended for indoor use to heat the room wherein it is installed. Do not use it for other purposes.

It is not allowed to use the appliance as primary heating appliance.

The appliance is intended for use with wood logs or wood briquettes as fuel. Do not use other fuels and waste.

The appliance is intended for use with the door closed.

The appliance may only be used at the location that meets the requirements for the installation of the appliance.


The appliance is intended for intermittent use and is not intended for continuous use.

It is not allowed to connect the appliance on a shared flue gas channel.

The appliance is intended to heat the room by direct heating. It is not allowed to connect the appliance to a central-heating installation.

3.6 Installation examples

3.6.1 Installation in an existing fireplace

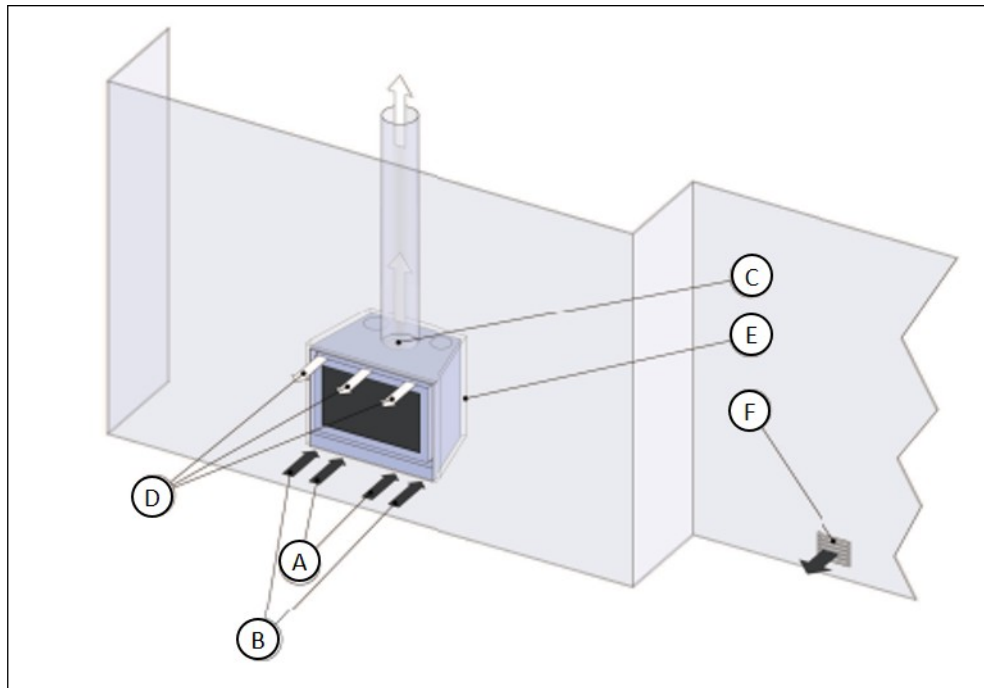


A Combustion air inlet
B Convection air inlet
C Flue connection

D Convection air outlet
E Insulating material
F Air supply to the room

3.6.2


Installation in a new fireplace, without convection air package

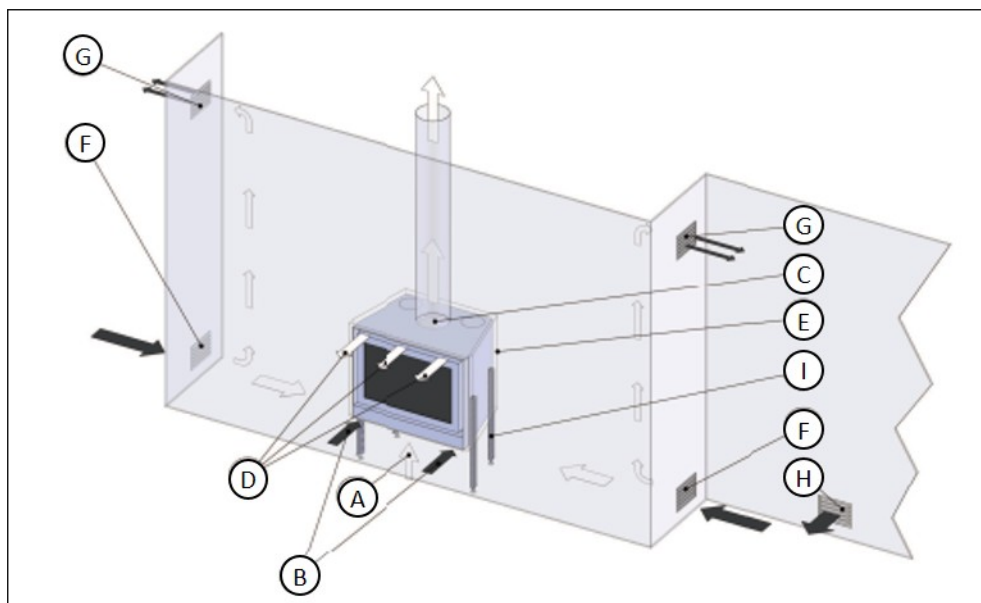

- | | | | |
|---|---|---|-------------------------------|
| A | External combustion air inlet via the bottom or rear of the appliance | E | Insulating material |
| B | Convection air inlet | F | Inlet opening ventilation air |
| C | Flue connection | G | Ventilation air outlet |
| D | Convection air outlet | H | Air supply to the room |

3.6.3

Installation in a new fireplace, with convection air package

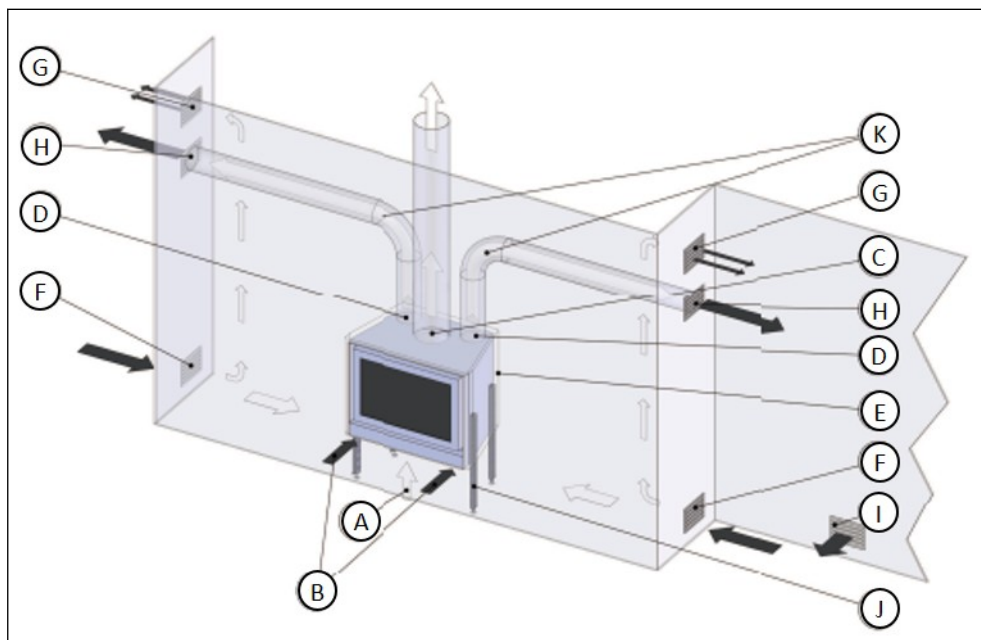

- | | | | |
|---|---|---|-----------------------------------|
| A | External combustion air inlet via the bottom or rear of the appliance | G | Ventilation air outlet |
| B | Convection air inlet | H | Convection air outlet |
| C | Flue connection | I | Air supply to the room |
| D | Connection for convection air outlet | J | Adjustable high feet |
| E | Insulating material | K | Flexible tubes for convection air |
| F | Inlet opening ventilation air | | |

4 Safety

4.1 Safety instructions for installation

**Warning:**

- Installation must be done by a qualified installer.
- Install the appliance in accordance with the following installation instructions and the national and local applicable regulations.
- Make sure that the area around the fireplace is free of combustible material at all times. The minimal safe distance is 100 cm.
- If applicable, contact the authorities if it is allowed to connect the appliance to a flue that is also connected to another appliance.
- Install a carbon monoxide alarm. The carbon monoxide alarm should be battery-powered and designed to operate for the life of the carbon monoxide alarm, following which it should be replaced. Alternatively a mains powered carbon monoxide alarm can be used, however this must be fitted with a sensor failure warning device.

**Caution:**

- Install the appliance on a floor with adequate load-bearing capacity. Refer to section [10.1](#) for the weight of the appliance.
- Make sure that the chimney has no creaks and is in general good order.
- Install a suitable cap on the chimney outlet to avoid birds' nests build in the chimney.
- Parts in the appliance can be moved during transportation. Make sure these parts are in the correct position.
- Do not use masking tape on the appliance. Masking tape can damage the finish of the appliance.
- Do not use fiberglass, rockwool or any other sort of insulation material. These materials produce a pungent odor and can produce discoloration of the appliance.
- Make sure that the brickwork is build with a clearing of minimum 3 mm between the sides and the top of the appliance and the brickwork. The appliance can expand during operation due to heating.
- Make sure that the chimney temperature class is minimum T400 sootfire resistant.
- Do not install the appliance in a room with a ventilation system that makes pressures below -15 Pa.
- Heat radiation from the appliance can cause cracks in a floor plate of natural stone if put directly in front of the appliance. Make sure the floor plate is resistant to temperatures of more than 100 °C. Refer to the supplier of the natural stone for advice.

4.2 Safety instructions with regard to the environment

- Dispose of the packing materials in an environmentally friendly way.
- Dispose of ceramic heat-resistant glass as household waste. Do not dispose of ceramic heat-resistant glass in a glass recycling container.
- Dispose of an obsolete appliance according to instructions of the authorities or the fitter.
- Obey the local regulations.

5 Clearances



Warning:

- Obey the instructions in this section. Failure to follow these instruction can create a fire hazard.
- Do not put the appliance directly against a flammable or non-flammable wall.

5.1 Insulating material requirements

- Use insulating plates with a maximum thermal conductivity of 0.10 W/m.K or a thermal resistance of minimum 10 K.m/W. The table hereunder shows some examples of suitable insulating plate materials.

Examples of suitable plate material	Thermal conductivity
Promat Promatect L insulating board	0.083 W/m.K
Skamol Skamotec 225	0.06 W/m.K
Skamol Super-Isol	0.08 W/m.K

- Only use white unbound ceramic insulation wool. Do not use glass wool or rock wool, these materials can cause a bad smell, unwanted smoke and is not applicable for high temperatures.

Insulation wool property	Requirement
Temperature resistance	> 700 °C
Density	> 80 kg/m ³

5.2 Clearances to flammable or load-bearing walls



Caution: Make sure there is a 3 mm clearance between the appliance and the surrounding construction, to allow for expansion of the appliance during use.

Put a non-flammable insulation plate between the appliance and the rear wall and side wall according the figure hereunder.

Obey the requirements as mentioned in the table hereunder.



Item		Dimension
A	Air gap	2.5 cm
B	Thickness plate	10 cm
C	Air gap / Spacer	2.5 cm
D	A+B+C	15 cm
E	B+C	12.5 cm
F	Minimum 3 mm clearance between appliance and surrounding construction	

Clearance to flammable floor (under the appliance)

Put a non-flammable insulation plate with a minimum thickness of 3 cm under the appliance. To avoid damage to this non-flammable plate, put ceramic or steel tiles (approx. 10 x 10 cm) under the feet of the appliance.

Clearances to flammable ceiling


Put a non-flammable insulation plate (false ceiling) of minimum 7.5 cm thickness at a height of minimum 50 cm above the appliance. Keep a free space of minimum 50 cm (d_C) between the insulation plate and the flammable ceiling.

Alternative without a false ceiling: Make an open space of minimum 50 cm height (d_C) between the chimney enclosure top side (complete width and depth of the enclosure) and the flammable ceiling.

The figure shows the minimum thickness of the insulation plates and the minimum clearances to a flammable ceiling

Make sure the total area of the convection air outlet openings is minimum 440 cm².

Obey the dimensions mentioned in the tabel under the figure.

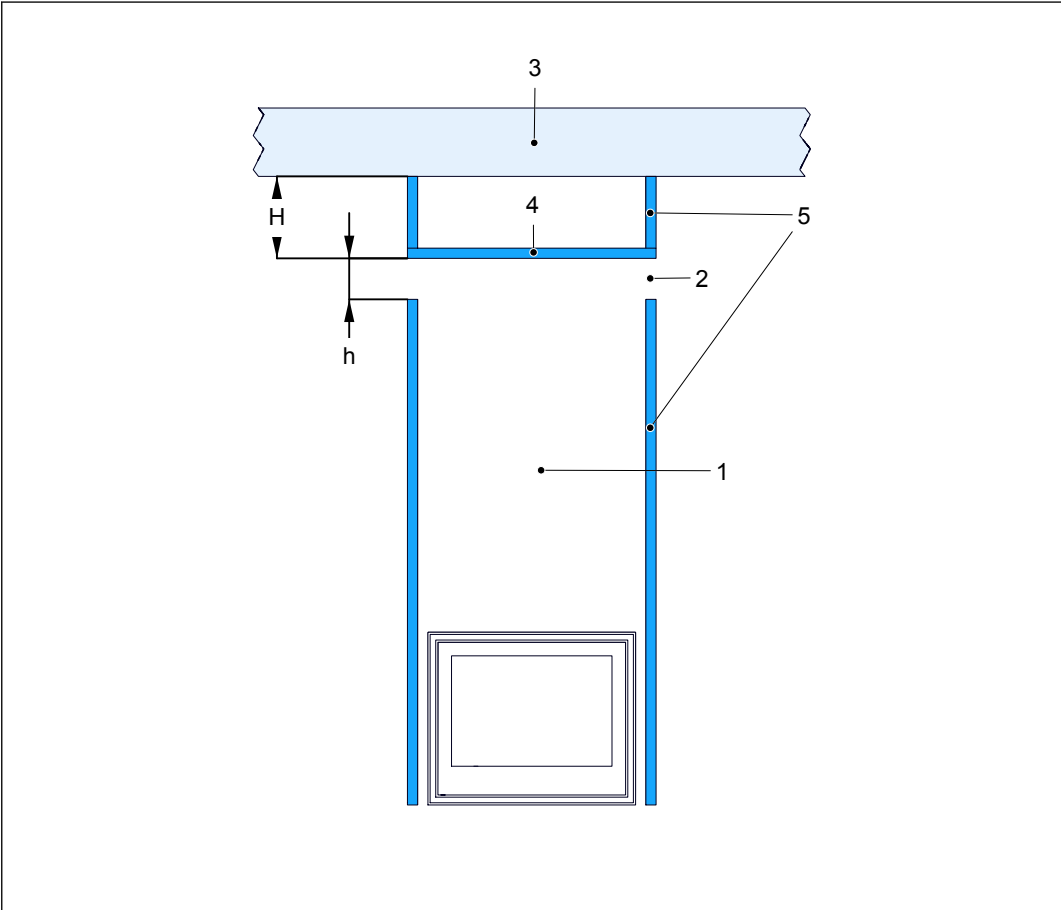

- 1

Chimney enclosure
- 2

Convection air outlet opening
- 3

Flammable ceiling
- 4

Insulation plate (false ceiling)
- 5

Insulation plates

		With false ceiling	Without false ceiling
h	Area of the convection air outlet opening	Minimum 300 cm ²	Minimum 50 cm open space between ceiling and chimney enclosure
H	Height of the false ceiling minimum distance convection air outlet opening - flammable ceiling	Minimum 57.5 cm (= 50 cm free space (d _C) + 7.5 cm false ceiling)	Not applicable (the top side of the chimney enclosure is open with a clearance of minimum 50 cm (d _C) to the flammable ceiling.

5.5 Clearances to non-flammable walls



Caution: Make sure there is a 3 mm clearance between the appliance and the surrounding construction, to allow for expansion of the appliance during use.


Put a non-flammable insulation plate between the appliance and the rear wall and side wall according the figure hereunder.

- | Item | | Dimension |
|------|---|-----------|
| A | Air gap | 2 cm |
| B | Thickness plate | 2.5 cm |
| C | Air gap / Spacer | 2 cm |
| D | A+B+C | 6.5 cm |
| E | B+C | 4.5 cm |
| F | Minimum 3 mm clearance between appliance and surrounding construction | |

5.6 Clearances to a non-flammable ceiling

Put a non-flammable insulation plate (false ceiling) of minimum 5 cm thickness at a height of minimum 50 cm above the appliance.

Obey the dimensions mentioned in the tabel hereunder.

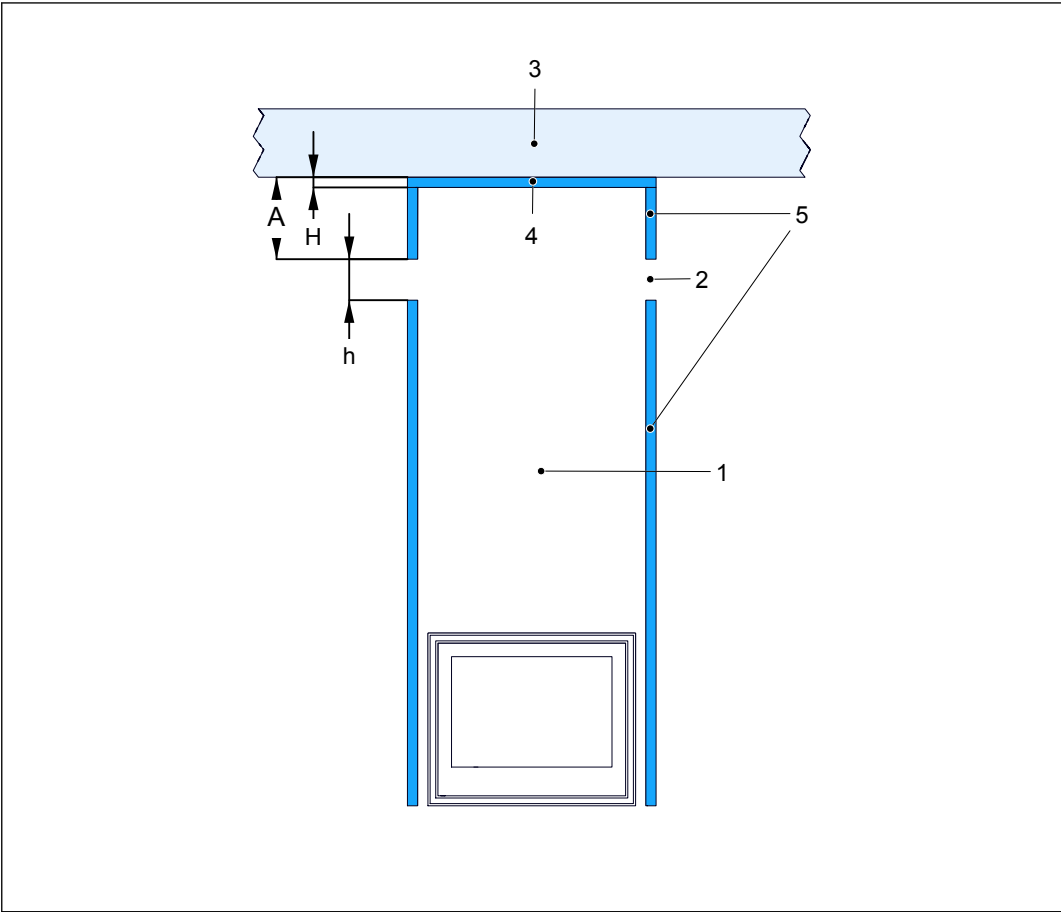

- | | | | |
|---|-------------------------------|---|----------------------------------|
| 1 | Chimney enclosure | 4 | Insulation plate (false ceiling) |
| 2 | Convection air outlet opening | 5 | Insulation plates |
| 3 | Non-Flammable ceiling | | |

		Dimensions
h	Area of the convection air outlet opening	Minimum 300 cm ²
H	Height of the false ceiling	Minimum 5 cm (= thickness false ceiling)
A	Distance between convection air outlet opening and ceiling	Minimum 50 cm

5.7 Mantel clearances




Caution:

All insulation plates in this section must be made of non-flammable material.

Put a mantel piece of flammable material minimum 20 cm from the top and sides of the appliance

If a wooden beam is present directly above the appliance, make sure to protect it against direct heat radiation. Make sure to put a non-flammable insulation plate with a thickness of minimum 3 cm between the wooden beam and the appliance. with an air gap of minimum 1 cm between the insulation plate and the wooden beam.


The pictures below show the minimum clearances between mantel pieces and the appliance.

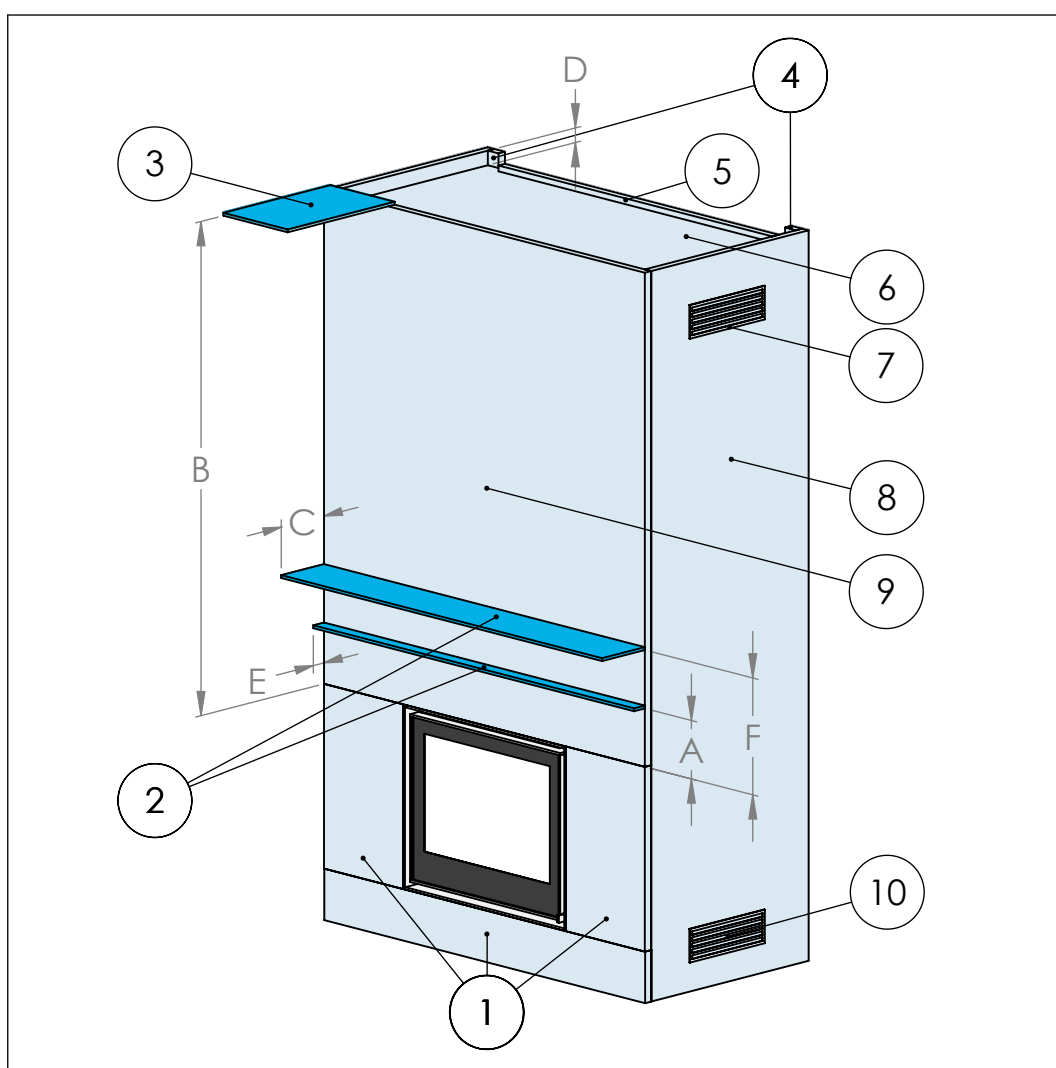

- 1 Insulation plate
- 2 Flammable mantel piece
- 3 Ceiling
- 4 Non-flammable spacer
- 5 Insulation plate back panel

- 6 Non-flammable false ceiling
- 7 Convection / ventilation air outlet openings. Total minimum 440 cm²
- 8 Insulation plate side panel
- 9 Insulation plate front panel
- 10 Convection / ventilation air inlet openings. Total minimum 220 cm²

A	Minimum 20 cm from top of glass
B	Flammable ceiling: minimum 100 cm from glass / Non flammable ceiling: minimum 50 cm from glass
C	Mantel piece depth maximum 20 cm
D	Flammable ceiling: minimum 50 cm / Non flammable ceiling: minimum 0 cm
E	Mantel piece depth: maximum 5 cm
F	Minimum 40 cm from top of glass

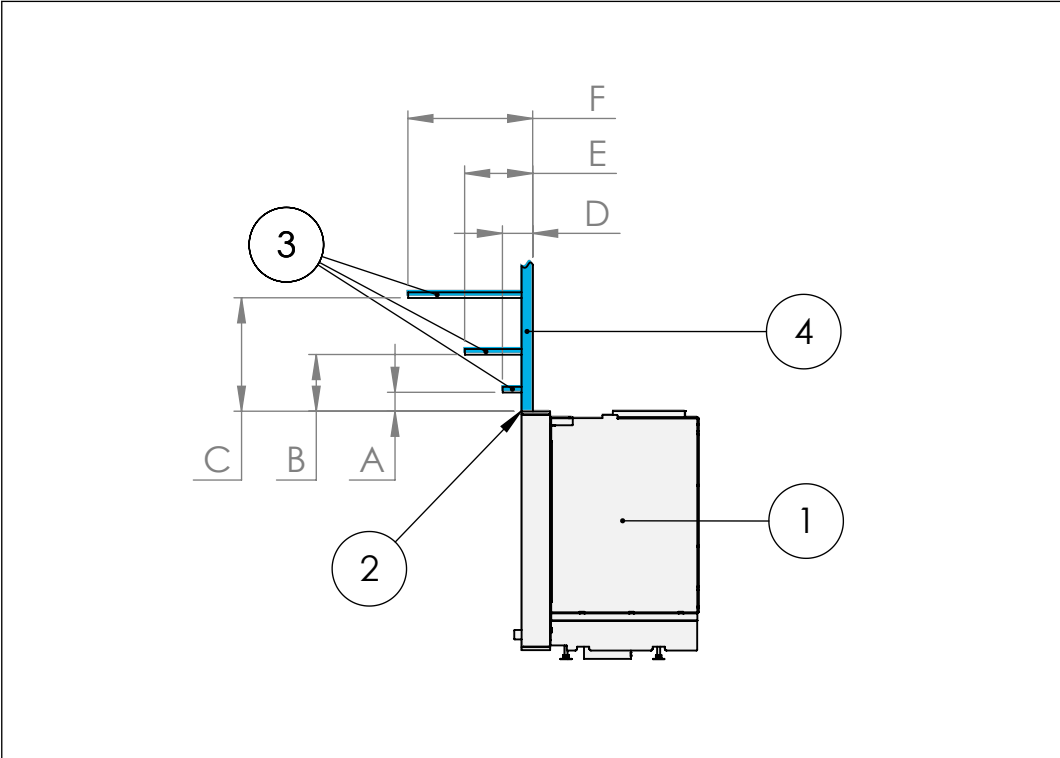

- 1


Appliance
- 2

Top of appliance
- 3

Flammable mantel piece
- 4

insulation plate


Height of mantel piece		Depth of mantel piece	
A	20 cm	D	5 cm
B	30 cm	E	10 cm
C	40 cm	F	20 cm

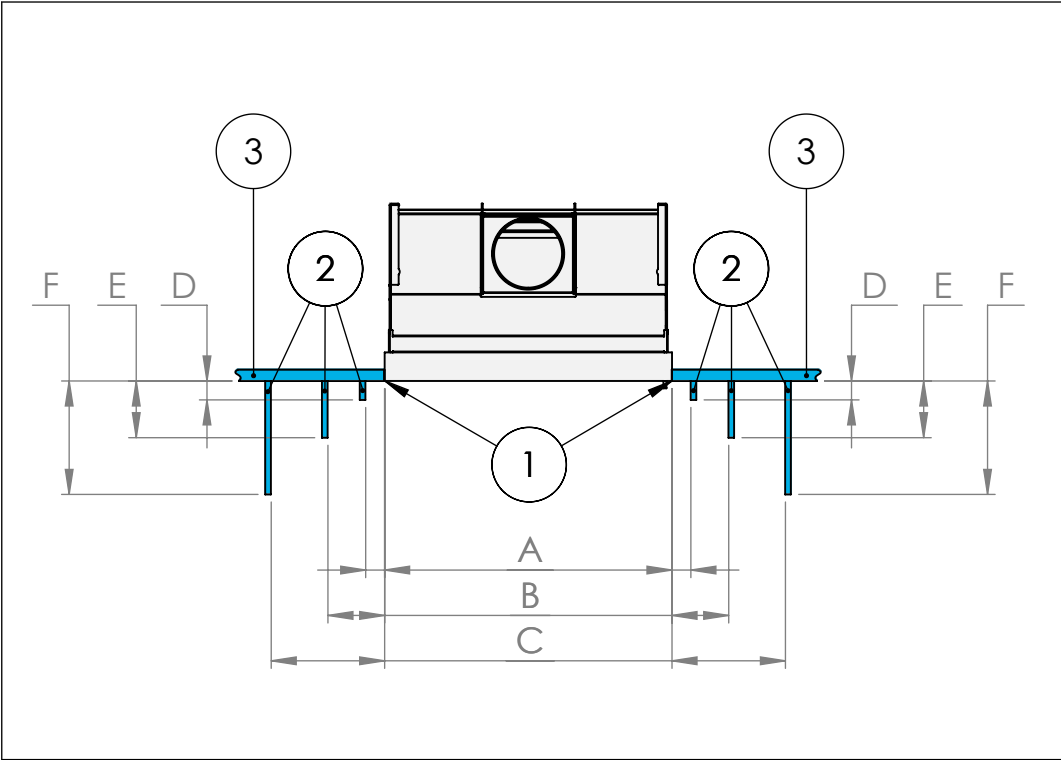

- 1 Side of appliance
2 Flammable mantel piece
3 Insulation plate

Width of mantel piece		Depth of mantel piece	
A	20 cm	D	5 cm
B	30 cm	E	10 cm
C	40 cm	F	20 cm

5.8 Clearances in front of the appliance

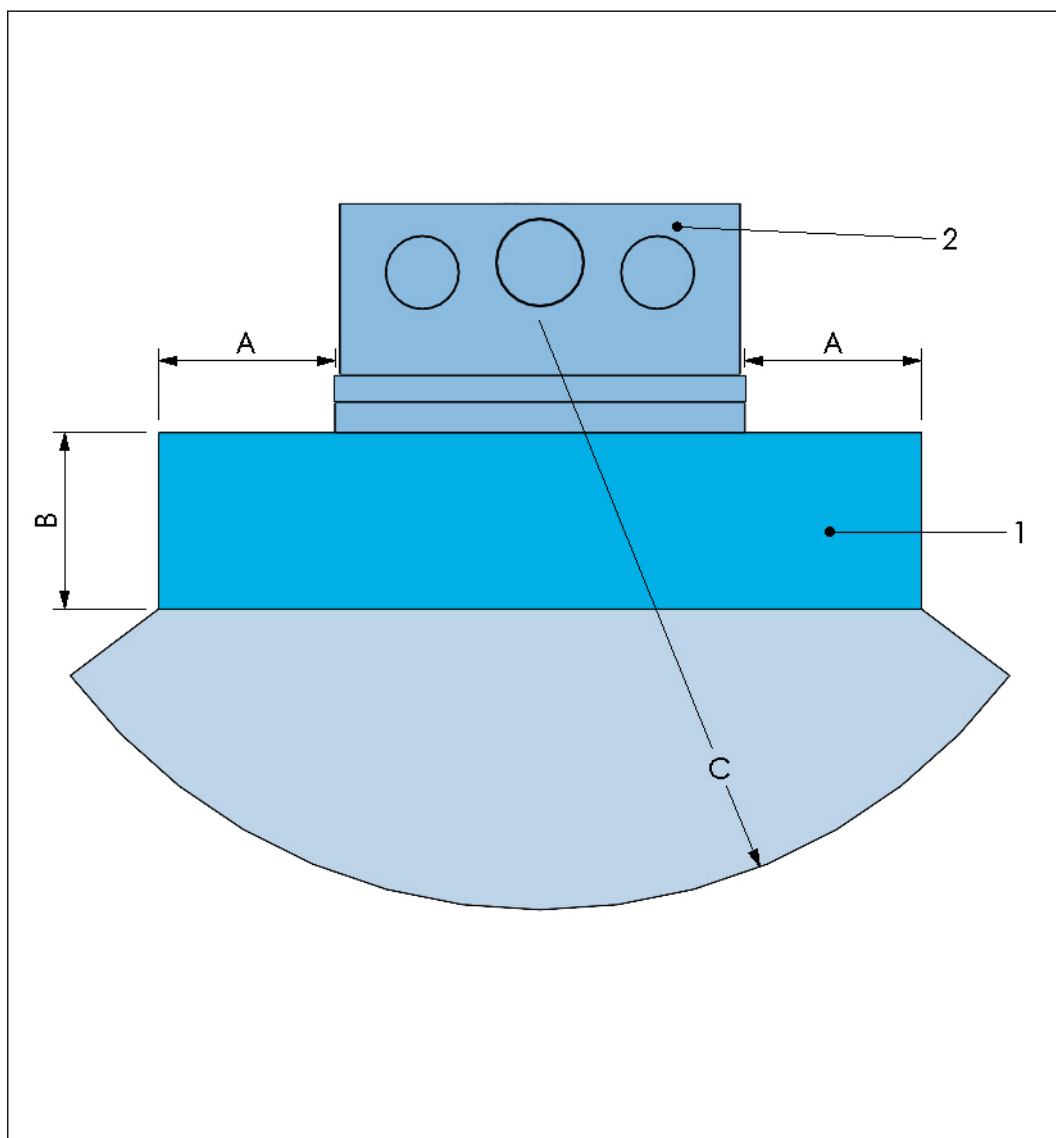

1 Non-flammable floor plate

2 Appliance


Put a non-flammable floor plate with a minimum thickness of 12 mm in front of the appliance above a flammable floor. The depth of the floor plate is dependent on the vertical distance between the bottom of the appliance and the floor.

The non-flammable floor plate must have a width that extends minimum 150 mm from each side of the appliance.



Note: A transparant glass plate is not suitable as floor plate.

A	Minimum 15 cm from the sides of the appliance.
B	Minimum depth of the non-flammable floor plate (see graph for exact depth).
C	Minimum 150 cm clearance (d_L) to the side radiation area of the appliance. Minimum 150 cm (d_p) clearance direct in front of the appliance.

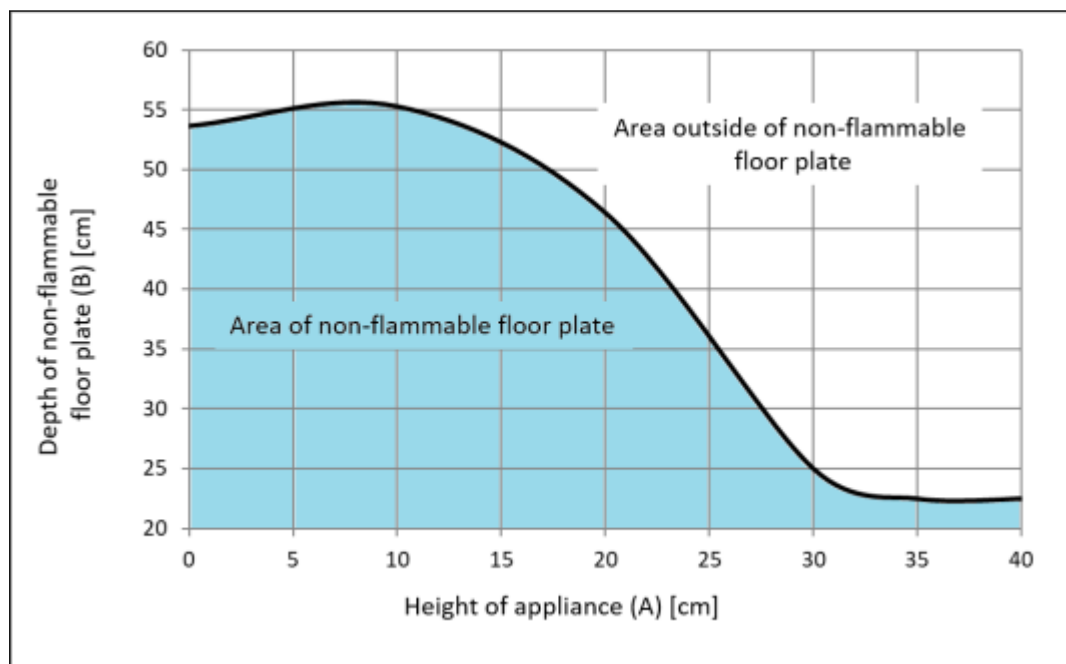

1. Measure the distance between the floor and the bottom of the visible part of the appliance. This is the distance when the appliance is built into a fireplace surround.
2. Read on the vertical axis of the graph the minimum depth of the non-flammable floor plate.

Example to find the correct minimum depth of a non-flammable floor plate

If the measured distance between the bottom of the visible part of the appliance is 20 cm, according to the graph the minimum depth of the floor plate is 47 cm.

6 Installation requirements


6.1 Requirements on the installation of the appliance in an existing fireplace

This section refers to the installation of the appliance in an existing open (masonry) fireplace.

- Make sure that the location agrees with the safety requirements. Refer to section [4.1](#)
- Make sure the opening in the fireplace is large enough for a gap of 1 - 3 cm between the appliance and the inner fireplace walls .
- Make sure the floor can support the weight of the appliance. Refer to section [10.1](#) for the weight of the appliance.
- Make sure that the floor temperatures in front of the appliance cannot be higher than 85 °C, during use of the appliance. Refer to section [5.8](#).
- The non-combustible floor in front of the appliance must have a width that extends at least 150 mm from each side of the appliance and a minimum depth in front of the appliance according the requirements in section [5.8](#).
- Make sure the room where the appliance is installed is properly ventilated.
- Make sure that combustion air can flow into the appliance without obstruction.
- If applicable, install a valve in the external combustion air pipe.
- The carbon monoxide alarm must be fitted and fixed in place within the same room as the appliance and can be placed either on the ceiling or wall between 1 meter and 3 meter horizontally from the appliance. If fitting to the ceiling it must be at least 300mm from any wall. If fitting to a wall, it must be placed as high as possible above any doors or windows at 150mm below the ceiling.

6.2 Requirements on the installation of the appliance in a new fireplace

- Make sure the floor is made of concrete or a solid pedestal of nonflammable material.
- Make sure that the floor temperatures under and in front of the appliance are maximum 85 °C, during use of the appliance. Refer to section [5.3](#) and section [5.8](#).
- Make sure that the location agrees with the safety requirements. Refer to section [4.1](#).
- Do not install the appliance against a combustible rear wall or combustible side wall.
- Make sure to obey the clearances as listed in section [5](#).
- Make sure the floor can support the weight of the appliance. Refer to section [10.1](#) for the weight of the appliance.
- Make sure the room where the appliance is installed is properly ventilated.
- Make sure that combustion air can flow into the appliance without obstruction.
- If applicable, install a valve in the external combustion air pipe.
- If the appliance is equipped with the optional convection ventilator, the combustion air must be supplied from outside through a flexible aluminum pipe to the appliance.
- Make sure there is an earthed wall socket for the power supply of the convection ventilator. This socket must be accessible at all times.
- Make sure the distance between the convection air outlet openings and the ceiling above is minimum 50 cm.
- Make sure the distance between the convection air outlet openings and a neighboring wall is minimum 20 cm.

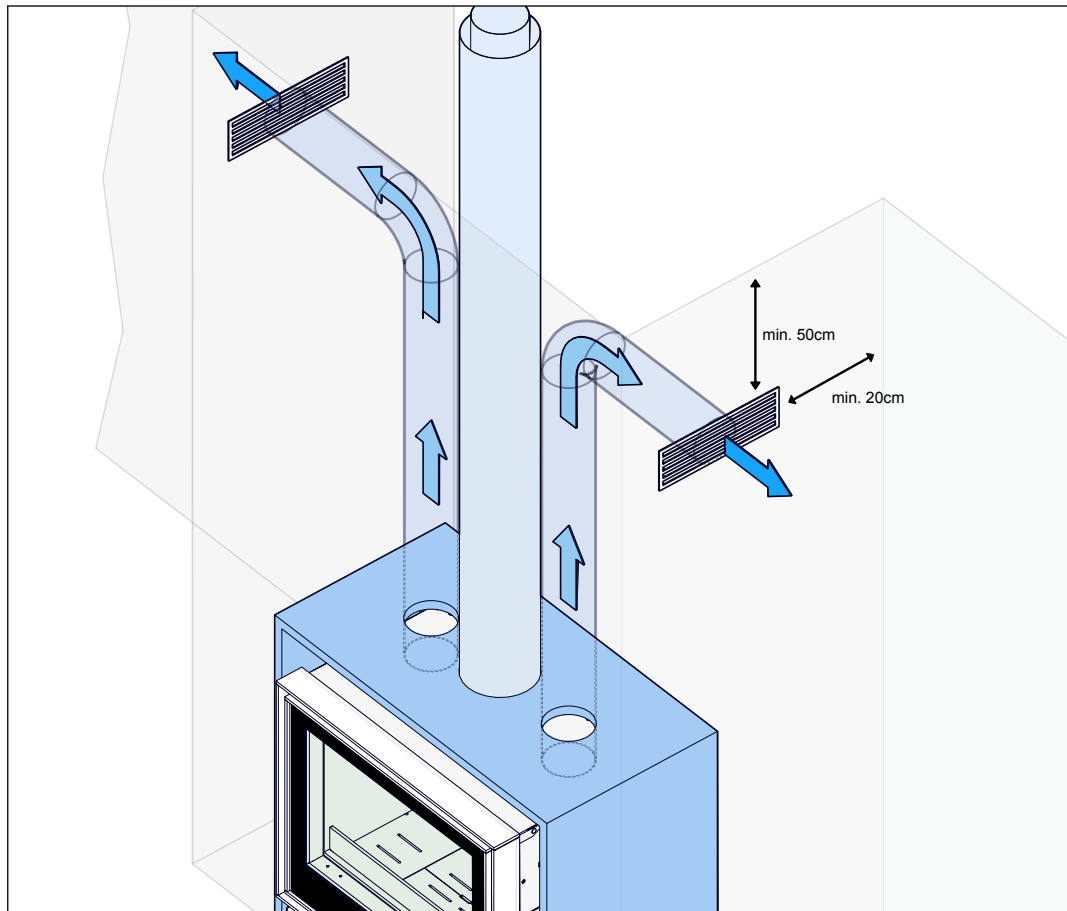

- The fireplace must have ventilation openings near the bottom and near the top of the fireplace to avoid heat accumulation in the fireplace. Refer to section 6.5 for specifications.
- The carbon monoxide alarm must be fitted and fixed in place within the same room as the appliance and can be placed either on the ceiling or wall between 1 meter and 3 meter horizontally from the appliance. If fitting to the ceiling it must be at least 300mm from any wall. If fitting to a wall, it must be placed as high as possible above any doors or windows at 150mm below the ceiling.

6.3 Requirements on the chimney

- Make sure the design and installation of the chimney is in accordance with EN 15287-2:2008, EN 13384-1:2015+A1:2019 and the good operation of the chimney is proven according to EN 13384-2:2015+A1:2019 for the situation on site.
- Make sure that in case of use of an existing (masonry) chimney, it is in good order and applicable for the appliance. Ask your dealer or chimney sweeper for advice.
- Make sure the flue system obeys the national and local applicable regulations.
- Make sure the weight of the chimney is not supported by the appliance.
- Only connect the appliance to a chimney that is also connected with other appliances if it is permitted by local regulations and if the chimney allows to connect multiple appliances to it. Ask your installer for advice.
- The flue system must have a temperature class designation of minimum T400.
- The inner diameter of the chimney must be minimum 180 mm over the total length.
- Use a steel chimney pipe with a wall thickness of minimum 2 mm between the appliance and the existing chimney.
- Do not use more than 2 bends of 45°.

- Do not use horizontal flue pipes.
- The chimney outlet must be minimum 6 meter above the top of the appliance.
- The chimney outlet must be minimum 40 cm above the top of a sloped roof.
- The chimney outlet must be minimum 1 meter above a flat roof.
- The chimney outlet must be free from any objects (buildings, trees, etc.) within a horizontal range of minimum 5 meter.
- Make sure to remove the chimney valve when present in the existing chimney.
- Make sure your fire insurance policy covers any damage caused by a chimney fire.

6.4 Requirements on the external combustion air pipe

- Make sure the external combustion air pipe obeys the national and local applicable regulations.
- The inner diameter of the combustion air pipe must be minimum 125 mm over the total length.
- Use a flexible stainless steel or aluminum pipe.
- The maximum length of the external combustion air pipe is 5 meter.
- Do not use more than 1 bend of 90°.
- Make sure to cover the inlet of the external combustion inlet pipe with a suitable grate.
- It is recommended to install a valve in the external combustion air valve, to avoid debris of fallen leaves in the line and to avoid water vapour condensation in the appliance.

6.5 Requirements on the ventilation/convection air openings

- Install the following minimum openings in the fireplace enclosure to prevent overheating of the appliance and fireplace enclosure.

Ventilation/ convection air <u>in-</u> <u>let</u> opening at the bottom of the fireplace en- closure	Ventilation/convection air <u>outlet</u> opening at the top of the fireplace enclosure		
	Appliance <u>with-</u> <u>out</u> convection casing	Appliance <u>with</u> convection casing	
		Openings at the top of the convection casing are open.	2 openings at the top of the convection casing con- nected with flexible convec- tion pipes Ø125mm to 2 out- let openings.
			Convection air via 2 flexible convection pipes: Minimum net 220 cm ²
			Ventilation air via the inside of the fireplace enclosure: Minimum net 220 cm ²
220 cm ² (*)	440 cm ² (**)	440 cm ² (**)	Total 440 cm ² (**)

The ventilation/convection air openings can be realized with the decorative 'BARBAS AirBox' insert air vents, by using:

- (*): 2x Barbas AirBox 160
- (**): 2x Barbas AirBox 320

BARBAS AirBox	Model	Air vent opening surface
AirBox 160	Insert Frameless	110 cm ²
	Insert Slim Frame	
	Insert Classic Frame	
	Insert Built-in Frame	
AirBox 320	Insert Frameless	220 cm ²
	Insert Slim Frame	
	Insert Classic Frame	
	Insert Built-in Frame	

Refer to sections [11.4](#) and [11.5](#) for the dimensions of the AirBox.


7 Installation in an existing open fireplace

7.1 Install the appliance - general procedure

1. Prepare the appliance. Refer to section 7.2.
2. Install the appliance. Refer to section 7.3.
3. Horizontally align the appliance. Refer to section 7.4.
4. Do a final check. Refer to section 7.5.

7.2 Preparation

1. Remove all items from the floor of the open fireplace.
2. Make sure the floor of the open fireplace is flat and not damaged.
3. Make sure the inner walls of the open fireplace are not damaged.
4. Put a layer of ceramic wool on the 2 sides, rear and top of the appliance. Refer to section 5.1 for specifications of the ceramic wool.
5. Put an appropriate chimney adapter on the existing chimney. Make sure there is no gap between the chimney adapter and the existing chimney.
6. Connect a stainless steel flexible pipe of sufficient length to the chimney adapter and secure it with a hose clamp.
7. Put a layer of ceramic wool around the flexible flue pipe.
8. Remove the heat shield and the baffles of the appliance. Refer to section 9.6 for instructions.

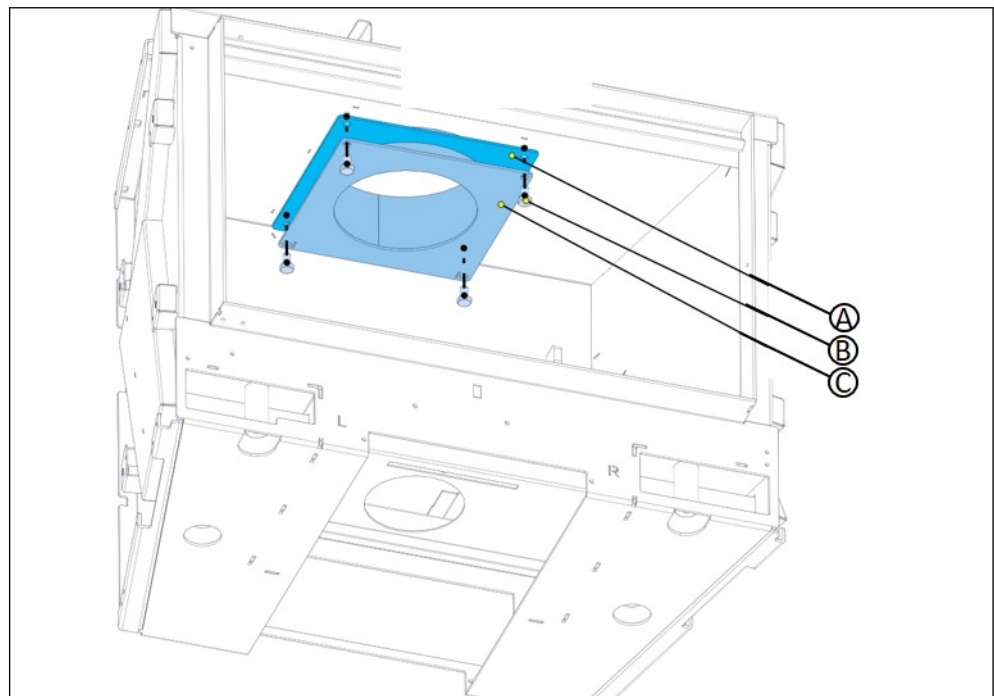


9. Remove the screws that hold the flue pipe connector (B)
10. Carefully remove the flue pipe connector (C). Make sure the gasket (A) on the flue pipe connector does not damage. Replace a damaged gasket.

7.3 Install the appliance

1. Connect the stainless steel flexible flue pipe to the chimney adapter. Use a hose clamp to attach the flexible flue pipe to the chimney adapter.
2. Put the appliance in the correct position in the existing fireplace .
3. Make sure that the appliance is installed horizontally. Use a spirit level.
4. Pull the flexible flue pipe through the opening in the top of the appliance
5. Connect the flexible flue pipe on the flue pipe connector. Use a hose clamp. Make sure the gasket on the flue pipe connector is not damaged.
6. Push the flue pipe connector with the flue pipe into the correct position in the appliance.
7. Attach the flue pipe connector to the appliance with the 4 screws. Make sure the white gasket is in the correct position.
8. Put a layer of ceramic wool on the top of the appliance. Refer to section [5.1](#) for specifications of the ceramic wool.
9. Put all the interior parts in the correct position in the appliance. Refer to section [5.1](#) for instructions.

7.4 Aligning with adjustable feet

1. Remove the two steel bottom plates
2. Level the appliance with the 4 allen screws. Use a 4 mm allen key

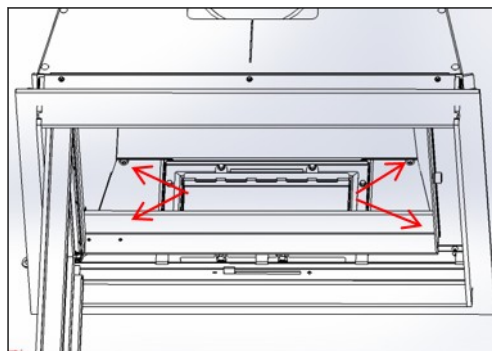

3. Align the appliance horizontal. Use a spirit level.
4. Put the 2 bottom plates in the appliance.

7.5 Final check on the appliance

1. Make sure the door closes and opens easy.
2. Make sure the control lever moves easy to left and right without undue noise.
3. Make sure all combustion chamber panels, the grate and the baffles are in the correct position.
4. Contact your dealer if the final check shows a defect.

8 Installation in a new fireplace

8.1 Install the appliance - general procedure

1. Prepare the appliance. Refer to section [8.2](#).
2. Install the appliance. Refer to section [8.3](#).
3. Horizontally align the appliance. Refer to section [8.4](#).
4. If applicable, make the electrical connection. Refer to section [8.5](#).
5. Connect the flue gas pipe. Refer to section [8.6](#).
6. If applicable, connect the external combustion air supply pipe. Refer to section [8.7](#).
7. If applicable, connect the convection system. Refer to section [8.8](#).
8. Insulate the appliance. Refer to section [8.9](#).
9. Build the fireplace. Refer to section [8.10](#).
10. Do a final check. Refer to section [8.11](#).

8.2 Preparation for installation



Warning:

- The electrical connections must be made by a certified electrician.
- The optional convection ventilator needs a 230 VAC electrical power supply near the installation location. Make sure to have a grounded electrical power supply for the convection ventilator.
- Make sure the electrical connections can always be accessed.
- Make sure the door of the appliance opens and closes correctly.
- Make sure the baffles are in the correct position
- Make sure the control lever can move freely to left and to right.
- Make sure the ashtray is empty.

8.3 Install the appliance



Caution: Do not lift the appliance with any kind of forklift. This will cause damage to the underside of the appliance.



Caution: If the appliance is installed against a flammable rear and/or side wall, precautions must be taken to prevent accidental fire. Refer to section [5](#) for a description of suitable precautions.

1. If applicable remove the 4 adjustable high feet and attach them on the appliance at the desired height.
2. Put a layer of ceramic wool on the sides, rear and top of the appliance.

Note: Do not use rockwool.




3. Install the appliance on the intended location. Make sure the distance between the appliance and rear wall is approximately 10 cm minimum.

4. Make sure the door opens and closes correctly.
5. Refer to section [5](#) for measures to be taken when installed against a flammable rear and/or side wall.

8.4 Horizontally align the appliance

8.4.1 Aligning with adjustable feet

1. Remove the two steel bottom plates
2. Level the appliance with the 4 allen screws. Use a 4 mm allen key

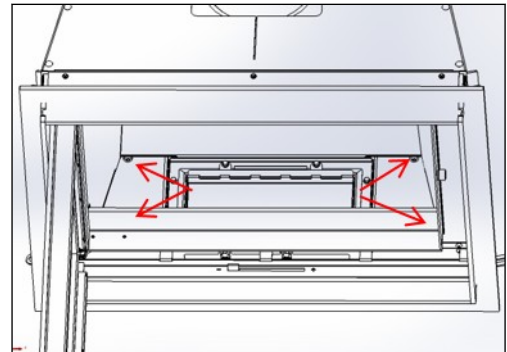

3. Align the appliance horizontal. Use a spirit level.
4. Put the 2 bottom plates in the appliance.

8.4.2 Aligning with adjustable high feet

1. Attach the adjustable high feet with the screws. Make sure each leg is attached with 2 screws.
2. Adjust the 4 adjustable feet with a 13 mm fork spanner until the appliance is level. Use a spirit level.

8.5 Connect the convection ventilator (optional)



Caution:

- Use a wall socket with an earth connection.
- The socket must be accessible at all times.



Note: Refer to section [10.2](#) for the connection scheme.

1. Connect the 230 VAC plug of the convection ventilator with the wall socket.
2. Make sure that the cables do not touch the appliance, due to the high temperatures of the appliance.

8.6 Connect the flue gas pipe

The appliance can be connected to steel pipes, double-walled insulated stainless steel flues and flexible stainless steel flues with an outside diameter of 180 mm.

Preliminary requirements

- If the appliance is installed on an unlined, masonry flue with a large diameter, use an insulated flue lining system .

Preliminary requirements

- Make sure the design and installation of the chimney is in accordance with EN 15287-2:2008, EN 13384-1:2015+A1:2019 and the good operation of the chimney is proven according to EN 13384-2:2015+A1:2019 for the situation on site.



Caution:

- During operation of the appliance the outer side of the flue system becomes hot. Refer to the installation instructions of the flue system for safe installation. Follow these instructions with regard to safe distances to combustible material.

Procedure

1. Connect the flue to the flue gas connection on the appliance. If necessary use a steel flue adaptor.
2. If a flexible stainless steel flue is used, secure the flue connection with 2 clamps.
3. If the flue is connected to an existing (masonry) chimney, make sure that the gap between the flue and the existing chimney is sealed, with ceramic wool or any other applicable component (ask your flue system supplier for advice)
4. Make sure that all mechanical connections of the flue system are correctly used.
5. Make sure that all of the flue system is gas-tight,
6. Insulate any non-insulated pipes with ceramic insulation wool. Refer to section 5.1 for the insulating material requirements.

8.7

Connect the external combustion air supply



Note:


- The appliance is not a room-sealed appliance, even when the external combustion supply is connected.
- It is possible to install the appliance without external air supply and take combustion air from the installation room. If so, make sure the combustion air inlet on the appliance is not blocked and the ventilation air inlets are according to the requirements. Refer to section 6.2 for dimensions of the ventilation air openings.
- The appliance can take combustion air from the outer side of the building through a flexible pipe that is connected to one of these:
 - the combustion air inlet under the appliance.
 - the combustion air inlet at the rear of the appliance
- It is strongly recommended to install a valve in the external combustion air supply pipe, to avoid debris in the pipe and to avoid water vapor condensation in the appliance when not in use.
- Connection under the appliance, refer to section 8.7.1.
- Connection on the rear of the appliance, refer to section 8.7.2.

8.7.1

Connect the optional external air supply (bottom connection)

1. Remove the round break out plate at the bottom of the appliance with a hammer.

2. Put the connection ring in the open external air inlet opening.

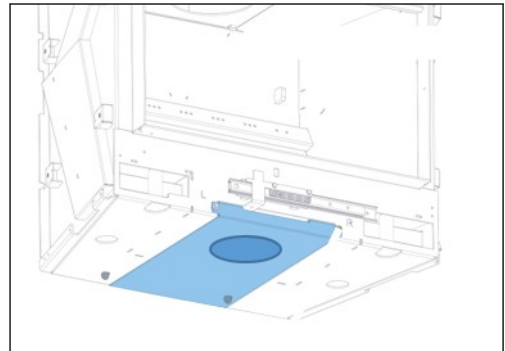


3. Bend out the 3 lips on the connection ring to attach the connection ring on the inlet opening.
4. Identify the location in the floor for the external combustion air supply inlet.
5. Make a hole in the floor with at a minimum diameter of 125 mm.
6. Put a flexible aluminum pipe in the hole.
7. Attach the other end of the flexible aluminum pipe on the connection ring. Use a hose clamp or screws.

8.7.2

Connect the optional external air supply (rear connection)

1. Remove the round break out plate at the rear of the appliance with a hammer.

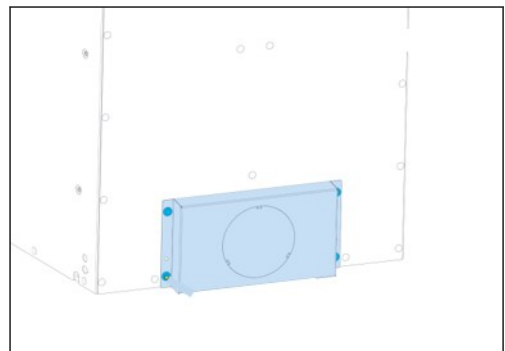

2. Put the connection ring in the open external air inlet opening.
3. Bend out the 3 lips on the connection ring to attach the connection ring on the inlet opening.
4. Identify the location in the outer wall for the external combustion air supply inlet.
5. Make a hole in the outer wall with at a minimum diameter of 125 mm.
6. Put a flexible aluminum pipe in the hole.
7. Install a grate in the hole in the outer wall and attach the flexible aluminum pipe to it.
8. Attach the other end of the flexible aluminum pipe on the connection ring. Use a hose clamp.

8.8

Connect the convection set (optional)

The convection air outlet can go via the front of the appliance or the top of the appliance.

- Outlet of the convection air at the front of the appliance: refer to section [8.8.1](#).
- Outlet of the convection air on top of the appliance: Refer to section [8.8.2](#).

8.8.1

Convection air via the front of the appliance

The appliance air outlet openings on the front of the appliance are open on delivery of the appliance. Do the procedure hereunder to close the convection air openings on the front of the appliance.




Caution: if you close the openings on the front of the appliance, make sure to open the convection air openings on top of the appliance. Refer to section [8.8.2](#). To not obey this can cause damage to the appliance.



Note: A convection ventilator causes a strong air flow from the front outlet openings. To reduce this flow, open the convection air outlet openings on top of the appliance. Refer to section [8.8.2](#).

1. To open the 2 convection air outlet openings, remove the 3 strips with a hexagonal key. Keep the screws.

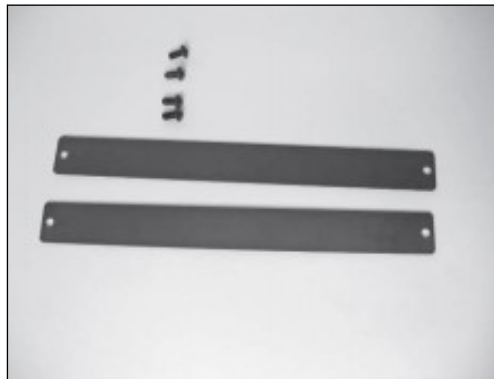

2. To close the 2 convection air outlet openings, attach the 2 metal closure strips with the screws on the appliance.
- 3.




8.8.2


Convection air via the top outlet openings

To close the convection air openings at the front of the appliance, refer to section [8.8.1](#).


1. On the appliance, remove the two break out plates in the convection air outlet openings with a hammer.

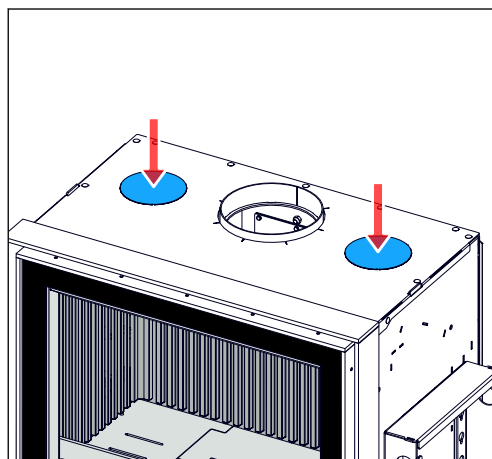

2. Put the connection rings in the open outlet openings (1).
3. Bend out the 3 lips on each connection ring, and turn the connection ring until it locks.

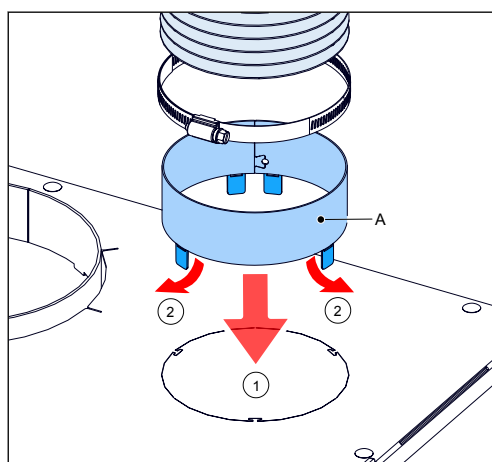

4. Connect the flexible aluminum pipes (C) on the connection rings. Use a hose clamp (B).

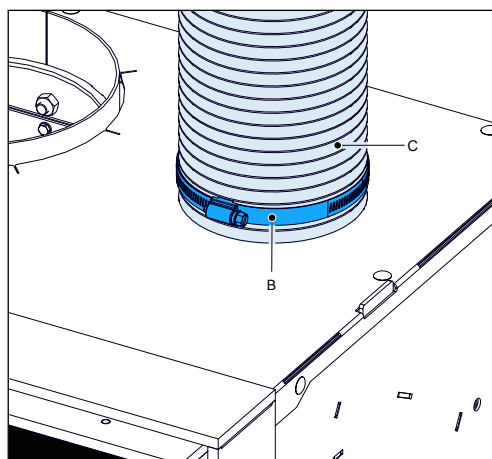

5. Connect the flexible aluminum pipes to the decorative "BARBAS AirBox" in the chimney breast.

8.9

Insulate the appliance



Caution:

- Use white unbound ceramic insulation wool. Do not use glass wool or rock wool, these materials can cause a bad smell, unwanted smoke and is not applicable for high temperatures. Refer to section 5.1 for the specifications.

- Put a ceramic wool blanket with a thickness of at least 5 cm on the top of the appliance and the sides and back of the appliance.
- Keep approximately 10 cm free of insulation material between the front of the appliance and the front of the fireplace. This space is needed for the build of the fireplace.

8.10

Build the fireplace



Caution:

- Refer to section 5 for clearances to flammable and non-flammable materials.
- Refer to section 5.1 for applicable insulating plates.
- Make sure that brickwork is build with a clearing of minimum 3 mm between the sides and top of the appliance and the brickwork. The appliance can expand during operation due to heating.



Note:

- Make sure the thickness of any plastering is taken into account when the brickwork is being build.
 - Do not use masking tape on the appliance. Masking tape damages the paint on the appliance.
 - If you use other material than bricks, install the material in accordance with the instructions of the supplier of the material
 - If you use other material than bricks, refer to the instructions of the supplier of the used material for information on the need to use a mantle iron.
1. Identify the positions where the ventilation inlet and outlet openings and the convection air outlet, for the AirBox inserts or the grates, must be put. Refer to section 6.5 for requirements on the size of the ventilation air and - if applicable - convection air openings. Refer to 6.2 for requirements on minimum distances from ceiling and neighboring wall.
 2. Build the brickwork around the appliance up to the upper frame around the glass.
 3. Install the AirBox boxes or grates of the ventilation air inlets.
 4. If applicable, install a mantle iron to support the brickwork above the appliance. Put the mantle iron on both sides of the brickwork. Maintain a space of minimum 3 mm between the appliance and the mantle iron.
 5. If applicable, install the flexible aluminum pipes of the convection set. Refer to section 8.8.
 6. Build the fireplace around the appliance.
 7. Install the AirBox boxes or grates of the ventilation air outlets and - if applicable - convection air outlets.
 8. Install the frame around the appliance.

8.11

Final check on the appliance



Caution:

Wait 4 weeks after the installation before you use the appliance. The cement used for the fireplace needs to harden and to avoid damage to the plaster work.

1. Make sure the door closes and opens easy.
2. Make sure the control lever moves easy to left and right without undue noise.
3. Make sure all plates in the combustion chamber and the baffles are in the correct position.

Contact your dealer if the final check shows a defect.

9 Maintenance

**Warning:**

Make sure that the appliance has cooled down completely before doing the procedures in this section.

Do all procedures in this section when necessary.

9.1 Appliance

1. Remove ashes from the floor of the combustion chamber.
2. Examine the door seals. Replace damaged seals.
3. Remove the bottom plates, the grate and empty the ash tray. Refer to section [9.5](#) for the procedure to remove the bottom plates.
4. Remove the ashes from the bottom of the combustion chamber. Make sure there are no ashes on the air valve.
5. Examine the baffle for damage. Replace when damaged. Refer to section [9.6](#) for access to the baffle.
6. Clean both sides of the glass with glass spray or ceramic hob cleaner.
7. Clean the inside of the appliance with a soft brush.
8. Clean the metal parts on the outside of the appliance with a dry lint free cloth. Use Barbas heat resistant paint spray to repair lacquer damage.
9. Install the bottom plates, ash tray and grate. Refer to section [9.7](#) for the installation procedure.

9.2 Combustion air supply

1. Make sure that the inlet of the pipe of the external combustion air supply is not blocked by leaves or other debris.
2. Clean the inlet of the pipe of the external combustion air supply.

9.3 Convection air system

Preliminary requirements

- Do the procedure in this section only when a convection air system has been installed.

Procedure

1. Clean the 2 inlet openings of the convection air on the front of the appliance.
2. Clean the 2 outlet openings of the convection air in the chimney breast.
3. Clean the space where the space where the convection ventilator is installed. Refer to section [9.9](#) for instruction to access the convection ventilator.

9.4 Chimney

**Note:**

It is recommended to contact a registered chimney sweep company to inspect and clean the chimney.

1. Remove the heat shield and the baffle before the chimney sweep work. Refer to section 9.6 for the procedure to remove the heat shield and the baffle.
2. Sweep and inspect the chimney
3. Make sure there is no blockage in the chimney, for example by birds' nests.
4. Examine for cracks, loose parts and flue gas leakage. It is recommended to use an inspection camera.
5. Install the heat shield and baffle. Refer to section 9.8 for the procedure to install the heat shield and the baffle.

9.5


Removal of the bottom plates, grate and ash tray




Note:

Make sure to remove all ashes and unburnt wood from the combustion chamber before the start of this procedure.


1. Lift the front log guard (1) and move the left side up.
2. Remove the front log guard (2)

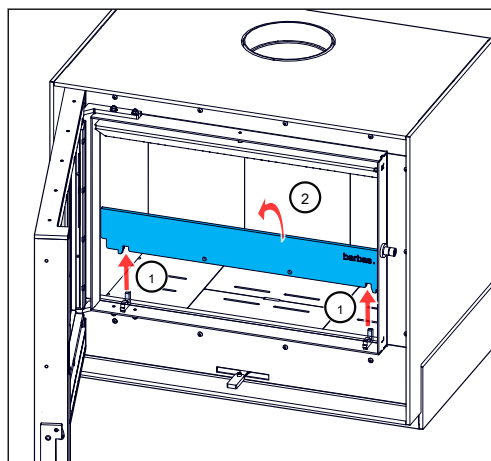

3. Lift the 2 grate plates and remove from the combustion chamber.

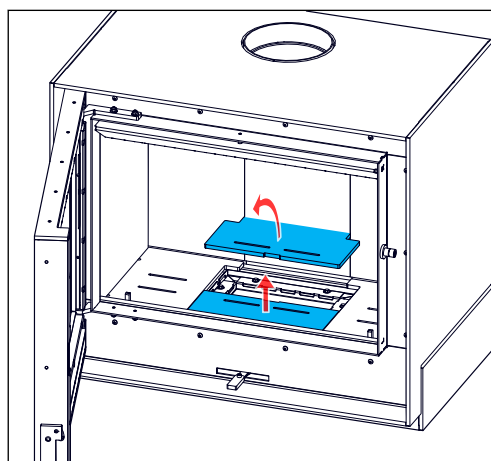

4. Move the 2 steel bottom plates to the center of the fireplace bottom.
5. Lift the steel bottom plates up and remove.

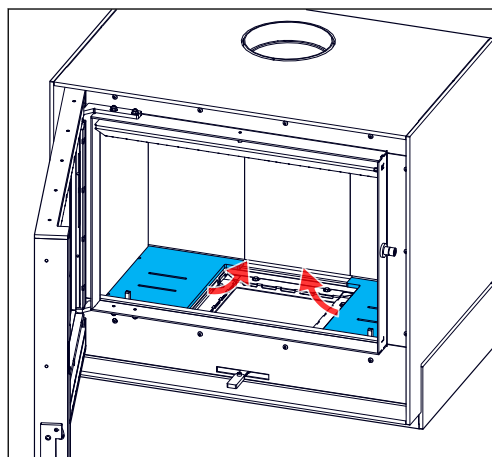

9.6

Removal of the baffle



Note:


Make sure to remove all ashes and unburnt wood from the combustion chamber before the start of this procedure.

1. Remove the heat shield. Refer to section [9.6.1](#).
2. Remove the baffle. Refer to section [9.6.2](#).


9.6.1

Remove the heat shield

1. Open the door.
2. Loosen the nut above the heat shield with a 3 mm hexagonal key and a 10 mm fork spanner. Turn the nut down with the fork spanner and turn the screw up with the hexagonal key until the screw is loose from the heat shield.

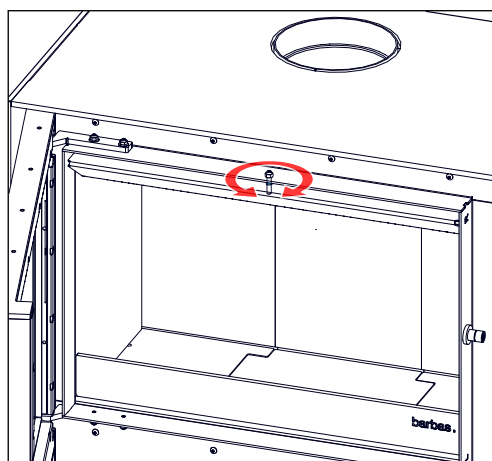

3. Push up the front of the heat shield (1) and pull it forward (2) and move downward to a vertical position (3).

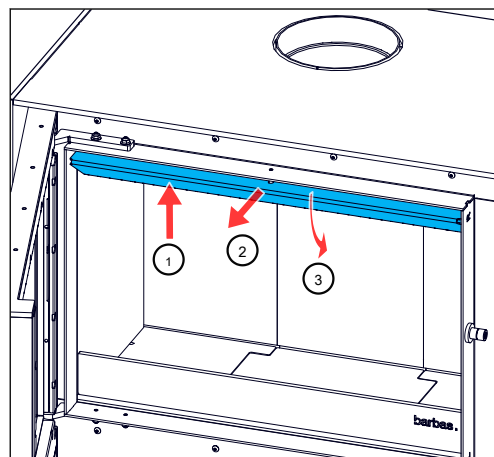


9.6.2

Remove the baffle

Only do this procedure after finish of the procedure in section [9.6.1](#).


1. Push up the right side of the baffle a small distance (1).
2. Lower the left side of the baffle a small distance (2) and remove the baffle from the appliance (3).

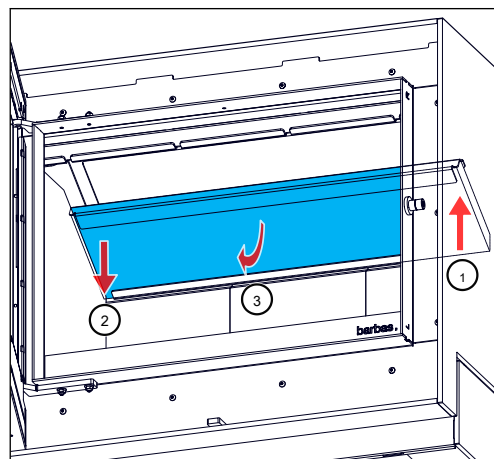



9.7

Install the bottom plates, ash tray and grate

1. Put the left steel bottom plate on the bottom of the combustion chamber.
2. Move the steel bottom plate to the left as much as possible.
3. Put the right steel bottom plate on the bottom of the combustion chamber.
4. Move the steel bottom plate to the right as much as possible.

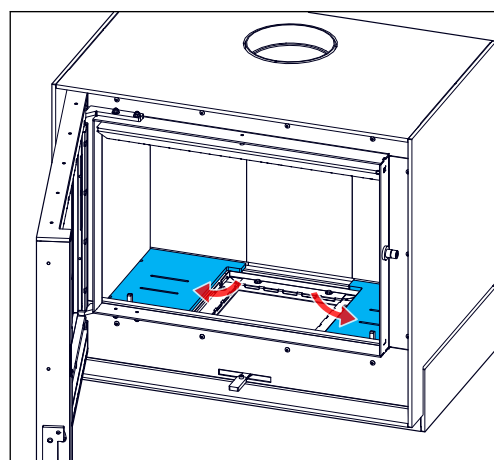

5. Put a grate on the ashtray with the short side in the direction of the rear wall and move to the rear as far as possible
6. Put the other grate plate with the short side in the direction of the front of the combustion chamber. Move the grate as far as possible to the front of the bottom of the combustion chamber.
7. Put the front log guard on the notches.

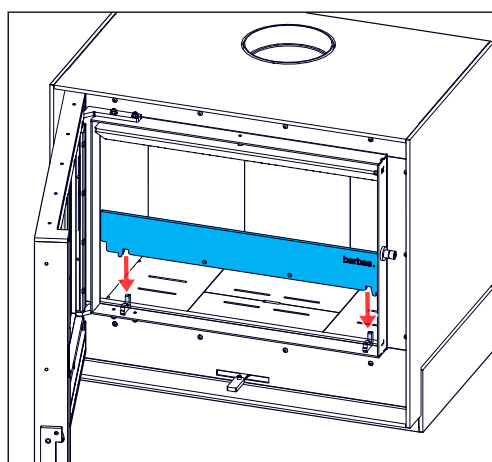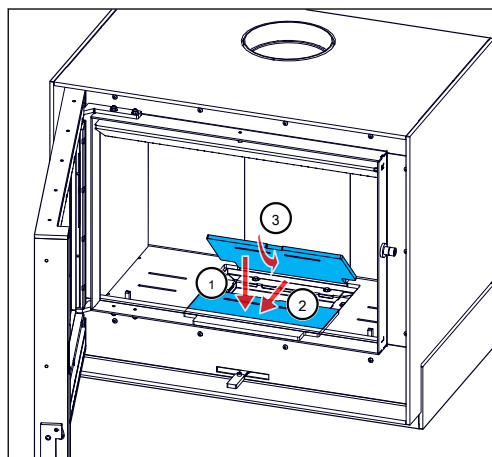

9.8


Installation of the baffle

1. Install the baffle. Refer to section [9.8.1](#).
2. Install the heat shield. Refer to section [9.8.2](#).

9.8.1


Install the baffle

1. Move the baffle up under an angle into the combustion chamber (1) and put the right side of the baffle above the side panels (2) on the right.

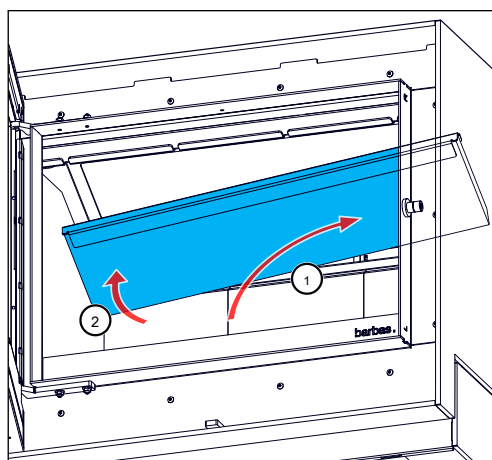


2. Move the left side of the baffle up and put it on top of the side panels on the left. If it does not fit, make sure the side panels are firmly seated against the side wall of the appliance.

3. Put the rear side of the baffle against the rear wall (3).

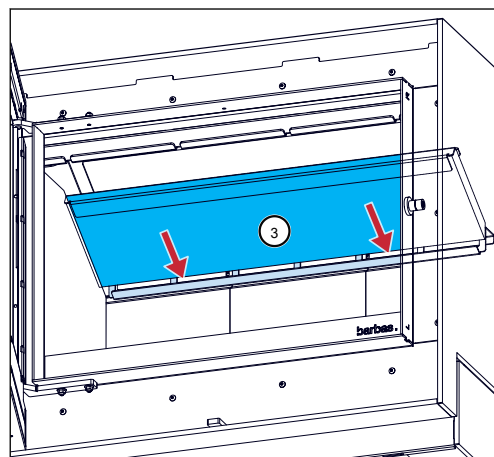


4. Make sure the baffle is horizontal and against the rear wall.

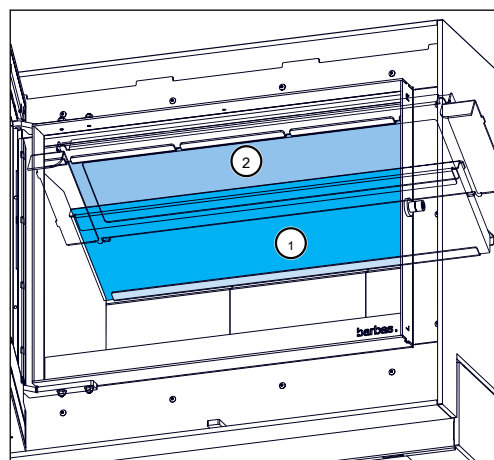

9.8.2 Install the heat shield


Only do this procedure after finish of the procedure in section [9.8.1](#).

1. Move the heat shield up and move to the rear.

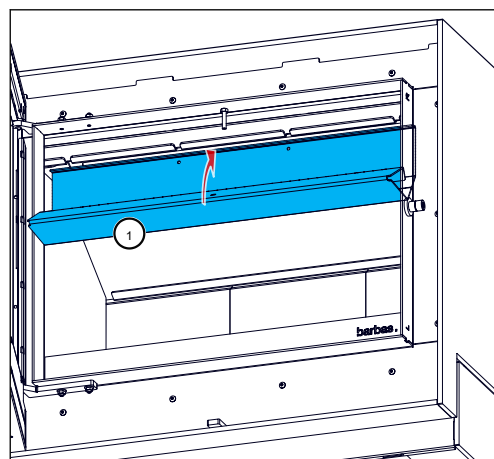

2. Move the front of the heat shield up (2) and put the edge on the metal strip under the air wash inlet (3).



3. Turn the screw down with a 3 mm hexagonal key until it is in the screw hole in the heat shield.
4. Turn the nut up with a 10 mm fork spanner and tighten it.

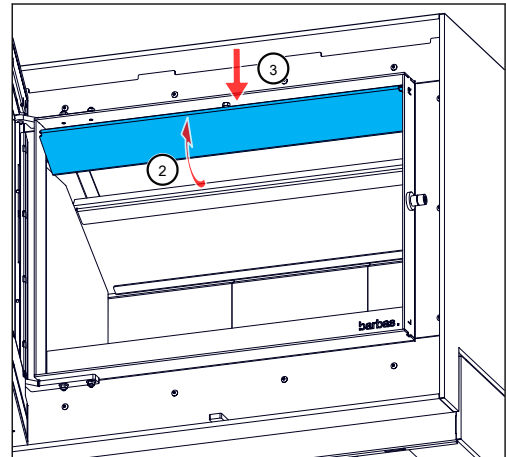


9.9

Disassembly of the ventilator

1. Disconnect the convection ventilator from the power supply
2. Carefully remove the heat shield and the baffle. Refer to section [9.6](#).
3. Carefully remove the side and rear panels of the combustion chamber.
4. Remove the 6 screws of the steel hatch on the rear wall of the combustion chamber. Do not remove the 4 central screws.
5. Pull the hatch forward. The ventilator is attached on the rear side of the hatch.
6. Carefully pull the small electrical connectors from the ventilator and the thermostat "clickson".
7. Remove the ventilator together with hatch from the appliance.

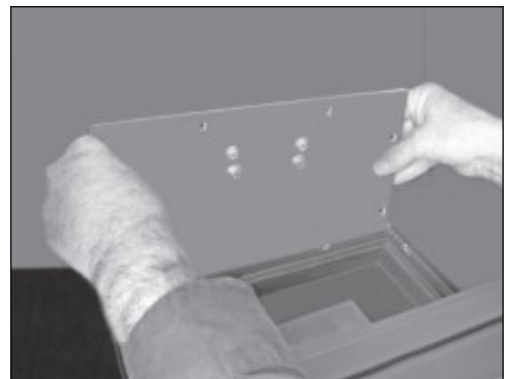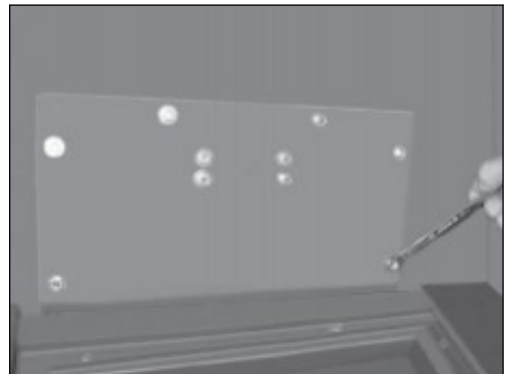

8. Unscrew the 4 screws on the hatch, to remove the ventilator from the hatch.

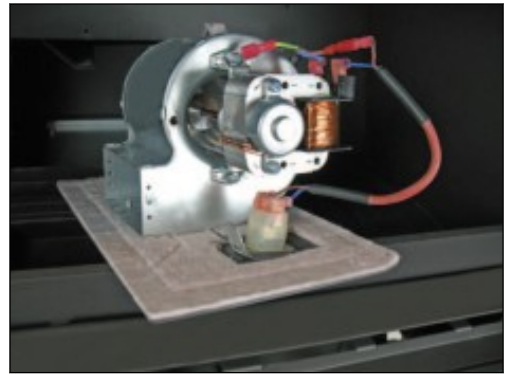

10 Technical data

10.1 Technical data

Name	Barbas	
Model	Universal-6 80	
EPREL registration number	28132	
Tested in accordance with	EN16510-2-2	
Energy efficiency index	99	
Energy efficiency class	A	
Fuel	Wood logs, Wood briquettes	
Indirect heating function	No	
Room sealed	No (type B/BE)	
Leak rate at 10 Pa	Not applicable	
Seasonal efficiency	65.4 %	
Fuel load	2.7 kg	
Heat output (net)	12 kW	
Useful efficiency	75.7 %	
Emissions (at 13 % O ₂ , 273 K, 1013 hPa)		
• carbon monoxide (CO)	801 mg/Nm ³	
• particles (PM)	27 mg/Nm ³	
• organic gaseous compounds (OGC)	65 mg/Nm ³	
• nitrogen oxides (NO _x)	109 mg/Nm ³	
Flue gas mass flow	12.2 g/s	
Flue gas outlet temperature	376 °C	
Flue gas temperature	324 °C	
Minimum chimney draught	12 Pa	
Minimum temperature class of the chimney	T 400	
Flue gas connection	Outer diameter 178 mm, suitable for a pipe with an inner diameter of 180 mm	
External combustion air connection	125 mm	
Weight	Vermiculite interior	Ceramic interior
	128 kg	137 kg
Minimum distance to flammable materials	Refer to chapter 5	
Used materials		
• Combustion chamber side and back panels	Heat resistant ceramic 1600 kg/m ³ / Vermiculite 750 kg/m ³ *)	
• Combustion floor and grate	Steel	


• Heat shield	Steel
• Baffle	Heat resistant ceramic 1600 kg/m ³ / Vermiculite 750 kg/m ³ *)
• Front glass	Heat resistant ceramic glass
The specific precautions that shall be taken when the local space heater is assembled, installed or maintained, are listed in the attached documents:	• Installation and maintenance manual • User manual
Maximum capacity to carry a chimney	120 kg **)
Electrical energy consumption 39 W convection ventilator	
Power supply	230 VAC, 50 Hz
Power consumption at maximum speed	31 W
Power consumption at minimum speed	12 W
Additional information in order to achieve relevant test results for market surveillance	
Mass of basic fire bed	120 g
Criterion for the end of the test cycle	5 vol% CO ₂

*) Type of material is dependent on the choice made at the time of purchase.

**) if the weight of the chimney or part of the chimney, being carried by the appliance, is more than indicated, the chimney must be supported with a wall bracket.

10.2

Connection scheme convection ventilator

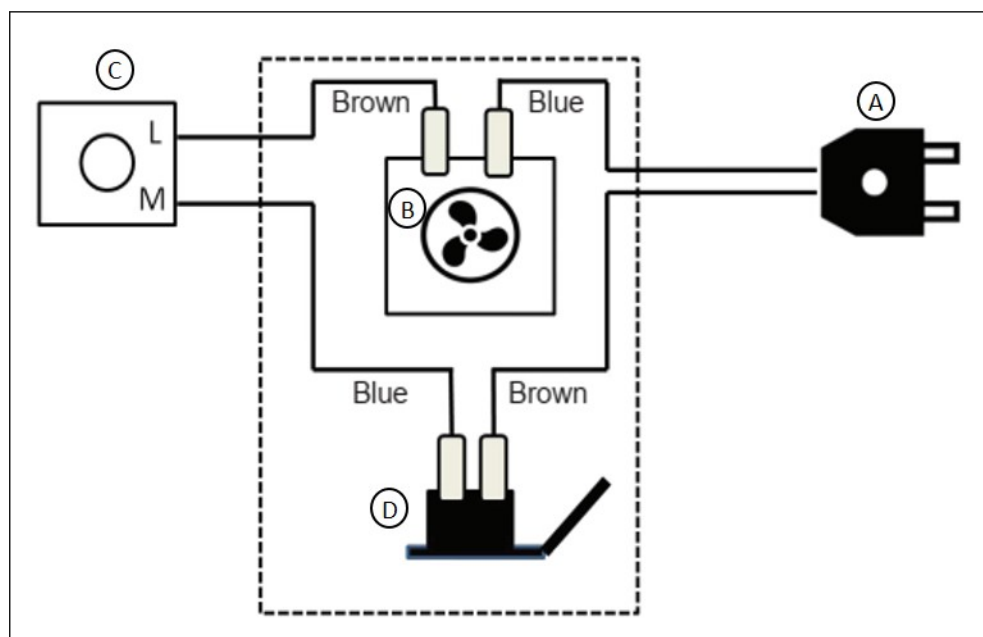

- A 230 VAC Euro or UK plug
- B Convection ventilator
- C Dimmer
- D Thermostat "Clickson" (set at approximately 40 °C)

10.3 Product information according regulation (EU) 2015/1185

Model identifier		Universal-6 80									
Equivalent models		N.A.									
Indirect heating function		No									
Direct heat output		12 kW									
Indirect heat output		- kW									
Fuel	Preferred fuel (only one)	Other suitable fuel(s)	Emissions at nominal heat output (*) [mg/Nm ³ (13 % O ₂)]				Emissions at minimum heat output (**)(***) [mg/Nm ³ (13 % O ₂)]				
			PM	OGC	CO	NO _x	PM	OGC	CO	NO _x	
Wood logs, moisture content < 25 %	yes	no	27	65	801	109	N.A.	N.A.	N.A.	N.A.	
Compressed wood, moisture content < 12 %	no	no									
Other woody biomass	no	no									
Non-woody biomass	no	no									
Anthracite and dry steam coal	no	no									
Hard coke	no	no									
Low temperature coke	no	no									
Bituminous coal	no	no									
Lignite briquettes	no	no									
Peat briquettes	no	no									
Blended fossil fuel briquettes	no	no									
Other fossil fuel	no	no									
Blended biomass and fossil fuel briquettes	no	no									
Other blend of biomass and solid fuel	no	no									
Characteristics when operating with the preferred fuel											
Seasonal space heating efficiency η_{se} [%]		65									
Energy efficiency index (EEI)		99									
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit	Item	Symbol	Value	
Heat output				Useful efficiency (NCV as received)							
Nominal heat output	P _{nom}	12.0	kW	Useful efficiency at nominal heat output	$\eta_{th, nom}$	75.7	%				
Minimum heat output (indicative)	P _{min}	N.A.	kW	Useful efficiency at minimum heat output (indicative)	$\eta_{th, min}$	N.A.	%				
Auxiliary power consumption				Type of heat output/room temperature control (select one)							
At nominal heat output	e _{l, max}	0.031	kW	Single-stage heat output, no room temperature control						yes	
At minimum heat output	e _{l, min}	0.012	kW	Two or more manual stages, no room temperature control						no	
In standby mode	e _{l, sb}	0	kW	With mechanic thermostat room temperature control						no	
Permanent pilot flame power requirement				With electronic room temperature control							no
Pilot flame power requirement (if applicable)	P _{pilot}	N.A.	kW	With electronic room temperature control plus day timer						no	
				With electronic room temperature control plus week timer						no	
				Other control options (multiple selection possible)							
				Room temperature control, with presence detection						no	
				Room temperature control, with open window detection						no	
				With distance control option						no	
Contact details	Barbas Bellfires BV Hallenstraat 17 5531 AB BLADEL The Netherlands			www.barbas.com							
(*) PM = particulate matter, OGC = organic gaseous compounds, CO = carbon monoxide, NO _x = nitrogen oxides (**) Only required if correction factors F(2) or F(3) are applied.											
Signed for and on behalf of the manufacturer by: Danny Baijens, CEO											
Bladel;		26 November 2025									

10.4


Explanation of used notations on typeshield

Notation	Description
m_{chim}	The maximum weight of a chimney the appliance may carry
d_B	The minimum distances below the bottom to combustible material
d_F	The minimum distances from the front to combustible material in the bottom front radiation area
d_C	The minimum distances from the top to combustible material
d_R	The minimum distances from the rear to combustible material
d_S	The minimum distances from the sides to combustible material
d_L	The minimum distances from the front to combustible material in the side front radiation area
d_P	The minimum distances from the front to combustible material
CO_{nom}	Carbon monoxide emission at nominal heat output
NO_{xnom}	Nitrogen oxide emission at nominal heat output
OGC_{nom}	Hydrocarbons emission at nominal heat output
PM_{nom}	Particle emission at nominal heat output
CO_{part}	Carbon monoxide emission at part load heat output
NO_{xpart}	Nitrogen oxide emission at part load heat output
OGC_{part}	Hydrocarbons emission at part load heat output
PM_{part}	Particle emission at part load output
T_{snom}	The flue gas outlet temperature at nominal heat output
p_{nom}	Minimum flue draught at nominal heat output
$\Phi_{f,g nom}$	The flue gas mass flow at nominal heat output
T_{spart}	The flue gas outlet temperature at part load heat output
p_{part}	Minimum flue draught at part load heat output
$\Phi_{f,g part}$	The flue gas mass flow at part load heat output
T_{class}	Temperature designation of the chimney
P_{nom}	The nominal heat output
η_{nom}	The appliance efficiency at nominal heat output
P_{part}	The part load heat output
η_{part}	The appliance efficiency at part load heat output
η_s	The appliance seasonal space heating efficiency at nominal heat output
EEI	The energy efficiency index
E_{class}	The energy efficiency class
INT	The appliance is capable of intermittent operation
CM	Room-sealed appliance with a manually closed and locked door
B	Non-room-sealed appliance
	Read and follow the user operating instructions

11 Dimensions


11.1 Universal-6 80, frameless

*) Combustion air inlet opening (Ø 125 mm) at the bottom or rear of the appliance.

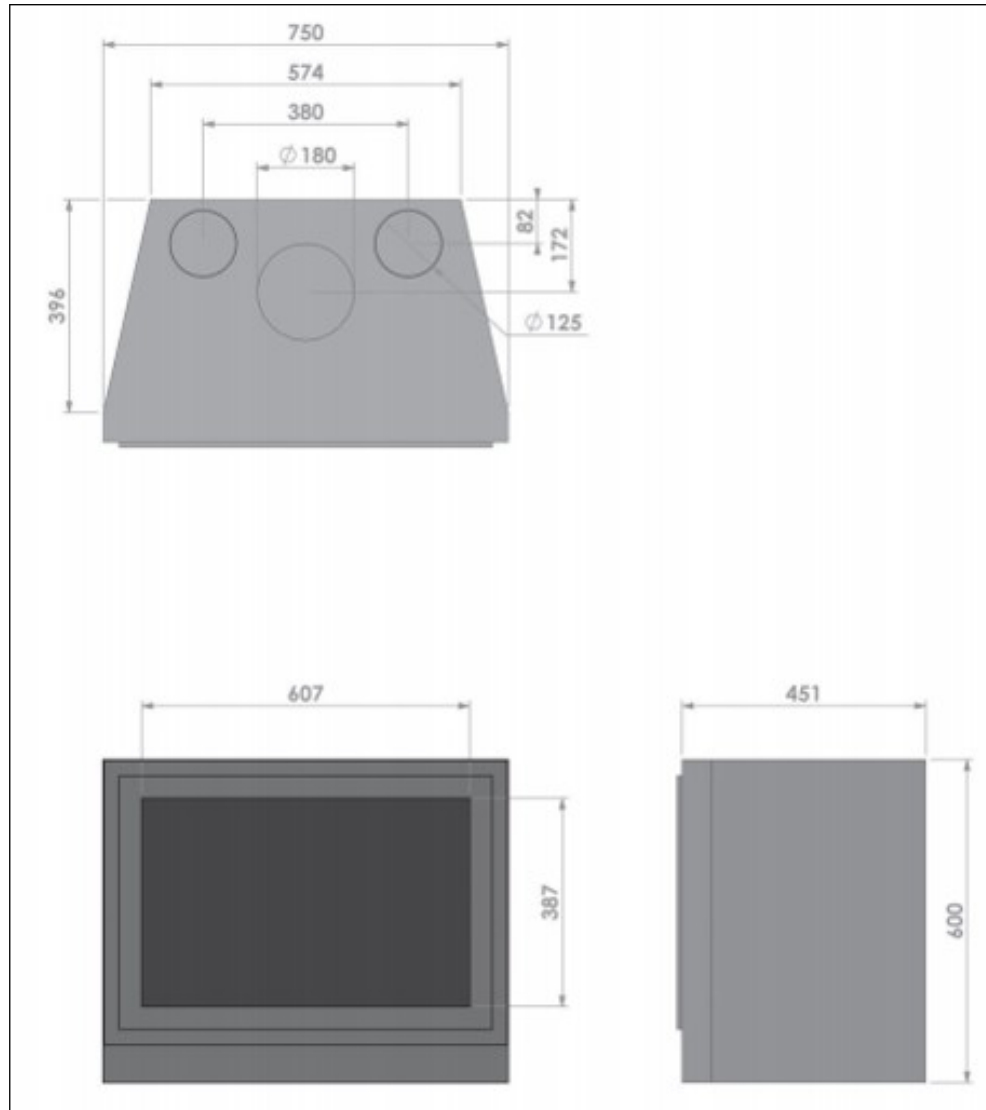


11.2 Universal-6 80 with built-in frame

*) Combustion air inlet opening (Ø 125 mm) at the bottom or rear of the appliance.

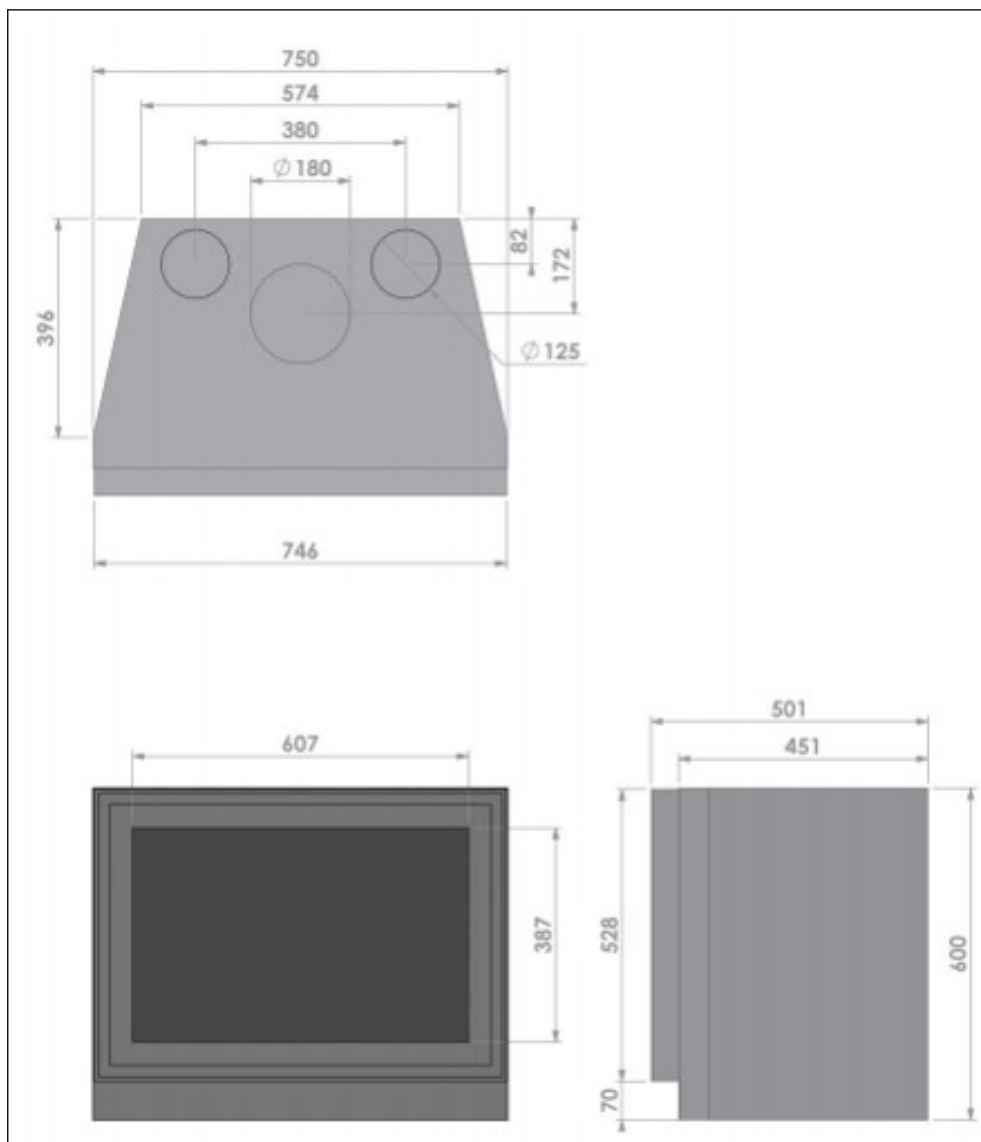


11.3 Universal-6 80 with classic frame

*) Combustion air inlet opening (Ø 125 mm) at the bottom or rear of the appliance.

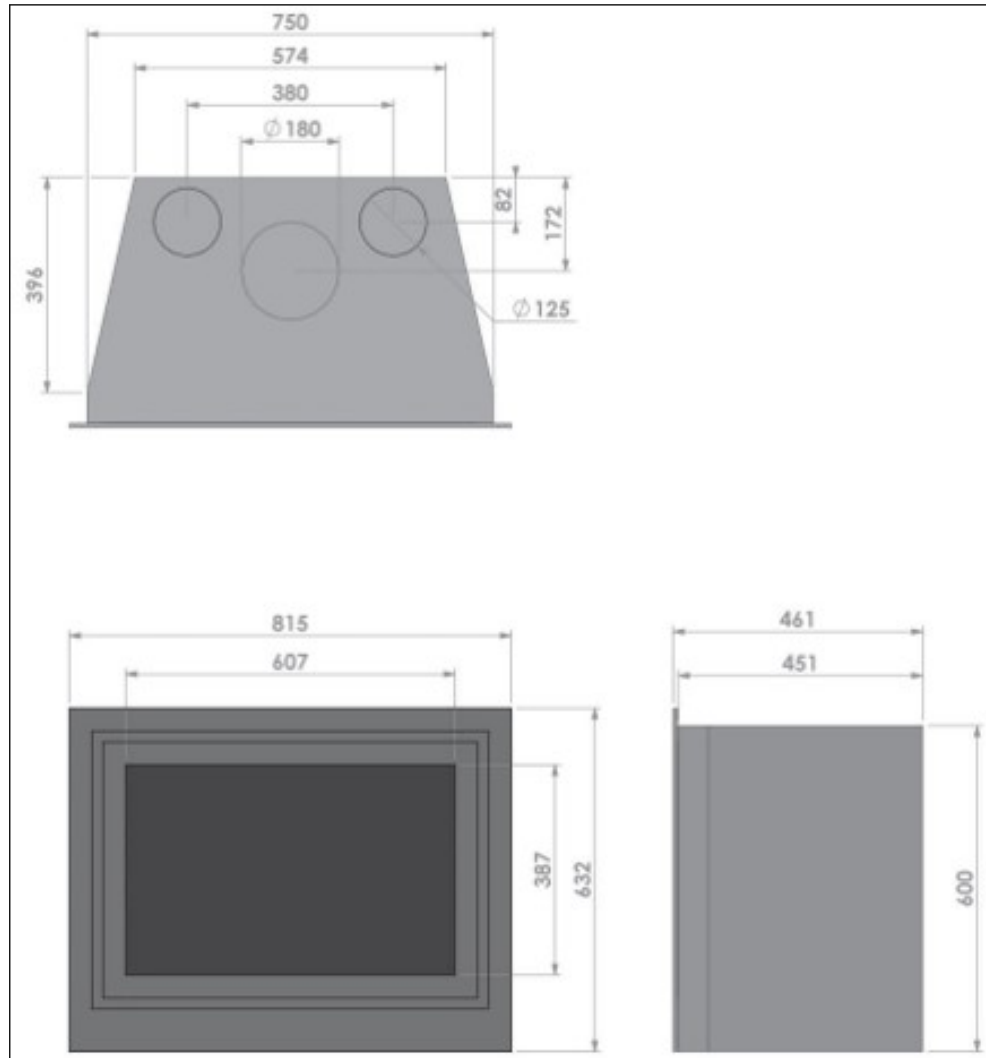


11.4

BARBAS Airbox 160 with 4 insert models

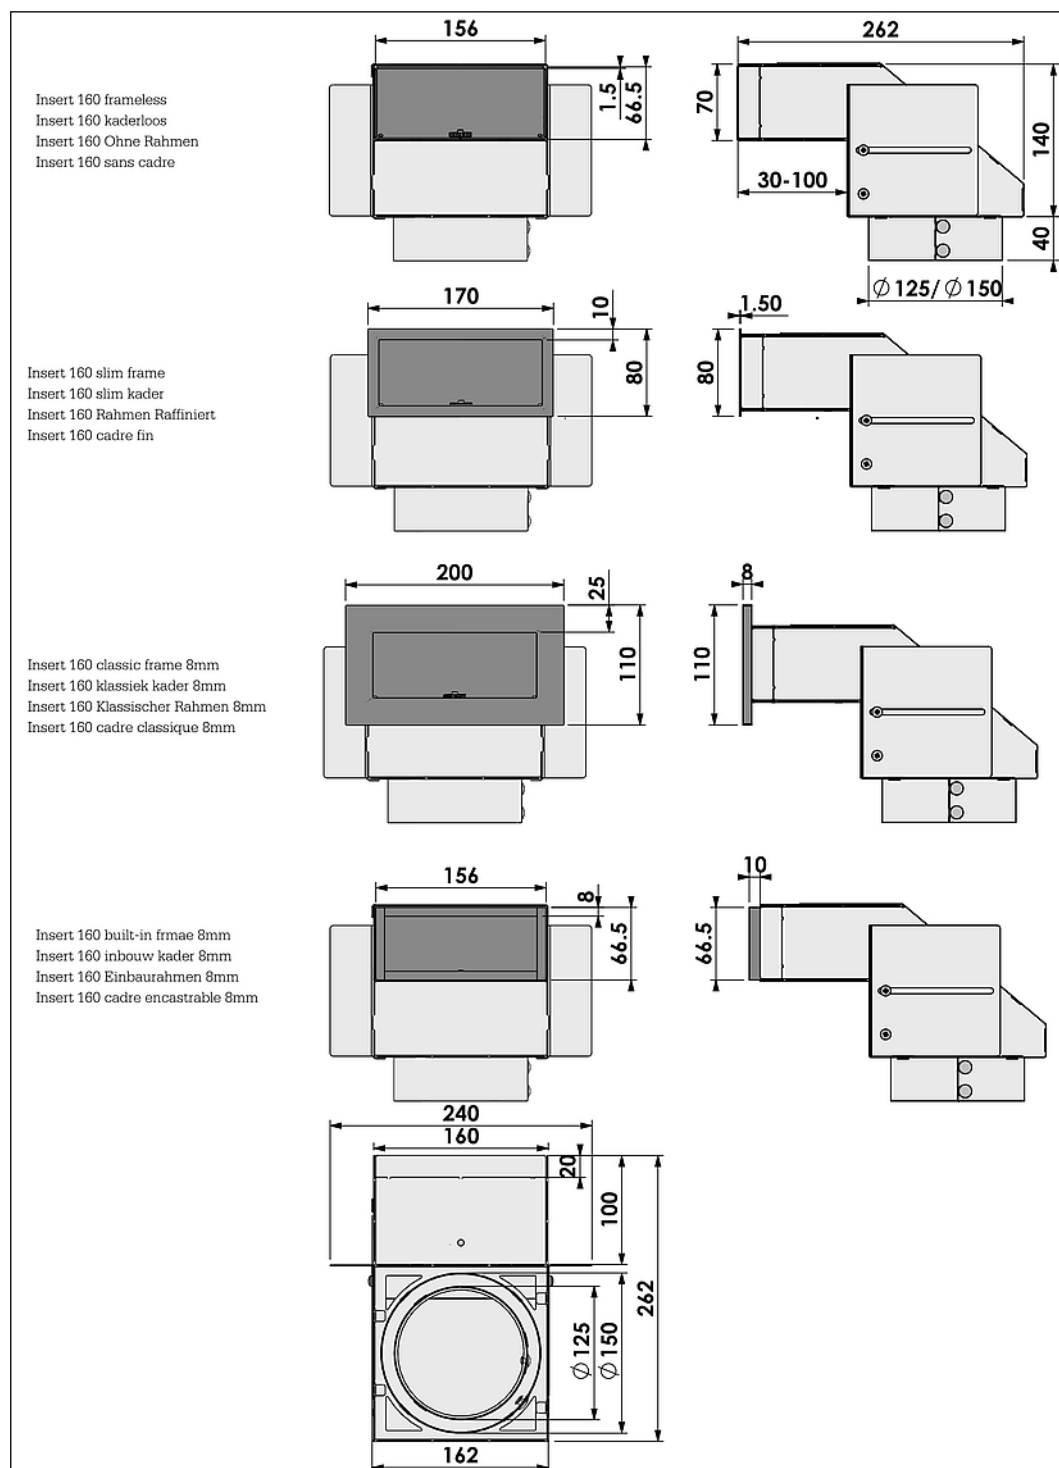

11.5

BARBAS Airbox 320 with 4 insert models

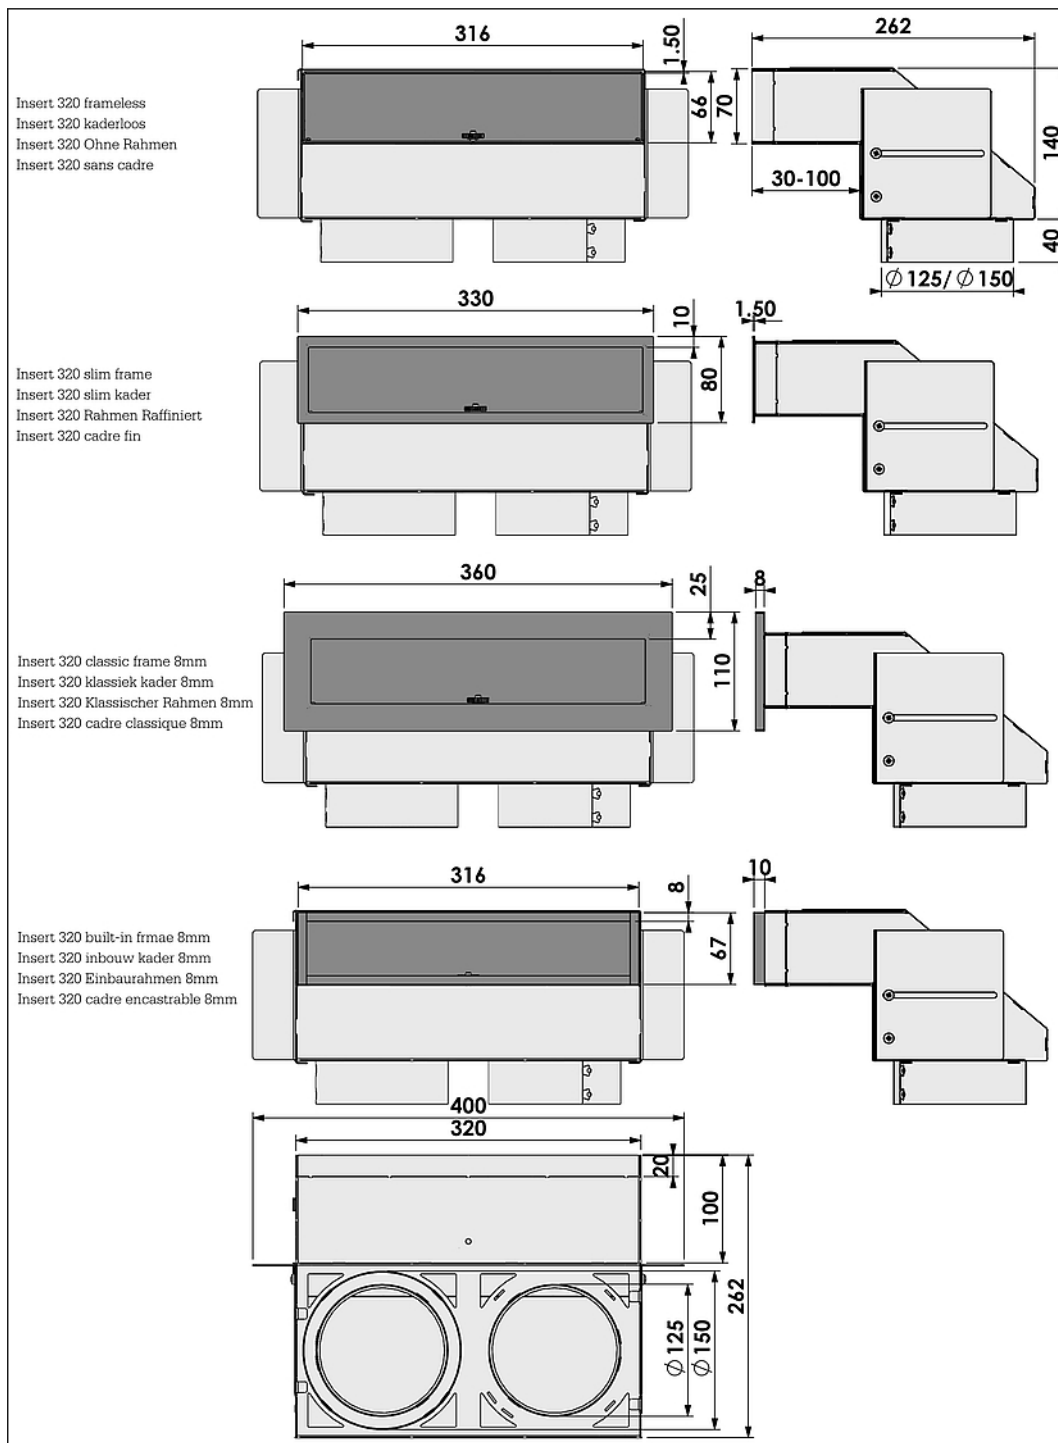

12 Warranty Terms

To make a claim under the warranty, it is important to register the Barbas appliance after purchase via www.barbas.com.

Barbas Warranty Terms

Barbas B.V. guarantees the quality of the supplied Barbas appliance and the quality of the materials used. All Barbas appliances are developed and manufactured according to the highest possible quality standards. If, despite all this, something should prove amiss with the Barbas appliance you have purchased, Barbas B.V. offers the following manufacturer's warranty.

Article 1: Warranty

1. If Barbas B.V. determines that the Barbas appliance you have purchased is defective as a result of a flaw in the construction or material, Barbas B.V. guarantees to repair or replace the appliance free of charge, without charging any costs for labor or spare parts.
2. Repair or replacement of the Barbas appliance will be undertaken by Barbas B.V. or by a Barbas dealer as designated by Barbas B.V.
3. This warranty is supplementary to the existing legal national warranty of Barbas dealers and Barbas B.V. in the country of purchase and is not intended to restrict your rights and claims based on the applicable legal provisions.

Article 2: Warranty conditions

1. Should you wish to claim under the warranty, please contact your Barbas dealer.
2. Complaints should be reported as quickly as possible after they have manifested themselves.
3. Complaints will only be accepted if they are reported to the Barbas dealer, together with the serial number of the Barbas appliance which is stated on the enclosed documents.
4. In addition, the original receipt (invoice, receipt, cash receipt) showing the date of purchase must also be submitted.
5. Repairs and replacements during the warranty period do not give any entitlement to an extension of the warranty period. After a repair or replacement of warranty parts, the warranty period shall be deemed to have started on the date of purchasing the Barbas appliance.
6. If a certain part is eligible for the warranty and the original part is no longer available, Barbas B.V. shall ensure that an alternative part of at least the same quality shall be provided.

Article 3: Warranty exclusions

1. The warranty on the Barbas appliance ceases to be in effect if:
 - a. it is not installed according to the installation instructions, and to national and/or local regulations;
 - b. it has been installed, connected or repaired by a non-Barbas dealer;
 - c. it has not be used or maintained according to the instructions for use;

- d. it has been changed, neglected or roughly treated;
- e. it has been damaged as a result of external causes (outside the appliance itself), for example, lightning strike, water damage or fire;
- 2. In addition, the warranty lapses if the original purchase receipt shows any change, deletion, removal or if it is illegible.

Article 4: Warranty area

- 1. The warranty is only valid in those countries where Barbas appliances are sold through an official dealer network.

Article 5: Warranty period

- 1. This warranty will only be granted during the warranty period.
- 2. The body of the Barbas appliance is guaranteed for a period of 10 years against construction and/or material faults, starting from the moment of purchase.
- 3. For other parts of the Barbas appliance, a similar warranty applies from the moment of purchase for a period of two years.
- 4. For user parts such as glass, glass sealing cord and the interior of the combustion chamber, a similar guarantee is given until after the first burning.

Article 6: Liability

- 1. A claim granted by Barbas B.V. under this warranty does not automatically imply that Barbas B.V. also accepts liability for any possible damage. The liability of Barbas B.V. never extends further than that stated in these warranty conditions. Any liability of Barbas B.V. for consequential damage is expressly excluded.
- 2. That stated in this provision is not valid if and to the extent that it derives from a mandatory provision.
- 3. All agreements entered into by Barbas B.V. are, unless specifically stated otherwise in writing and to the extent that they are permitted based on applicable law, subject to the FME-CWM general sales and delivery conditions for the technology industry.

Barbas B.V.
Hallenstraat 17
5531 AB Bladel
The Netherlands

Email: info@Barbas.com

Carefully retain the enclosed documents; they show the serial number of the appliance. You will need this if you wish to claim under the warranty.

barbas .

Your Barbas dealer