


# barbas .

## Installation and maintenance manual

BOX 25 75

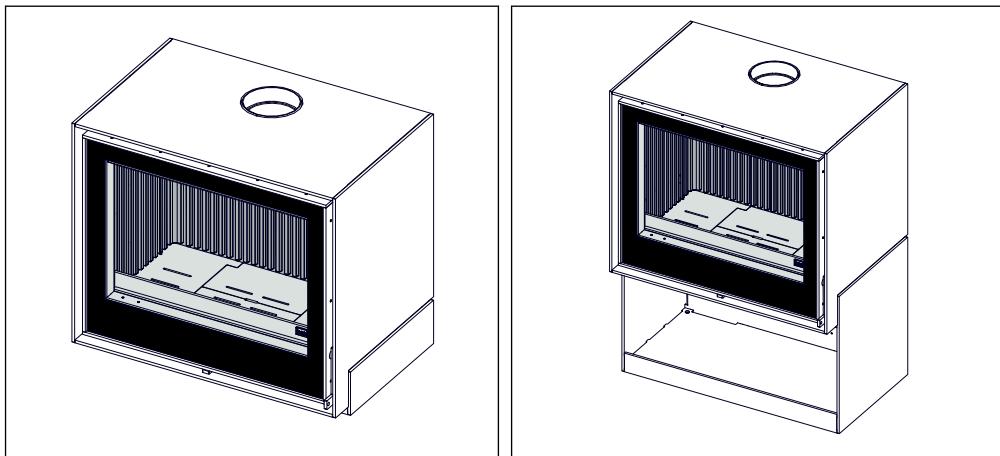

This product is not suitable for primary heating purposes



Serial number:

Production date:

**© Barbas BV**

This document or parts thereof may not be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, nor otherwise, without the prior written permission of Barbas BV. This document could contain technical inaccuracies or typographical errors. Barbas BV reserves the right to revise this document from time to time in the contents thereof.

**Contact information**

Barbas BV

Hallenstraat 17, 5531 AB Bladel, The Netherlands

E-mail: [info@barbas.com](mailto:info@barbas.com)

[www.barbas.com](http://www.barbas.com)

## Contents

<b>1</b>	<b>Declaration of Performance.....</b>	<b>5</b>
1.1	BOX 25 75.....	5
1.2	BOX 25 75 with wood log storage module.....	6
<b>2</b>	<b>About this document.....</b>	<b>7</b>
2.1	How to work with this document.....	7
2.2	Warnings and cautions used in this document.....	7
2.3	Related documentation.....	7
<b>3</b>	<b>Description.....</b>	<b>8</b>
3.1	Overview of the front of the appliance.....	8
3.2	Overview of the bottom of the appliance.....	9
3.3	Overview of the rear of the appliance .....	10
3.4	Overview of the bottom of the appliance with wood log storage module.....	11
3.5	Overview of the rear of the appliance with wood log storage module.....	12
3.6	Intended use.....	12
<b>4</b>	<b>Safety.....</b>	<b>13</b>
4.1	Safety instructions for installation.....	13
4.2	Safety instructions with regard to the environment.....	13
<b>5</b>	<b>Clearances.....</b>	<b>14</b>
5.1	Safety distances BOX 25 75.....	14
5.2	Safety distances with wood log storage module.....	16
<b>6</b>	<b>Installation requirements.....</b>	<b>18</b>
6.1	Requirements on the installation of the appliance.....	18
6.2	Installation on a natural stone platform.....	18
6.3	Requirements on the external combustion air pipe.....	18
6.4	Requirements on the external combustion air pipe.....	19
<b>7</b>	<b>Installation of the BOX 25 75 with steel base.....</b>	<b>20</b>
7.1	Install the appliance.....	20
7.2	Connect the optional external air supply.....	20
7.2.1	Rear connection.....	20
7.2.2	Bottom connection.....	21
7.3	Connect the flue gas pipe.....	22
7.4	Final check on the appliance.....	22
<b>8</b>	<b>Installation of the BOX 25 75 with stone base.....</b>	<b>23</b>

---

<b>9</b>	<b>Installation of the BOX 25 75 with wood log storage module.....</b>	<b>24</b>
9.1	Install the appliance .....	24
9.2	Connect the optional external air supply.....	25
9.2.1	Rear connection.....	25
9.2.2	Bottom connection.....	26
9.3	Connect the flue gas pipe.....	27
9.4	Final check on the appliance.....	27
<b>10</b>	<b>Maintenance.....</b>	<b>28</b>
10.1	Appliance.....	28
10.2	Combustion air supply.....	28
10.3	Chimney.....	28
10.4	Removal of the bottom plates, grate and ash tray.....	28
10.5	Removal of the baffles.....	29
10.5.1	Remove the heat shield.....	30
10.5.2	Remove the lower baffle.....	30
10.5.3	Remove the upper baffle.....	30
10.6	Install the bottom plates, ash tray and grate .....	31
10.7	Installation of the baffles.....	32
10.7.1	Install the upper baffle.....	32
10.7.2	Install the lower baffle.....	33
10.7.3	Install the heat shield.....	34
<b>11</b>	<b>Technical data.....</b>	<b>35</b>
11.1	Technical data .....	35
11.2	Product information according regulation (EU) 2015/1185.....	37
11.3	Explanation of used notations on typeshield.....	38
<b>12</b>	<b>Dimensions .....</b>	<b>39</b>
12.1	Dimensions BOX 25 75 .....	39
12.2	Dimensions BOX 25 75 with wood log storage module.....	40
12.3	Dimensions decorative stone base.....	41
<b>13</b>	<b>Warranty Terms.....</b>	<b>42</b>

# 1 Declaration of Performance

## 1.1 BOX 25 75

barbas bellfires . Crafted to wonder																																			
<b>EU-declaration of conformity</b>																																			
<p>This EC declaration of conformity applies to the product described below and describes the conformity with the following directives:  <b>2009/125/EC Directive for the setting of eco-design requirements for energy-related products (eco-design directive)</b>  Relevant Regulation: (EU) 2015/1185</p>																																			
<b>Declaration of Performance</b>																																			
No. 1.232.082-4 - CPR-2013/07/01																																			
<b>Unique identification code of the product type:</b>	BOX 25 75																																		
<b>Intended use:</b>	Space heating in residential buildings																																		
<b>Manufacturer:</b>	Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands																																		
<b>System of AVCP:</b>	3																																		
<b>Harmonised technical specifications:</b>	EN 16510-2-1:2022																																		
<b>Notified body:</b>	No. 2013																																		
<b>Essential characteristics</b>																																			
<table border="1"> <thead> <tr> <th colspan="2"><i>Mechanical resistance and stability</i></th> </tr> <tr> <th>Load bearing capacity</th> <th>120 kg</th> </tr> </thead> <tbody> <tr> <td colspan="2"><i>Safety in case of fire - Protection of combustible materials</i></td> </tr> <tr> <td>Bottom (d<sub>B</sub>):</td> <td>3 cm</td> </tr> <tr> <td>Floor in front (d<sub>F</sub>):</td> <td>50 cm</td> </tr> <tr> <td>Ceiling (d<sub>C</sub>):</td> <td>75 cm</td> </tr> <tr> <td>Rear (d<sub>R</sub>):</td> <td>30 cm</td> </tr> <tr> <td>Side (d<sub>S</sub>):</td> <td>40 cm</td> </tr> <tr> <td>Side radiation area (d<sub>L</sub>):</td> <td>160 cm</td> </tr> <tr> <td>Front (d<sub>P</sub>):</td> <td>160 cm</td> </tr> </tbody> </table>			<i>Mechanical resistance and stability</i>		Load bearing capacity	120 kg	<i>Safety in case of fire - Protection of combustible materials</i>		Bottom (d <sub>B</sub> ):	3 cm	Floor in front (d <sub>F</sub> ):	50 cm	Ceiling (d <sub>C</sub> ):	75 cm	Rear (d <sub>R</sub> ):	30 cm	Side (d <sub>S</sub> ):	40 cm	Side radiation area (d <sub>L</sub> ):	160 cm	Front (d <sub>P</sub> ):	160 cm													
<i>Mechanical resistance and stability</i>																																			
Load bearing capacity	120 kg																																		
<i>Safety in case of fire - Protection of combustible materials</i>																																			
Bottom (d <sub>B</sub> ):	3 cm																																		
Floor in front (d <sub>F</sub> ):	50 cm																																		
Ceiling (d <sub>C</sub> ):	75 cm																																		
Rear (d <sub>R</sub> ):	30 cm																																		
Side (d <sub>S</sub> ):	40 cm																																		
Side radiation area (d <sub>L</sub> ):	160 cm																																		
Front (d <sub>P</sub> ):	160 cm																																		
<table border="1"> <thead> <tr> <th colspan="2"><i>Hygiene, health and the environment</i></th> </tr> <tr> <th>At nominal heat output</th> <th>At part load heat output</th> </tr> </thead> <tbody> <tr> <td>Carbon monoxide emission (CO)</td> <td>1208 mg/m<sup>3</sup></td> </tr> <tr> <td>Nitrogen oxides emission (NO<sub>x</sub>)</td> <td>71 mg/m<sup>3</sup></td> </tr> <tr> <td>Emission of organic gaseous carbon (OGC)</td> <td>63 mg/m<sup>3</sup></td> </tr> <tr> <td>Particulate matter emission (PM)</td> <td>28 mg/m<sup>3</sup></td> </tr> <tr> <td></td> <td>1617 mg/m<sup>3</sup></td> </tr> <tr> <td></td> <td>84 mg/m<sup>3</sup></td> </tr> <tr> <td></td> <td>77 mg/m<sup>3</sup></td> </tr> <tr> <td></td> <td>15 mg/m<sup>3</sup></td> </tr> </tbody> </table>			<i>Hygiene, health and the environment</i>		At nominal heat output	At part load heat output	Carbon monoxide emission (CO)	1208 mg/m <sup>3</sup>	Nitrogen oxides emission (NO <sub>x</sub> )	71 mg/m <sup>3</sup>	Emission of organic gaseous carbon (OGC)	63 mg/m <sup>3</sup>	Particulate matter emission (PM)	28 mg/m <sup>3</sup>		1617 mg/m <sup>3</sup>		84 mg/m <sup>3</sup>		77 mg/m <sup>3</sup>		15 mg/m <sup>3</sup>													
<i>Hygiene, health and the environment</i>																																			
At nominal heat output	At part load heat output																																		
Carbon monoxide emission (CO)	1208 mg/m <sup>3</sup>																																		
Nitrogen oxides emission (NO <sub>x</sub> )	71 mg/m <sup>3</sup>																																		
Emission of organic gaseous carbon (OGC)	63 mg/m <sup>3</sup>																																		
Particulate matter emission (PM)	28 mg/m <sup>3</sup>																																		
	1617 mg/m <sup>3</sup>																																		
	84 mg/m <sup>3</sup>																																		
	77 mg/m <sup>3</sup>																																		
	15 mg/m <sup>3</sup>																																		
<table border="1"> <thead> <tr> <th colspan="3"><i>Safety and accessibility in use</i></th> </tr> <tr> <th>At nominal heat output</th> <th colspan="2">Data for installation to a chimney</th> </tr> </thead> <tbody> <tr> <td>Flue gas outlet temperature</td> <td>349 °C</td> <td>302 °C</td> </tr> <tr> <td>Minimum flue draught</td> <td>12 Pa</td> <td>7 Pa</td> </tr> <tr> <td>Flue gas mass flow</td> <td>10.5 g/s</td> <td>8.7 g/s</td> </tr> <tr> <td>Fire safety of installation to the chimney</td> <td colspan="2">T400 G minimum</td> </tr> </tbody> </table>			<i>Safety and accessibility in use</i>			At nominal heat output	Data for installation to a chimney		Flue gas outlet temperature	349 °C	302 °C	Minimum flue draught	12 Pa	7 Pa	Flue gas mass flow	10.5 g/s	8.7 g/s	Fire safety of installation to the chimney	T400 G minimum																
<i>Safety and accessibility in use</i>																																			
At nominal heat output	Data for installation to a chimney																																		
Flue gas outlet temperature	349 °C	302 °C																																	
Minimum flue draught	12 Pa	7 Pa																																	
Flue gas mass flow	10.5 g/s	8.7 g/s																																	
Fire safety of installation to the chimney	T400 G minimum																																		
<table border="1"> <thead> <tr> <th colspan="3"><i>Energy economy and heat retention</i></th> </tr> <tr> <th colspan="2">Appliance's thermal heat output and energy efficiency</th> <th></th> </tr> <tr> <th>At nominal heat output</th> <th colspan="2">At part load heat output</th> </tr> </thead> <tbody> <tr> <td>Space heat output</td> <td>10.9 kW</td> <td>6.2 kW</td> </tr> <tr> <td>Efficiency</td> <td>78.5 %</td> <td>74 %</td> </tr> <tr> <td>Seasonal space heating efficiency</td> <td colspan="2">Space heating efficiency</td> </tr> <tr> <td>Energy efficiency index (EEI)</td> <td>68.5 %</td> <td></td> </tr> <tr> <td>Energy efficiency class</td> <td>104</td> <td></td> </tr> <tr> <td></td> <td>A</td> <td></td> </tr> <tr> <td>At nominal heat output</td> <td>At part load heat output</td> <td>Standby mode</td> </tr> <tr> <td>Electric power consumption</td> <td>N/A</td> <td>N/A</td> </tr> </tbody> </table>			<i>Energy economy and heat retention</i>			Appliance's thermal heat output and energy efficiency			At nominal heat output	At part load heat output		Space heat output	10.9 kW	6.2 kW	Efficiency	78.5 %	74 %	Seasonal space heating efficiency	Space heating efficiency		Energy efficiency index (EEI)	68.5 %		Energy efficiency class	104			A		At nominal heat output	At part load heat output	Standby mode	Electric power consumption	N/A	N/A
<i>Energy economy and heat retention</i>																																			
Appliance's thermal heat output and energy efficiency																																			
At nominal heat output	At part load heat output																																		
Space heat output	10.9 kW	6.2 kW																																	
Efficiency	78.5 %	74 %																																	
Seasonal space heating efficiency	Space heating efficiency																																		
Energy efficiency index (EEI)	68.5 %																																		
Energy efficiency class	104																																		
	A																																		
At nominal heat output	At part load heat output	Standby mode																																	
Electric power consumption	N/A	N/A																																	
<b>Sustainable use of natural resources</b> <table border="1"> <thead> <tr> <th colspan="3">Environmental sustainability</th> </tr> <tr> <th colspan="3">NPD</th> </tr> </thead> </table>			Environmental sustainability			NPD																													
Environmental sustainability																																			
NPD																																			
<p>The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.</p>																																			
<p>Signed for and on behalf of the manufacturer by:</p> <p>Danny Baijens, CEO  Bladel, The Netherlands 20 November 2025</p>																																			

## 1.2

## BOX 25 75 with wood log storage module

 <i>Crafted to wonder</i>																																	
<b>EU-declaration of conformity</b>																																	
<p>This EC declaration of conformity applies to the product described below and describes the conformity with the following directives:  <b>2009/125/EC Directive for the setting of eco-design requirements for energy-related products (eco-design directive)</b>  Relevant Regulation: (EU) 2015/1185</p>																																	
<b>Declaration of Performance</b>																																	
No. 1.232-083-4 - CPR-2013/07/01																																	
<b>Unique identification code of the product type:</b>	BOX 25 75 with wood log storage module																																
<b>Intended use:</b>	Space heating in residential buildings																																
<b>Manufacturer:</b>	Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands																																
<b>System of AVCP:</b>	3																																
<b>Harmonised technical specifications:</b>	EN 16510-2-1:2022																																
<b>Notified body:</b>	No. 2013																																
<b>Essential characteristics</b>																																	
<table border="1"> <tr> <td><i>Mechanical resistance and stability</i></td> <td>Load bearing capacity</td> <td>120 kg</td> </tr> <tr> <td colspan="2"><i>Safety in case of fire - Protection of combustible materials</i></td> <td><i>Minimum distance to combustible materials</i></td> </tr> <tr> <td>Bottom (d<sub>8</sub>):</td> <td colspan="2">0 cm</td> </tr> <tr> <td>Floor in front (d<sub>1</sub>):</td> <td colspan="2">20 cm</td> </tr> <tr> <td>Ceiling (d<sub>2</sub>):</td> <td colspan="2">75 cm</td> </tr> <tr> <td>Rear (d<sub>3</sub>):</td> <td colspan="2">30 cm</td> </tr> <tr> <td>Side (d<sub>4</sub>):</td> <td colspan="2">40 cm</td> </tr> <tr> <td>Side radiation area (d<sub>5</sub>):</td> <td colspan="2">160 cm</td> </tr> <tr> <td>Front (d<sub>6</sub>):</td> <td colspan="2">160 cm</td> </tr> </table>		<i>Mechanical resistance and stability</i>	Load bearing capacity	120 kg	<i>Safety in case of fire - Protection of combustible materials</i>		<i>Minimum distance to combustible materials</i>	Bottom (d <sub>8</sub> ):	0 cm		Floor in front (d <sub>1</sub> ):	20 cm		Ceiling (d <sub>2</sub> ):	75 cm		Rear (d <sub>3</sub> ):	30 cm		Side (d <sub>4</sub> ):	40 cm		Side radiation area (d <sub>5</sub> ):	160 cm		Front (d <sub>6</sub> ):	160 cm						
<i>Mechanical resistance and stability</i>	Load bearing capacity	120 kg																															
<i>Safety in case of fire - Protection of combustible materials</i>		<i>Minimum distance to combustible materials</i>																															
Bottom (d <sub>8</sub> ):	0 cm																																
Floor in front (d <sub>1</sub> ):	20 cm																																
Ceiling (d <sub>2</sub> ):	75 cm																																
Rear (d <sub>3</sub> ):	30 cm																																
Side (d <sub>4</sub> ):	40 cm																																
Side radiation area (d <sub>5</sub> ):	160 cm																																
Front (d <sub>6</sub> ):	160 cm																																
<table border="1"> <tr> <td colspan="2"><i>Hygiene, health and the environment</i></td> <td><i>At nominal heat output</i></td> <td><i>At part load heat output</i></td> </tr> <tr> <td>Carbon monoxide emission (CO)</td> <td colspan="2">1208 mg/m<sup>3</sup></td> <td>1617 mg/m<sup>3</sup></td> </tr> <tr> <td>Nitrogen oxides emission (NO<sub>x</sub>)</td> <td colspan="2">71 mg/m<sup>3</sup></td> <td>84 mg/m<sup>3</sup></td> </tr> <tr> <td>Emission of organic gaseous carbon (OGC)</td> <td colspan="2">63 mg/m<sup>3</sup></td> <td>77 mg/m<sup>3</sup></td> </tr> <tr> <td>Particulate matter emission (PM)</td> <td colspan="2">28 mg/m<sup>3</sup></td> <td>15 mg/m<sup>3</sup></td> </tr> </table>		<i>Hygiene, health and the environment</i>		<i>At nominal heat output</i>	<i>At part load heat output</i>	Carbon monoxide emission (CO)	1208 mg/m <sup>3</sup>		1617 mg/m <sup>3</sup>	Nitrogen oxides emission (NO <sub>x</sub> )	71 mg/m <sup>3</sup>		84 mg/m <sup>3</sup>	Emission of organic gaseous carbon (OGC)	63 mg/m <sup>3</sup>		77 mg/m <sup>3</sup>	Particulate matter emission (PM)	28 mg/m <sup>3</sup>		15 mg/m <sup>3</sup>												
<i>Hygiene, health and the environment</i>		<i>At nominal heat output</i>	<i>At part load heat output</i>																														
Carbon monoxide emission (CO)	1208 mg/m <sup>3</sup>		1617 mg/m <sup>3</sup>																														
Nitrogen oxides emission (NO <sub>x</sub> )	71 mg/m <sup>3</sup>		84 mg/m <sup>3</sup>																														
Emission of organic gaseous carbon (OGC)	63 mg/m <sup>3</sup>		77 mg/m <sup>3</sup>																														
Particulate matter emission (PM)	28 mg/m <sup>3</sup>		15 mg/m <sup>3</sup>																														
<table border="1"> <tr> <td colspan="2"><i>Safety and accessibility in use</i></td> <td colspan="2"><i>Data for installation to a chimney</i></td> </tr> <tr> <td>Flue gas outlet temperature</td> <td><i>At nominal heat output</i></td> <td colspan="2"><i>At part load heat output</i></td> </tr> <tr> <td>Minimum flue draught</td> <td>349 °C</td> <td colspan="2">302 °C</td> </tr> <tr> <td>Flue gas mass flow</td> <td>12 Pa</td> <td colspan="2">7 Pa</td> </tr> <tr> <td>Fire safety of installation to the chimney</td> <td>10.5 g/s</td> <td colspan="2">8.7 g/s</td> </tr> <tr> <td colspan="4" style="text-align: center;">T400 G minimum</td> </tr> </table>		<i>Safety and accessibility in use</i>		<i>Data for installation to a chimney</i>		Flue gas outlet temperature	<i>At nominal heat output</i>	<i>At part load heat output</i>		Minimum flue draught	349 °C	302 °C		Flue gas mass flow	12 Pa	7 Pa		Fire safety of installation to the chimney	10.5 g/s	8.7 g/s		T400 G minimum											
<i>Safety and accessibility in use</i>		<i>Data for installation to a chimney</i>																															
Flue gas outlet temperature	<i>At nominal heat output</i>	<i>At part load heat output</i>																															
Minimum flue draught	349 °C	302 °C																															
Flue gas mass flow	12 Pa	7 Pa																															
Fire safety of installation to the chimney	10.5 g/s	8.7 g/s																															
T400 G minimum																																	
<table border="1"> <tr> <td colspan="2"><i>Energy economy and heat retention</i></td> <td colspan="2"><i>Appliance's thermal heat output and energy efficiency</i></td> </tr> <tr> <td>Space heat output</td> <td><i>At nominal heat output</i></td> <td colspan="2"><i>At part load heat output</i></td> </tr> <tr> <td>Efficiency</td> <td>10.9 kW</td> <td colspan="2">6.2 kW</td> </tr> <tr> <td>Seasonal space heating efficiency</td> <td>78.5 %</td> <td colspan="2">74 %</td> </tr> <tr> <td>Energy efficiency index (EEI)</td> <td colspan="3" style="text-align: center;"><b>Space heating efficiency</b></td> </tr> <tr> <td>Energy efficiency class</td> <td>68.5 %</td> <td colspan="2"></td> </tr> <tr> <td>Electric power consumption</td> <td><i>At nominal heat output</i></td> <td><i>At part load heat output</i></td> <td><i>Standby mode</i></td> </tr> <tr> <td></td> <td>N/A</td> <td>N/A</td> <td>N/A</td> </tr> </table>		<i>Energy economy and heat retention</i>		<i>Appliance's thermal heat output and energy efficiency</i>		Space heat output	<i>At nominal heat output</i>	<i>At part load heat output</i>		Efficiency	10.9 kW	6.2 kW		Seasonal space heating efficiency	78.5 %	74 %		Energy efficiency index (EEI)	<b>Space heating efficiency</b>			Energy efficiency class	68.5 %			Electric power consumption	<i>At nominal heat output</i>	<i>At part load heat output</i>	<i>Standby mode</i>		N/A	N/A	N/A
<i>Energy economy and heat retention</i>		<i>Appliance's thermal heat output and energy efficiency</i>																															
Space heat output	<i>At nominal heat output</i>	<i>At part load heat output</i>																															
Efficiency	10.9 kW	6.2 kW																															
Seasonal space heating efficiency	78.5 %	74 %																															
Energy efficiency index (EEI)	<b>Space heating efficiency</b>																																
Energy efficiency class	68.5 %																																
Electric power consumption	<i>At nominal heat output</i>	<i>At part load heat output</i>	<i>Standby mode</i>																														
	N/A	N/A	N/A																														
<b>Sustainable use of natural resources</b>																																	
<table border="1"> <tr> <td colspan="3"><i>Environmental sustainability</i></td> </tr> <tr> <td colspan="3">NPD</td> </tr> </table>		<i>Environmental sustainability</i>			NPD																												
<i>Environmental sustainability</i>																																	
NPD																																	
<p>The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.</p>																																	
<p>Signed for and on behalf of the manufacturer by:</p> <p>Danny Baijens, CEO</p> 																																	
<p>Bladel, The Netherlands 20 November 2025</p>																																	

## 2 About this document

This document shows the necessary information to do these tasks on the BOX 25 75

- Installation
- Maintenance

This document refers to the BOX 25 75 as 'the appliance'. This document is an essential part of your appliance. Read it carefully before you do work on the appliance. Keep it in a safe place.

The original instructions of the document are in English. All other language versions of the document are translations of the original instructions. It is not always possible to provide a detailed illustration of every single item of the equipment. The illustrations in this document show a typical setup. The illustrations are for instructional use only.

### 2.1 How to work with this document

1. Make yourself familiar with the structure and content of the document.
2. Read the safety section in detail.
3. Make sure that you understand all the instructions.
4. Do the procedures completely and in the given sequence.

### 2.2 Warnings and cautions used in this document

#### Warning

If you do not obey these instructions, there is a risk that can cause personal injury or death.

#### Caution

If you do not obey these instructions, there is a risk of damage to the appliance, installation or to property.

#### Note

A note shows more information.

Symbol	Description
	Visual sign that there is a hazard
	Visual sign that there is a notice

### 2.3 Related documentation

- Installation and maintenance manual
- User manual


## 3 Description



### Note:

The appliance is a room-sealed appliance only if combustion air comes from the outer side of the building through a pipe that is connected to the combustion air inlet of the appliance. In all other cases the appliance is not a room-sealed appliance and the data for leak tightness as given in section [11.1](#) are not valid.


### 3.1 Overview of the front of the appliance

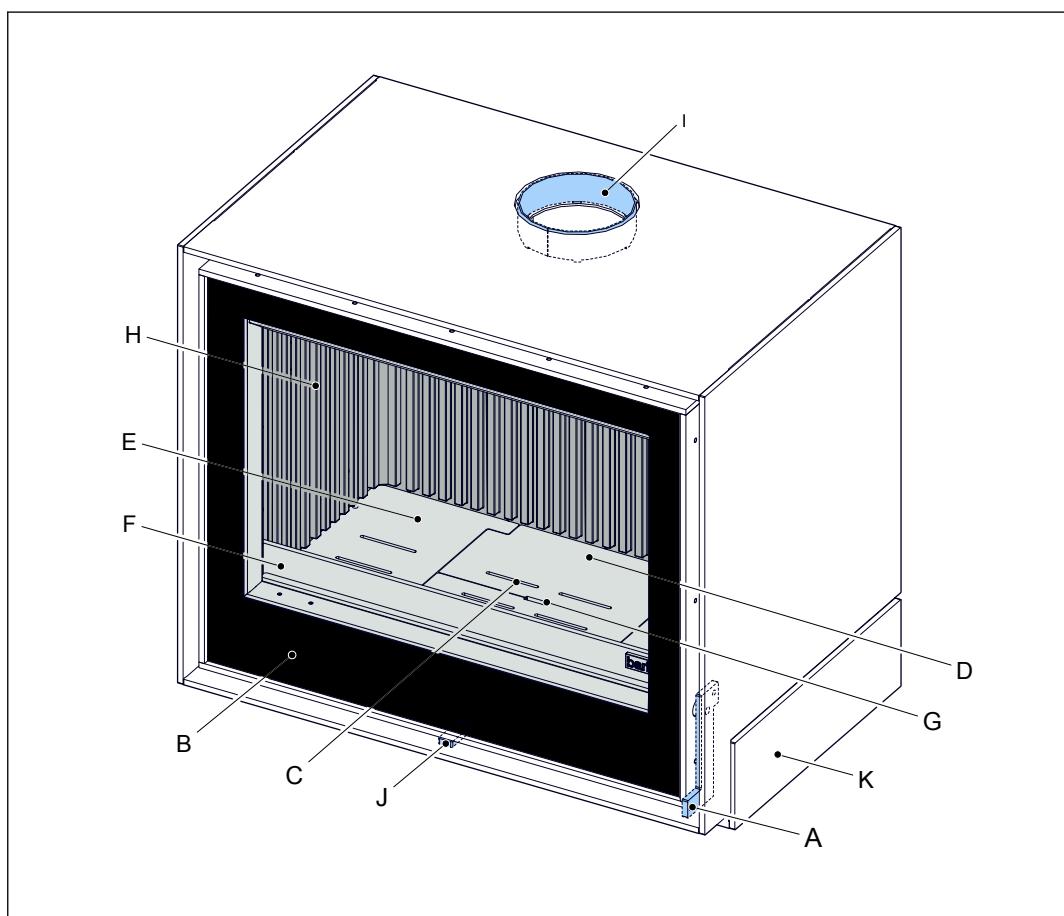

A	Door handle	G	Ash tray (under the grate)
B	Glass	H	Combustion chamber panels
C	Primary air inlet	I	Flue connection
D	Grate	J	Control lever
E	Steel bottom plates	K	Steel base
F	Log guard		

## 3.2


### Overview of the bottom of the appliance

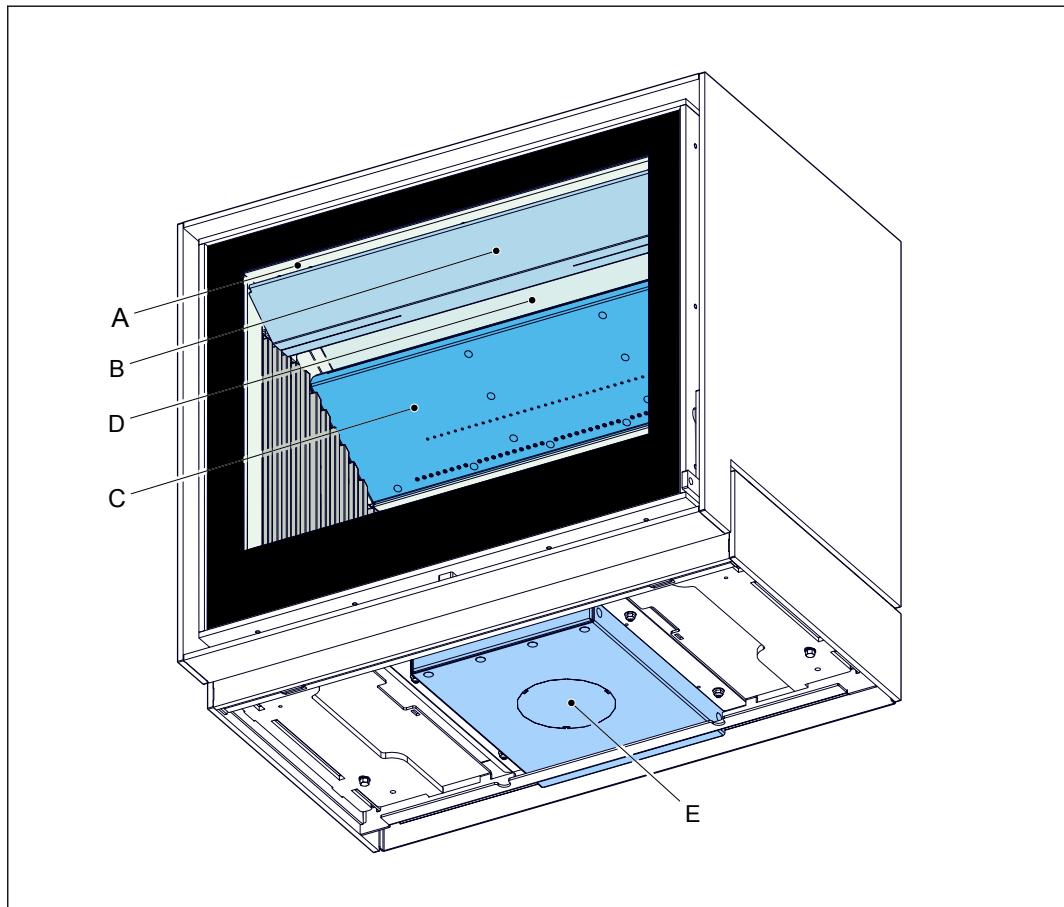

A	Airwash inlet	D	Upper baffle
B	Heat shield	E	Connection for external combustion air supply
C	Lower baffle with secondary air inlet openings		

### 3.3


### Overview of the rear of the appliance

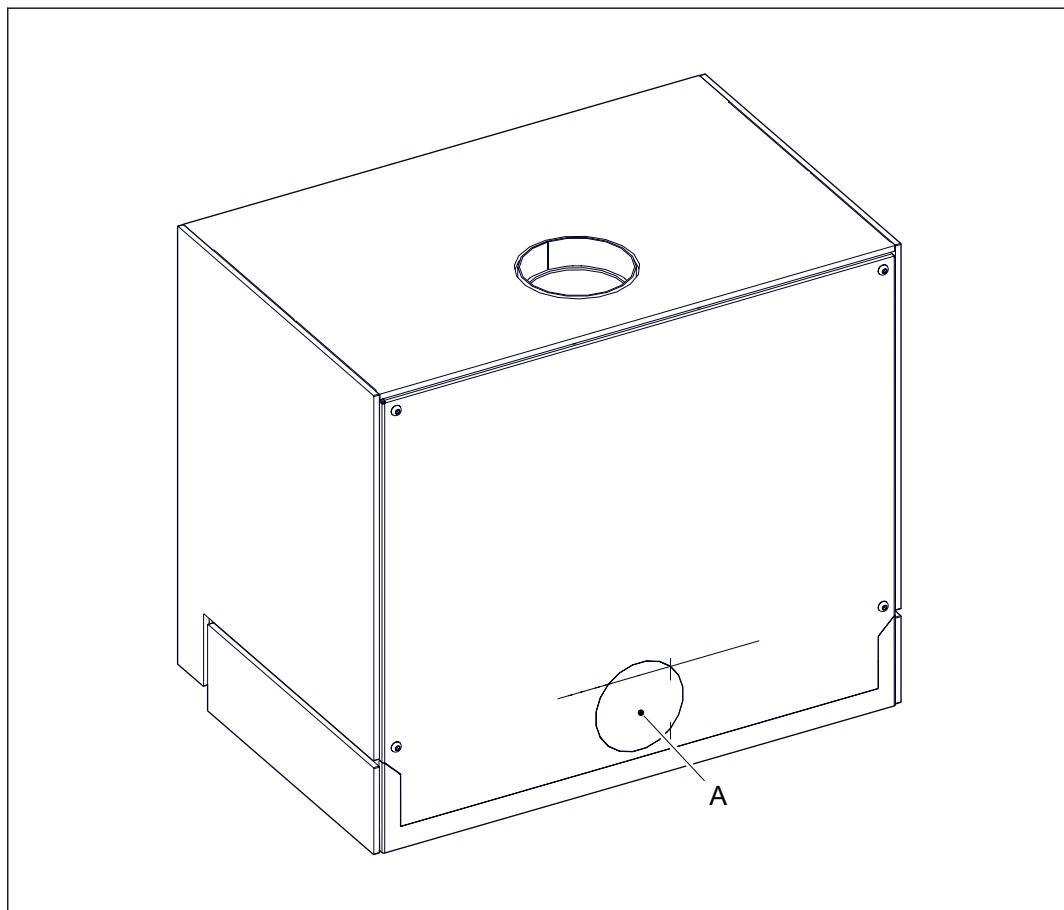

A Connection for external combustion  
air supply


## 3.4

### Overview of the bottom of the appliance with wood log storage module

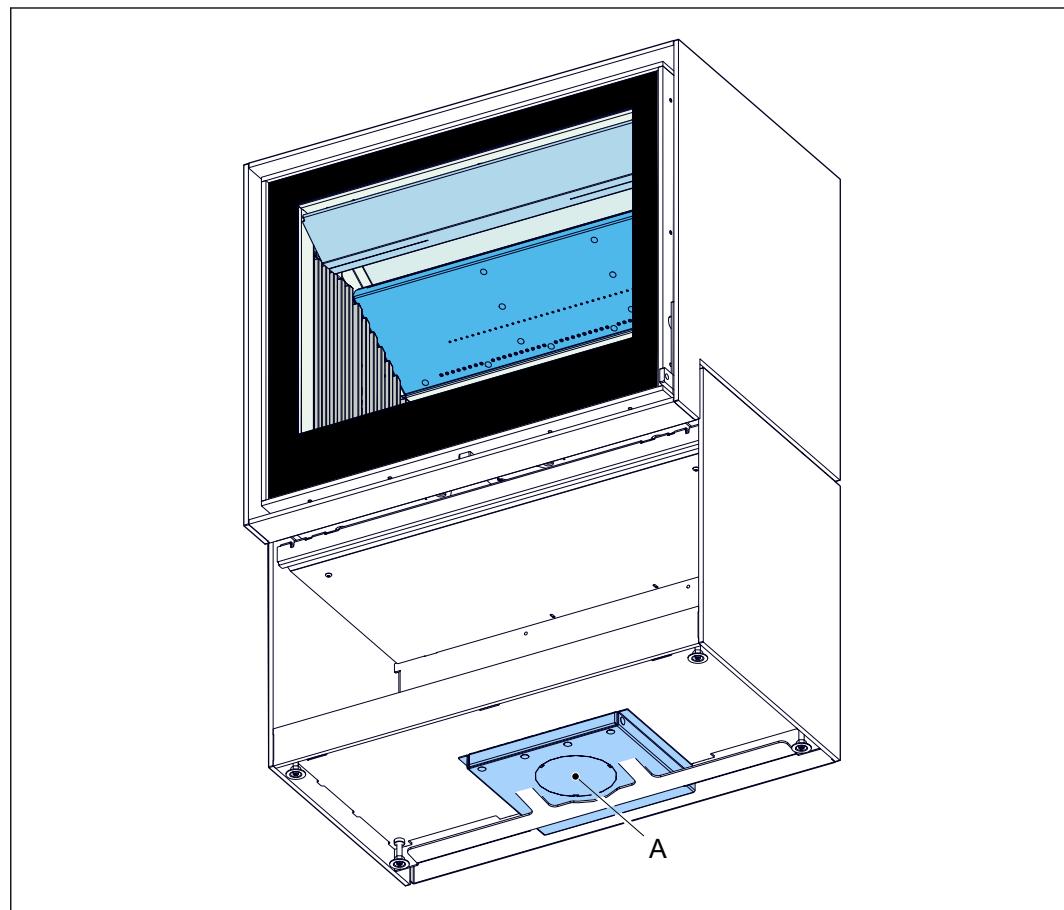

A Connection for external combustion air supply

### 3.5 Overview of the rear of the appliance with wood log storage module

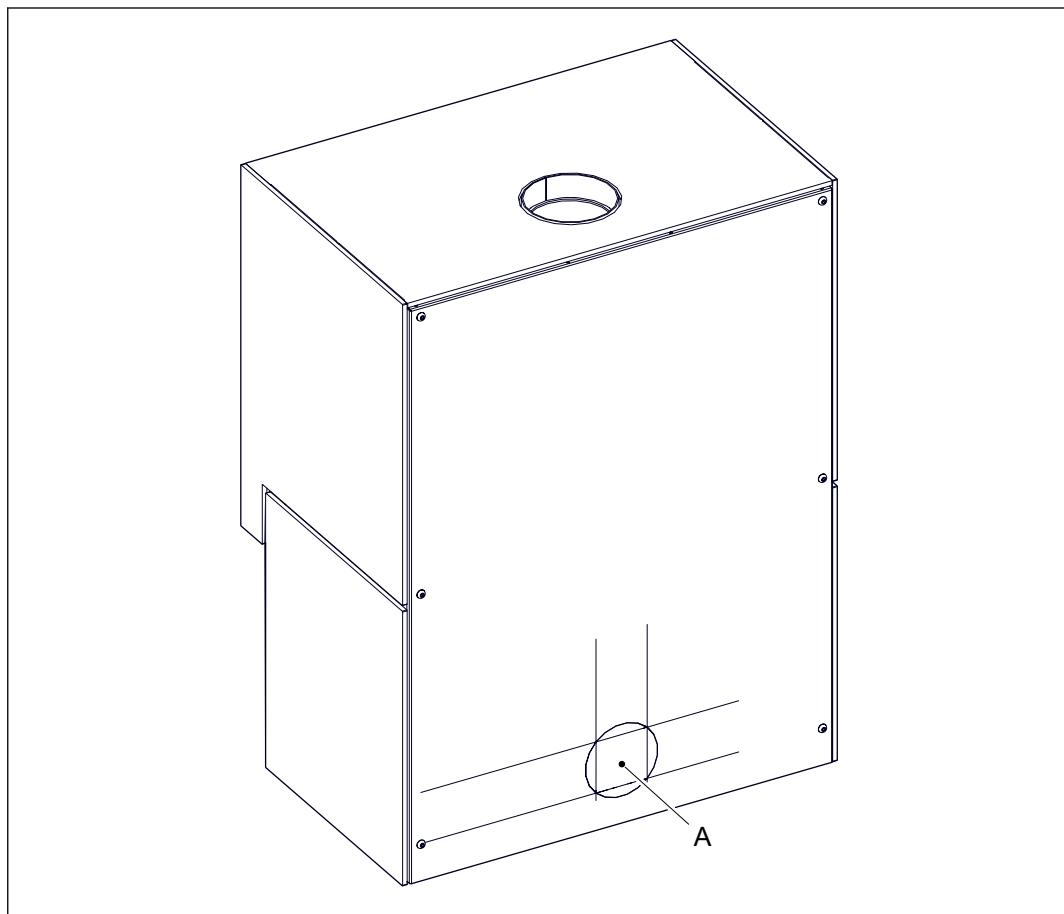

A Connection for external combustion air supply

### 3.6 Intended use

The appliance is intended for indoor use to heat the room wherein it is installed. Do not use it for other purposes.

It is not allowed to use the appliance as primary heating appliance.

The appliance is intended for use with wood logs or wood briquettes as fuel. Do not use other fuels and waste.

The appliance is intended for use with the door closed.

The appliance may only be used at the location that meets the requirements for the installation of the appliance.

The appliance is intended for intermittent use and is not intended for continuous use.

It is not allowed to connect the appliance on a shared flue gas channel.

The appliance is intended to heat the room by direct heating. It is not allowed to connect the appliance to a central-heating installation.

## 4 Safety

### 4.1 Safety instructions for installation

**Warning:**



- Installation must be done by a qualified installer.
- Install the appliance in accordance with the following installation instructions and the national and local applicable regulations.
- Make sure that the area around the fireplace is free of flammable material at all times. The minimal safe distance is 180 cm.
- If applicable, contact the authorities if it is allowed to connect the appliance to a flue that is also connected to another appliance.
- Do not install the appliance directly against a flammable wall or non-flammable wall. Refer to section [5](#) for minimum clearances between the appliance and the wall.
- Install a carbon monoxide alarm. The carbon monoxide alarm should be battery-powered and designed to operate for the life of the carbon monoxide alarm, following which it should be replaced. Alternatively a mains powered carbon monoxide alarm can be used, however this must be fitted with a sensor failure warning device.

**Caution:**



- Install the appliance on a floor with adequate load-bearing capacity. Refer to section [11](#) for the weight of the appliance.
- Make sure that the chimney has no creaks and is in general good order.
- Install a suitable cap on the chimney outlet to avoid birds' nests build in the chimney.
- Parts in the appliance can be moved during transportation. Make sure these parts are in the correct position.
- Do not use masking tape on the appliance. Masking tape can damage the finish of the appliance.
- Make sure that the chimney temperature class is minimum T400 sootfire resistant.
- Do not install the appliance in a room with a ventilation system that makes pressures below -15 Pa.

### 4.2 Safety instructions with regard to the environment

- Dispose of the packing materials in an environmentally friendly way.
- Dispose of batteries as chemical waste.
- Dispose of ceramic heat-resistant glass as household waste. Do not dispose of ceramic heat-resistant glass in a glass recycling container.
- Dispose of an obsolete appliance according to instructions of the authorities or the fitter.
- Obey the local regulations.

## 5 Clearances

### Warning:




- Obey the instructions in this section. Failure to follow these instruction can create a fire hazard.
- Do not put the appliance directly against a flammable or non-flammable wall.

**Caution:** Make sure that flammable materials near the appliance can never reach a temperature above 85 degrees centigrade



- BOX 25 75, refer to section [5.1](#).
- BOX 25 75 with wood log storage module, refer to section [5.2](#).

### 5.1 Safety distances BOX 25 75

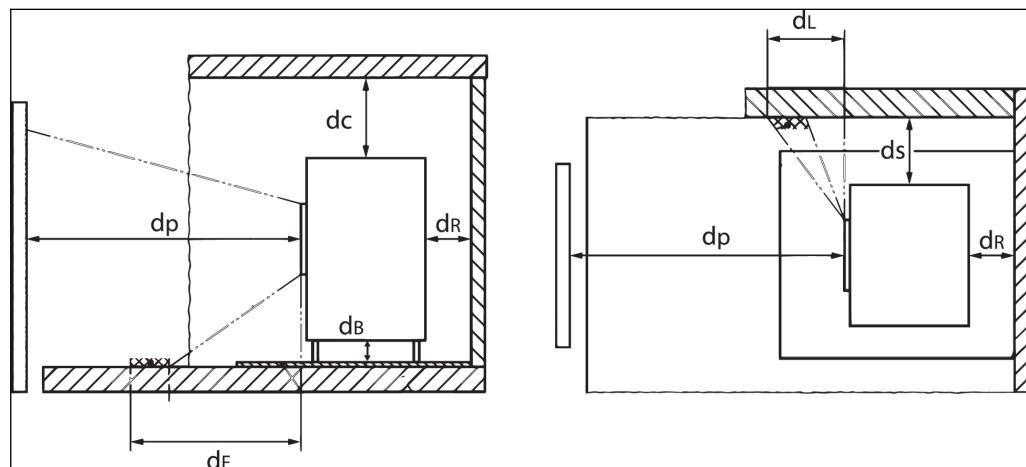


BOX 25 75			
Label	Minimum distance to flammable materials in cm	Remark	Minimum distance to non-flammable materials in cm
$d_C$	75		10
$d_P$	160		50
$d_F$	50		-
$d_B$	See remark.	Install a non-flammable floor plate with a thickness of minimum 3 cm (floor stone) when the appliance is put on a flammable floor. The width of the floor plate must be minimum 15 cm from each side of the appliance. The depth of the floor plate in front of the appliance ( $d_F$ ) is minimum 50 cm. If the appliance is put on a flammable platform, make sure the depth of the non-flammable hearth is the same size as the platform in front of the appliance.	-
$d_L$	160		-
$d_S$	40		5
$d_R$	30		5



**Note:**

Heat radiation from the appliance can cause cracks in a floor plate of natural stone if put directly in front of the appliance. Make sure the floor plate is resistant to temperatures of more than 100 °C. Refer to the supplier of the natural stone for advice

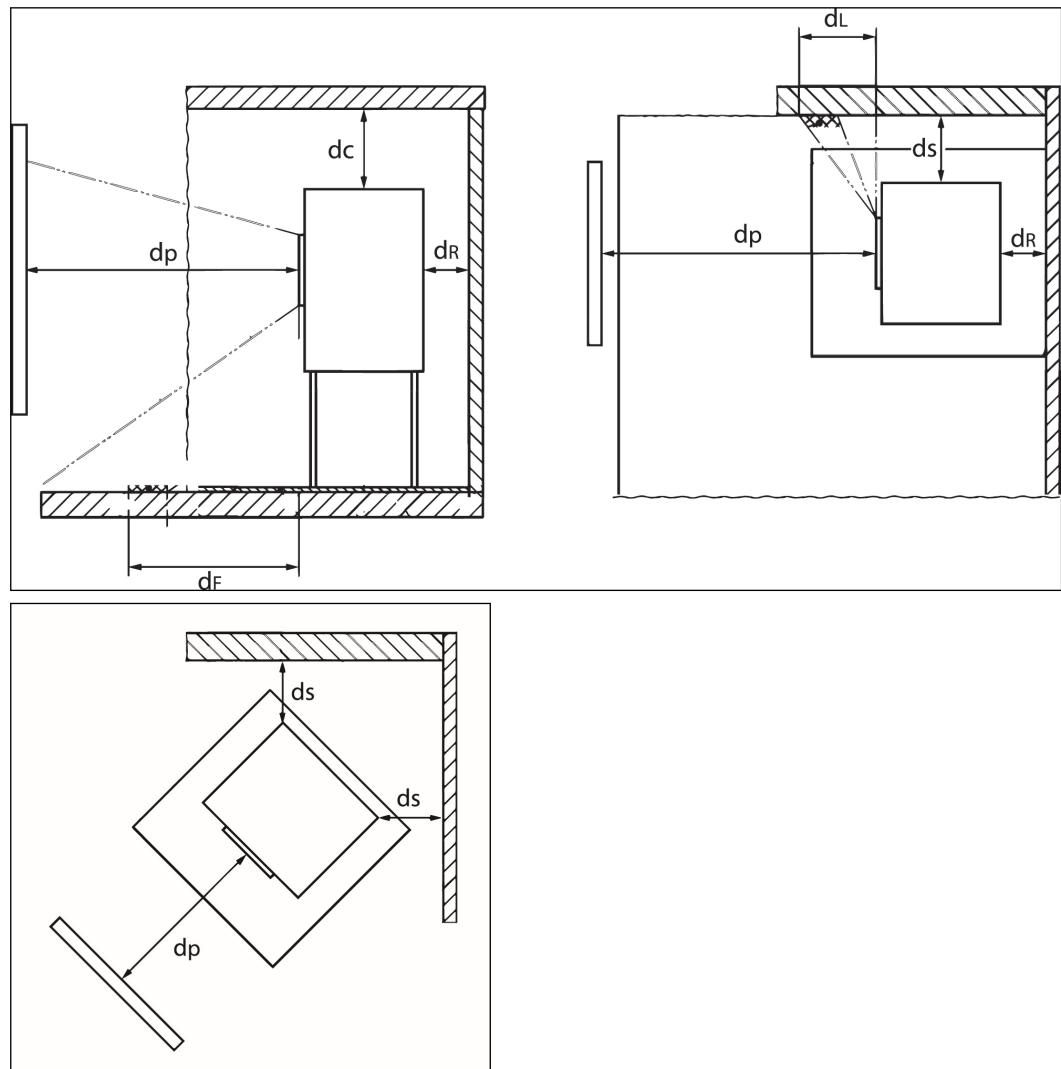**5.2****Safety distances with wood log storage module**

BOX 25 75 with wood log storage module			
Label	Minimum distance to flammable materials in cm	Remark	Minimum distance to non-flammable materials in cm
$d_C$	75		10
$d_P$	160		50
$d_F$	20		-
$d_B$	See remark.	Install a non-flammable floor plate with a thickness of minimum 1 cm (floor stone) when the appliance is put on a flammable floor. The width of the floor plate must be minimum 15 cm from each side of the appliance. The depth of the floor plate in front of the appliance ( $d_F$ ) is minimum 20 cm. If the appliance is put on a flammable platform, make sure the depth of the non-flammable plate is the same size as the platform in front of the appliance.	-
$d_L$	160		-
$d_S$	40		5
$d_R$	30		5

## 6 Installation requirements


### 6.1 Requirements on the installation of the appliance

- Make sure that the location agrees with the safety requirements. Refer to section [4.1](#).
- The minimum size of the room of installation is 38 m<sup>3</sup>.
- Make sure the floor is made of concrete or a solid pedestal of non-combustible material.
- For the BOX 25 75 without wood log storage module, make sure the floor is level. After placement it is not possible to level the appliance.
- Make sure the floor can support the weight of the appliance. Refer to section [11.1](#) for the weight of the appliance.
- Make sure that the floor temperatures below and in front of the appliance cannot be higher than 85 °C, during use of the appliance. Refer to section [5](#).
- The non-combustible floor must have a width that extends at least 150 mm from each side of the appliance and a minimum depth in front of the appliance according the requirements in section [5](#).
- Make sure the room where the appliance is installed has correct ventilation.
- Make sure that combustion air can flow into the appliance without obstruction.
- If applicable, install a valve in the external combustion air pipe.
- The carbon monoxide alarm must be fitted and fixed in place within the same room as the appliance and can be placed either on the ceiling or wall between 1 meter and 3 meter horizontally from the appliance. If fitting to the ceiling it must be at least 300mm from any wall. If fitting to a wall, it must be placed as high as possible above any doors or windows at 150mm below the ceiling.

### 6.2 Installation on a natural stone platform

Obey the requirements if the appliance is put on a natural stone platform.

- The platform must have minimum thickness of 3 cm.
- The platform must support the weight of the appliance directly underneath it.
- Ask your natural stone dealer for additional advice regarding the specific type of stone in combination with the appliance.

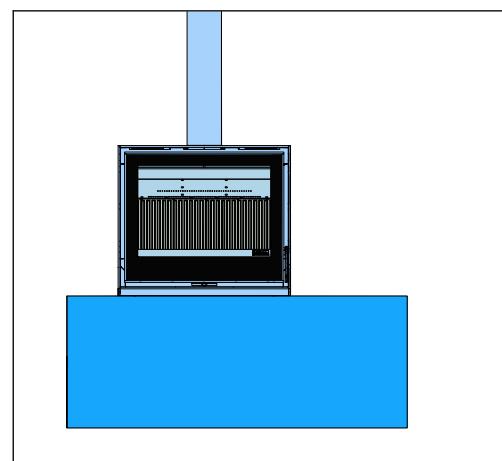

### 6.3 Requirements on the external combustion air pipe

- Make sure the external combustion air pipe obeys the national and local applicable regulations.
- The inner diameter of the combustion air pipe must be minimum 125 mm over the total length.
- Use a flexible stainless steel or aluminum pipe.
- The maximum length of the external combustion air pipe is 5 meter.
- Do not use more than 1 bend of 90°.

- Make sure to cover the inlet of the external combustion inlet pipe with a suitable grate.
- It is recommended to install a valve in the external combustion air valve, to avoid debris of fallen leaves in the line and to avoid water vapour condensation in the appliance.

## 6.4

### Requirements on the external combustion air pipe

- Make sure the external combustion air pipe obeys the national and local applicable regulations.
- The inner diameter of the combustion air pipe must be minimum 125 mm over the total length.
- Use a flexible stainless steel or aluminum pipe.
- The maximum length of the external combustion air pipe is 5 meter.
- Do not use more than 1 bend of 90°.
- Make sure to cover the inlet of the external combustion inlet pipe with a suitable grate.
- It is recommended to install a valve in the external combustion air valve, to avoid debris of fallen leaves in the line and to avoid water vapour condensation in the appliance.

## 7 Installation of the BOX 25 75 with steel base

### 7.1 Install the appliance

1. Put the appliance in the designated position. To put the appliance on a natural stone platform, refer to section [8](#).
2. Obey the safety distances. Refer to section [5.1](#).
3. If necessary, put a nonflammable hearth under the appliance. Refer to section [5.1](#).
4. Make sure that the flue connection on the appliance is correct in line with the flue pipe to the ceiling.
5. Make sure the appliance is installed horizontally. Use a spirit lever.

### 7.2 Connect the optional external air supply


- The appliance has the possibility to connect a supply pipe for external combustion air. During operation the appliance gets combustion air from this air duct.
- It is strongly recommended to install a valve in the external combustion air supply pipe, to avoid debris in the pipe and to avoid water vapor condensation in the appliance when not in use.

Connection on the rear of the appliance, refer to section [7.2.1](#).


Connection on the bottom of the appliance, refer to section [7.2.2](#).

#### 7.2.1 Rear connection


1. Remove the round break out plate at the rear of the appliance with a hammer. Another round break out plate is now visible.

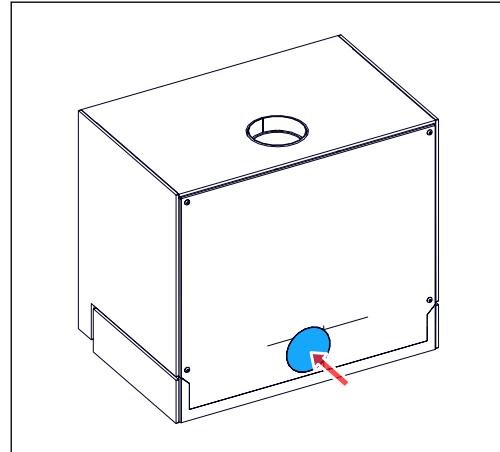

2. Remove the round break out plate with a hammer.

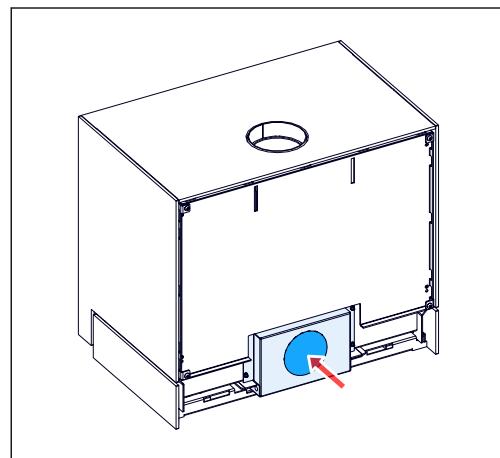


3. Put the connection ring in the open external air inlet opening.
4. Bend out the 3 lips on the connection ring to attach the connection ring on the inlet opening.
5. Apply a sealing compound (e.g. silicone sealant or similar) between the inlet opening and the connection ring.
6. Identify the location in the outer wall for the external combustion air supply inlet.
7. Make a hole in the outer wall with at a minimum diameter of 125.
8. Put a flexible aluminum pipe or rigid steel pipe in the hole.
9. Install a grate in the hole in the outer wall and attach the pipe to it.
10. Attach the other end of the pipe on the connection ring. Use a hose clamp or screws.

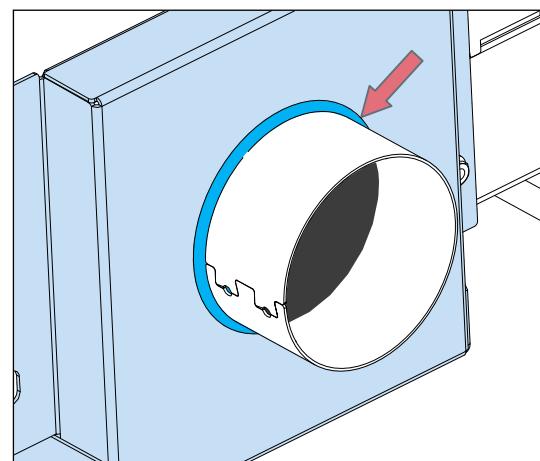

## 7.2.2


### Bottom connection

1. Remove the round break out plate at the bottom of the appliance with a hammer.

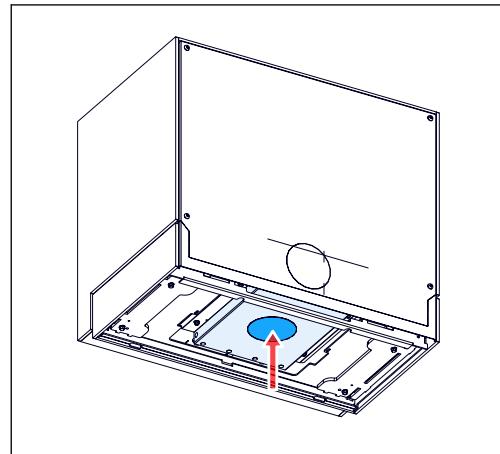

2. If necessary, put the connection ring in the open external air inlet opening.
3. Bend out the 3 lips on the connection ring to attach the connection ring on the inlet opening.

4. Apply a sealing compound (e.g. silicone sealant or similar) between the inlet opening and the connection ring
5. Identify the location in the floor for the external combustion air supply inlet.
6. Make a hole in the floor with at a minimum diameter of 125.
7. Put a flexible aluminum pipe in the hole.
8. Attach the other end of the flexible aluminum pipe on the connection ring. Use a hose clamp or screws.

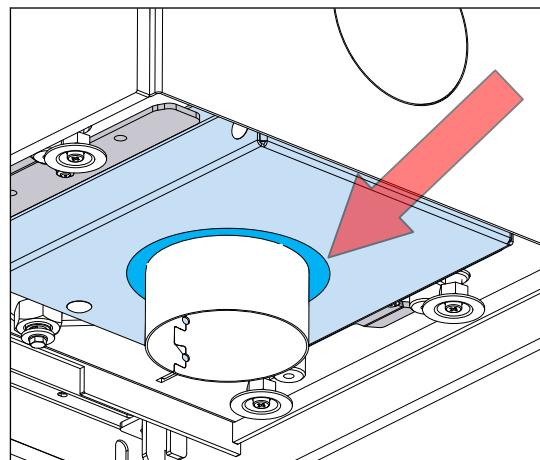

## 7.3 Connect the flue gas pipe

### Preliminary requirements

- If the appliance is installed on an unlined, masonry flue with a large diameter, use an insulated flue lining system .
- Make sure the design and installation of the chimney is in accordance with EN 15287-2:2008, EN 13384-1:2015+A1:2019 and the good operation of the chimney is proven according EN 13384-2:2015+A1:2019 for the situation on site.

Only do this procedure after finish of the procedure in section [7.2](#).



**Caution:** During operation of the appliance the outer side of the flue system becomes hot. Refer to section [5.1](#) for minimum distances to flammable material.



**Note:** If the appliance is installed on an unlined, masonry flue with a large diameter, consider using a flue lining system to improve the performance of the appliance.

### Procedure

1. Connect the flue to the flue gas connection on the appliance. If necessary use a steel flue adaptor.
2. If the flue is connected to an existing (masonry) chimney, make sure that the gap between the flue and the existing chimney is sealed with ceramic wool or any other applicable component (ask your flue system supplier for advice)
3. Make sure that all mechanical connections of the flue system are correctly used.
4. Make sure that all of the flue system is gas-tight,

## 7.4 Final check on the appliance

1. Make sure the door closes and opens easy.
2. Make sure the control lever moves easy to left and right without undue noise.
3. Make sure the plates on the side and rear wall of the combustion chamber and the baffles are in the correct position.

Contact your dealer if the final check shows a defect.

## 8

## Installation of the BOX 25 75 with stone base


---

1. Put the stone base on the intended location of the appliance.
2. Obey the safety distances. Refer to section [5.1](#).
3. Put the appliance on the stone base.
4. Make sure the 4 adjustable feet fit into the 4 notches on the stone base.
5. Follow the instructions in sections [7.2](#), [7.3](#) and [7.4](#).

## 9 Installation of the BOX 25 75 with wood log storage module

### 9.1 Install the appliance

1. Put the appliance in the designated position.
2. Obey the safety distances. Refer to section [5.2](#).
3. If necessary, put a nonflammable plate under the appliance. Refer to section [5.2](#).
4. Make sure that the flue connection on the appliance is correct in line with the flue pipe to the ceiling.
5. Make sure the appliance is installed horizontally. If necessary, adjust the adjustable feet with a 13 mm fork spanner. Use a spirit lever.

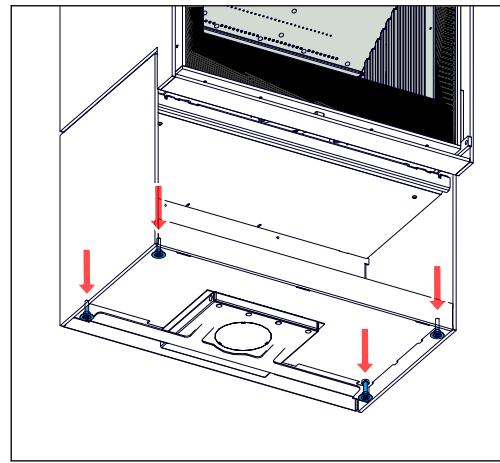

## 9.2

### Connect the optional external air supply

- The appliance has the possibility to connect a supply pipe for external combustion air. During operation the appliance gets combustion air from this air duct.
- It is strongly recommended to install a valve in the external combustion air supply pipe, to avoid debris in the pipe and to avoid water vapor condensation in the appliance when not in use.


Connection on the rear of the appliance, refer to section [9.2.1](#).

Connection on the bottom of the appliance, refer to section [9.2.2](#).


#### 9.2.1

##### Rear connection

1. Remove the round break out plate at the rear of the appliance with a hammer. Another round break out plate is now visible.

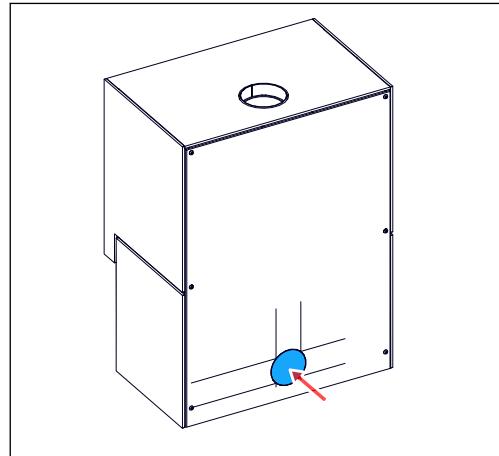


2. Remove the round break out plate with a hammer.

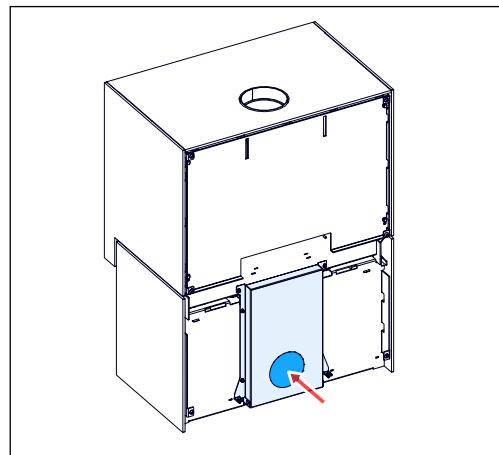

3. Put the connection ring in the open external air inlet opening.
4. Bend out the 3 lips on the connection ring to attach the connection ring on the inlet opening.


5. Apply a sealing compound (e.g. silicone sealant or similar) between the inlet opening and the connection ring.
6. Identify the location in the outer wall for the external combustion air supply inlet.
7. Make a hole in the outer wall with at a minimum diameter of 125.
8. Put a flexible aluminum pipe or rigid steel pipe in the hole.
9. Install a grate in the hole in the outer wall and attach the pipe to it.
10. Attach the other end of the pipe on the connection ring. Use a hose clamp or screws.

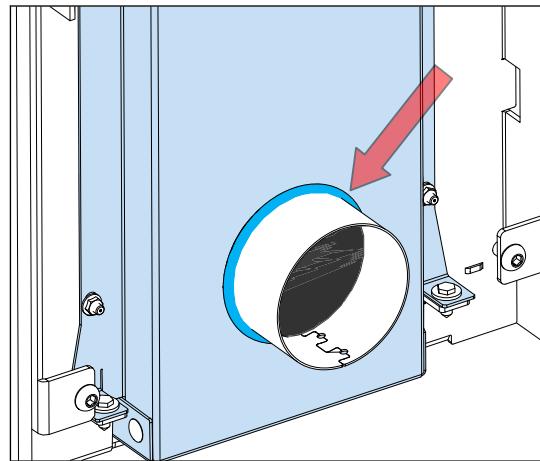


## 9.2.2

### Bottom connection

1. Remove the round break out plate at the bottom of the appliance with a hammer.

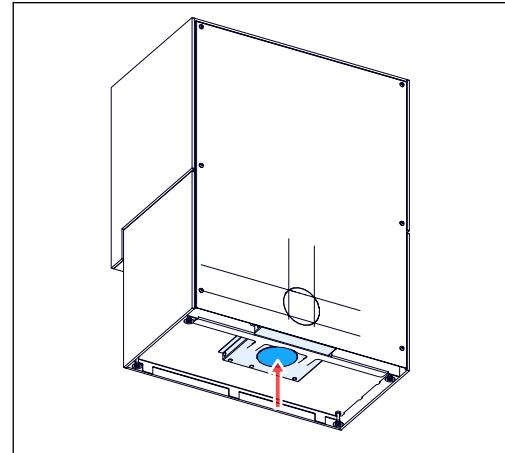

2. If necessary, put the connection ring in the open external air inlet opening.
3. Bend out the 3 lips on the connection ring to attach the connection ring on the inlet opening.
4. Apply a sealing compound (e.g. silicone sealant or similar) between the inlet opening and the connection ring.
5. Identify the location in the floor for the external combustion air supply inlet.
6. Make a hole in the floor with at a minimum diameter of 125.
7. Put a flexible aluminum pipe in the hole.
8. Attach the other end of the flexible aluminum pipe on the connection ring. Use a hose clamp or screws.

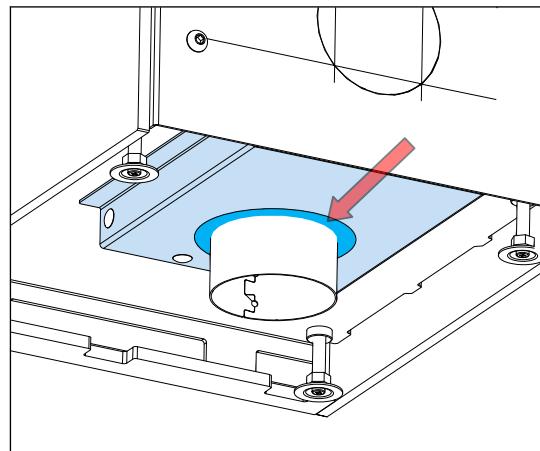

## 9.3 Connect the flue gas pipe



**Caution:** During operation of the appliance the outer side of the flue system becomes hot. Refer to section [5.2](#) for minimum distances to flammable material.



**Note:** If the appliance is installed on an unlined, masonry flue with a large diameter, consider using a flue lining system to improve the performance of the appliance.

1. Connect the flue to the flue gas connection on the appliance. If necessary use a steel flue adaptor.
2. If the flue is connected to an existing (masonry) chimney, make sure that the gap between the flue and the existing chimney is sealed with ceramic wool or any other applicable component (ask your flue system supplier for advice)
3. Make sure that all mechanical connections of the flue system are correctly used.
4. Make sure that all of the flue system is gas-tight,

## 9.4 Final check on the appliance

1. Make sure the door closes and opens easy.
2. Make sure the control lever moves easy to left and right without undue noise.
3. Make sure the plates on the side and rear wall of the combustion chamber and the baffles are in the correct position.

Contact your dealer if the final check shows a defect.

## 10 Maintenance

**Warning:**

Make sure that the appliance has cooled down completely before doing the procedures in this section.

Do all procedures in this section when necessary.

### 10.1 Appliance

1. Remove ashes from the floor of the combustion chamber.
2. Examine the door seals. Replace damaged seals.
3. Remove the grate and empty the ash tray.
4. Examine the baffle for damage. Replace when damaged.
5. Clean both sides of the glass with glass spray or ceramic hob cleaner.
6. Clean the inside of the appliance with a soft brush.
7. Clean the metal parts on the outside of the appliance with a dry lint free cloth. Use Barbas heat resistant paint spray to repair lacquer damage.

### 10.2 Combustion air supply

1. Make sure that the inlet of the pipe of the external combustion air supply is not blocked by leaves or other debris.
2. Clean the inlet of the pipe of the external combustion air supply.

### 10.3 Chimney

**Note:**

It is recommended to contact a registered chimney sweep company to inspect and clean the chimney.


1. Remove the heat shield, lower baffle and upper baffle before the chimney sweep work. Refer to section [10.5](#) for the procedure to remove the heat shield and the baffles.
2. Sweep and inspect the chimney
3. Make sure there is no blockage in the chimney, for example by birds' nests.
4. Examine for cracks, loose parts and flue gas leakage. It is recommended to use an inspection camera.
5. Install the heat shield, lower baffle and upper baffle. Refer to section [10.7](#) for the procedure to install the heat shield and the baffles.

### 10.4 Removal of the bottom plates, grate and ash tray


**Note:**

Make sure to remove all ashes and unburnt wood from the combustion chamber before the start of this procedure.


1. Lift the front log guard (1) and move the left side up.
2. Remove the front log guard (2)

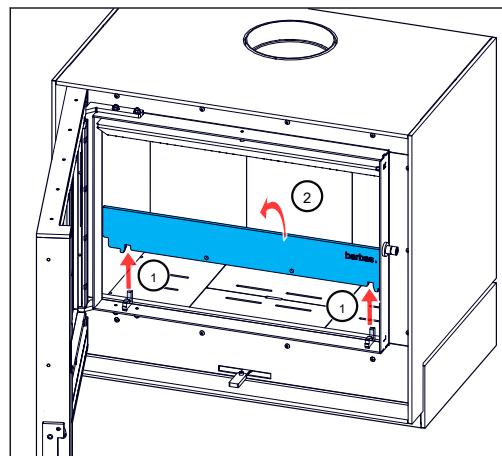

3. Lift the 2 grate plates and remove from the combustion chamber.

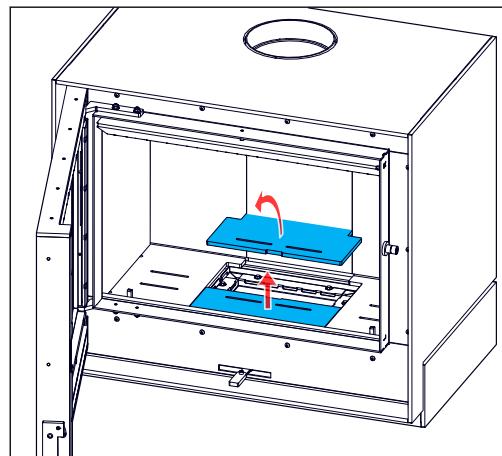

4. Move the 2 steel bottom plates to the center of the fireplace bottom.
5. Lift the steel bottom plates up and remove.

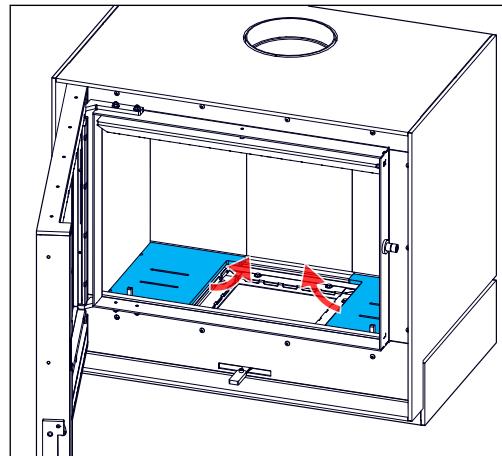

## 10.5

### Removal of the baffles




#### Note:

Make sure to remove all ashes and unburnt wood from the combustion chamber before the start of this procedure.


1. Remove the heat shield. Refer to section [10.5.1](#).
2. Remove the lower baffle. Refer to section [10.5.2](#).
3. Remove the upper baffle. Refer to section [10.5.3](#).

### 10.5.1 Remove the heat shield

1. Open the door.
2. Loosen the nut above the heat shield with a 3 mm hexagonal key and a 10 mm fork spanner. Turn the nut down with the fork spanner and turn the screw up with the hexagonal key until the screw is loose from the heat shield.

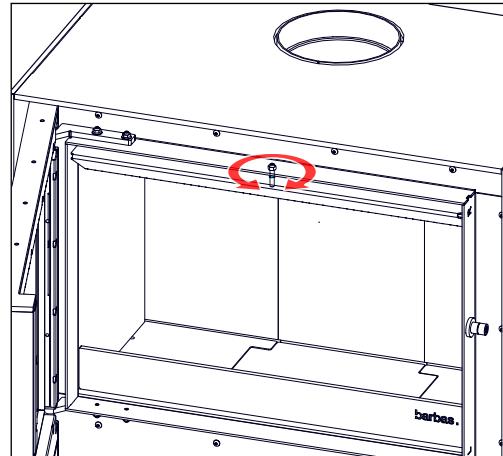


3. Push up the front of the heat shield (1) and pull it forward (2) and move downward to a vertical position (3).

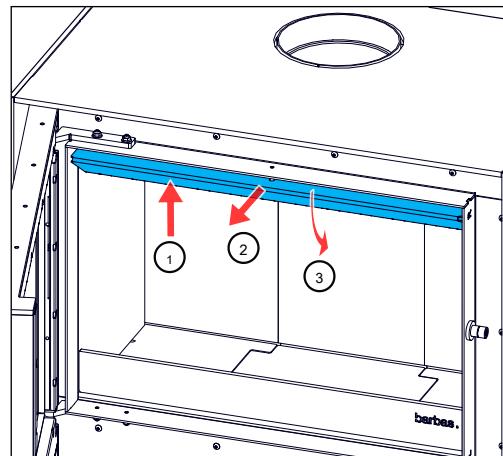

### 10.5.2 Remove the lower baffle

Only do this procedure after finish of the procedure in section [10.5.1](#).


1. Push up the right side of the lower baffle a small distance (1).
2. Lower the left side of the lower baffle a small distance (2) and remove the baffle from the appliance (3).

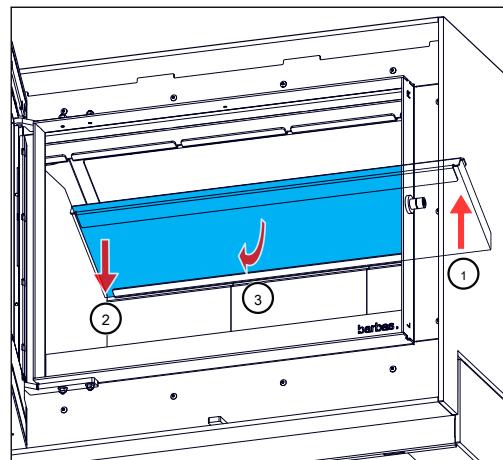

### 10.5.3 Remove the upper baffle

Only do this procedure after finish of the procedure in section [10.5.2](#).



1. Move the upper baffle approximately 1 cm forward (1)
2. Push up the right side of the upper baffle a small distance (2).
3. Lower the left side of the upper baffle a small distance (3) and remove the baffle from the appliance (4).

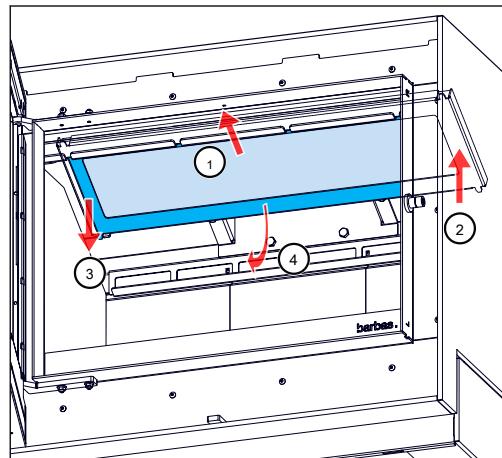


### 10.6

#### Install the bottom plates, ash tray and grate

1. Put the left steel bottom plate on the bottom of the combustion chamber.
2. Move the steel bottom plate to the left as much as possible.
3. Put the right steel bottom plate on the bottom of the combustion chamber.
4. Move the steel bottom plate to the right as much as possible.
5. Put a grate on the ashtray with the short side in the direction of the rear wall and move to the rear as far as possible
6. Put the other grate plate with the short side in the direction of the front of the combustion chamber. Move the grate as far as possible to the front of the bottom of the combustion chamber.

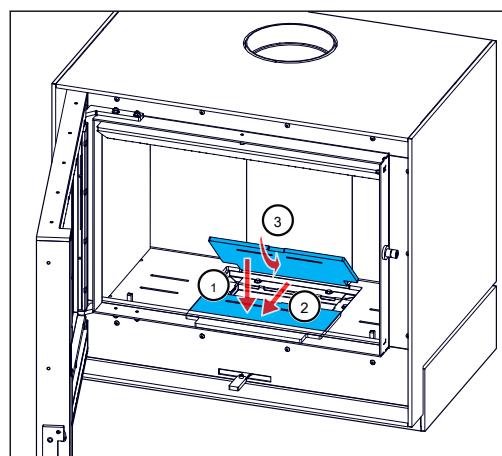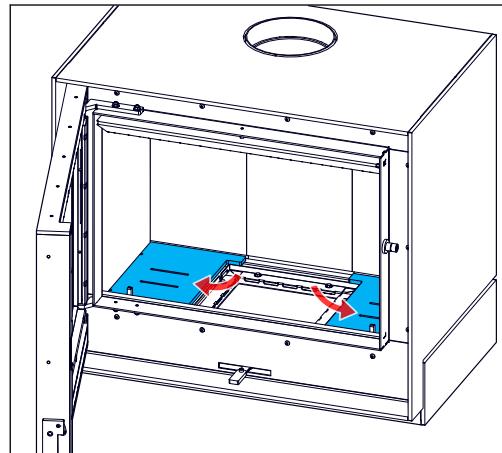

7. Put the front log guard on the notches.

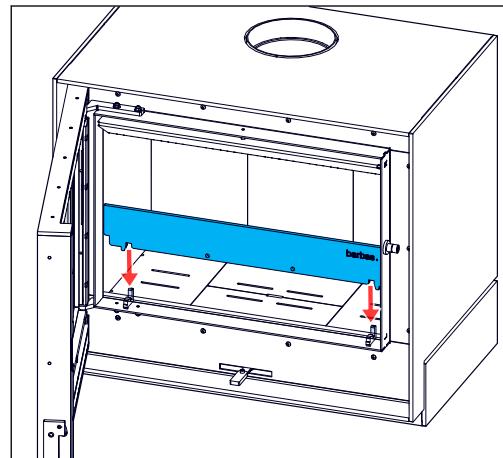

## 10.7


### Installation of the baffles

1. Install the upper baffle. Refer to section [10.7.1](#).
2. Install the lower baffle. Refer to section [10.7.2](#).
3. Install the heat shield. Refer to section [10.7.3](#).


#### 10.7.1

##### Install the upper baffle


1. Move the upper baffle under an angle into the combustion chamber.
2. Move the right side of the baffle as high as possible to the far right side of the combustion chamber.

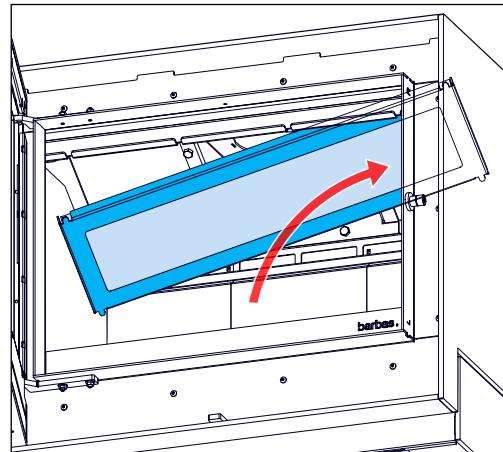

3. Move the left side of the baffle up until it is horizontal.
4. Lower the baffle on the baffle holder.

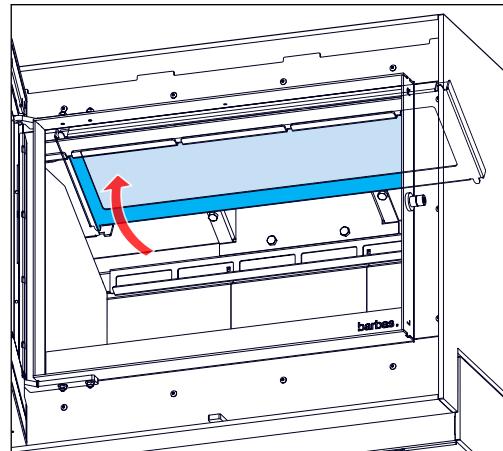

5. Push the baffle rearward until the 2 cams on the rear of the baffle go into the notches.
6. The cam is in the notch if the baffle cannot move to the left or the right.


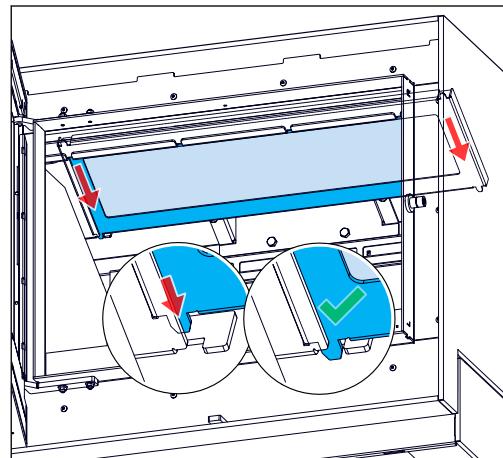


## 10.7.2


### Install the lower baffle

Only do this procedure after finish of the procedure in section [10.7.1](#).

1. Move the lower baffle up under an angle into the combustion chamber (1) and put the right side of the baffle above the side panels (2) on the right.
2. Move the left side of the lower baffle up and put it on top of the side panels on the left. If it does not fit, make sure the side panels are firmly seated against the side wall of the appliance.
3. Put the rear side of the baffle against the rear wall (3).
4. Make sure the lower baffle is horizontal and against the rear wall.

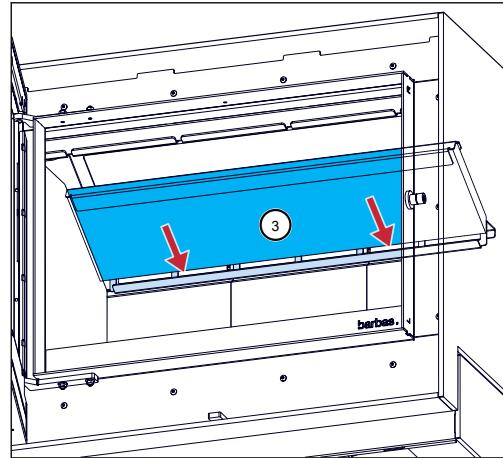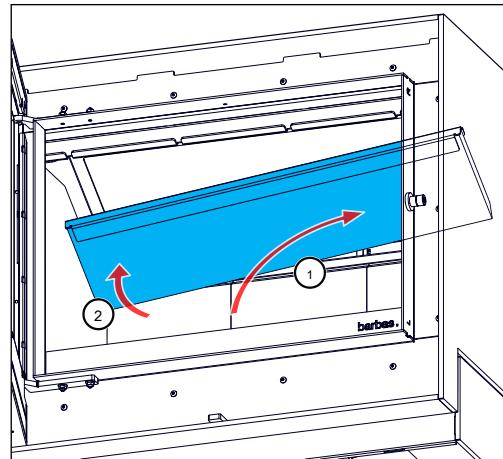


5. Make sure the upper baffle (2) is still in the correct position.
6. If the upper baffle is not in the correct position, remove the lower baffle (1) and put the upper baffle in the correct position and install the lower baffle again.

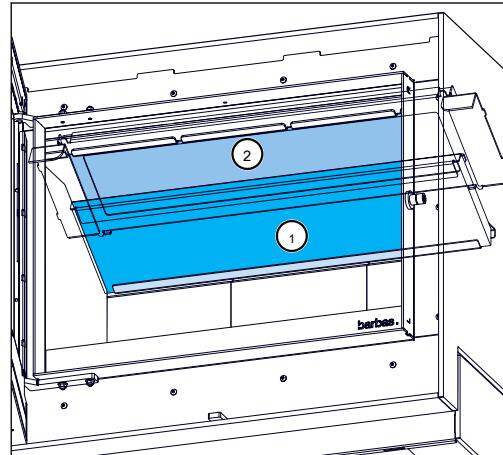


### 10.7.3 Install the heat shield

Only do this procedure after finish of the procedure in section [10.7.2](#).

1. Move the heat shield up and put the rear side above the upper baffle (1).

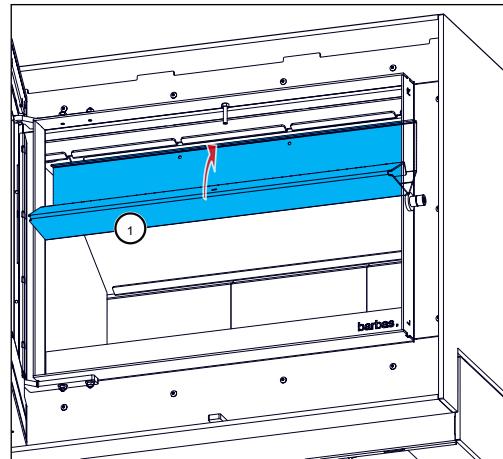

2. Move the front of the heat shield up (2) and put the edge on the metal strip under the air wash inlet (3).
3. Turn the screw down with a 3 mm hexagonal key until it is in the screw hole in the heat shield.
4. Turn the nut up with a 10 mm fork spanner and tighten it.

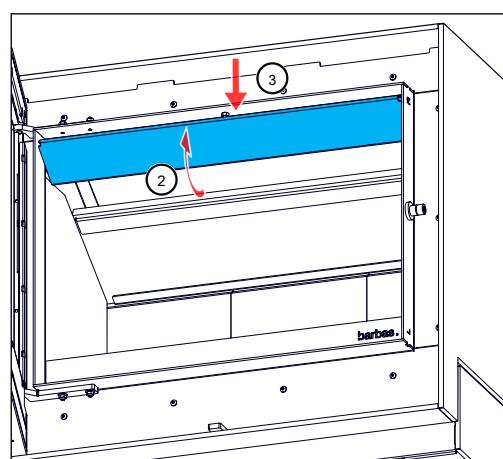

## 11 Technical data

### 11.1 Technical data

Name	Barbas	
Model	BOX 25 75 BOX 25 75 with woodlog storage module	
EPREL registration number	2542517	
Tested in accordance with	EN16510-2-1	
Energy efficiency index	104	
Energy efficiency class	A	
Fuel	Wood logs, Wood briquettes	
Indirect heating function	No	
Room sealed	Yes (type CM)	
Leak rate at 10 Pa	1.6 m <sup>3</sup> /h	
Seasonal efficiency	68.5 %	
	Nominal load	Part load heat output
Fuel load	2.6 kg	1.3 kg
Nominal heat output (net)	10.9 kW	6.2 kW
Useful efficiency	78.5 %	74 %
• carbon monoxide (CO) emssion	1208 mg/Nm <sup>3</sup>	1617 mg/Nm <sup>3</sup>
• particles (PM) emis-sion	28 mg/Nm <sup>3</sup>	15 mg/Nm <sup>3</sup>
• organic gaseous compounds (OGC) emission	63 mg/Nm <sup>3</sup>	77 mg/Nm <sup>3</sup>
• nitrogen oxides (NO <sub>x</sub> ) emission	71 mg/Nm <sup>3</sup>	84 mg/Nm <sup>3</sup>
Flue gas mass flow	10.5 g/s	8.7 g/s
Flue gas outlet temper-ature	349 °C	302 °C
Flue gas temperature	291 °C	252 °C
Minimum chimney draught	12 Pa	7 Pa
Minimum temperature class of the chimney	T 400	
Flue gas connection	Outer diameter 178 mm, suitable for a pipe with an inner diameter of 180 mm	
External combustion air connection	125 mm	
Minimum distance to flammable materials	Refer to chapter 5	

<b>Weight</b>			
	<b>Vermiculite interior</b>	<b>Concrete interior</b>	<b>Cast iron interior</b>
BOX 25 75	208 kg	215 kg	241 kg
BOX 25 75 with wood-log storage module	212 kg	235 kg	283 kg
<b>Used materials</b>			
	<b>Vermiculite interior</b>	<b>Concrete interior</b>	<b>Cast iron interior</b>
Combustion chamber side and back panels	Vermiculite 750 kg/m <sup>3</sup>	Heat resistant ceramic 1600 kg/m <sup>3</sup>	Cast iron
Combustion floor and grate	Steel	Steel	Steel
Lower baffle	Vermiculite 750 kg/m <sup>3</sup>	Heat resistant ceramic 2000 kg/m <sup>3</sup>	Vermiculite 750 kg/m <sup>3</sup>
Upper baffle	Vermiculite 750 kg/m <sup>3</sup>	Vermiculite 750 kg/m <sup>3</sup>	Vermiculite 750 kg/m <sup>3</sup>
Front glass	Heat resistant ceramic glass	Heat resistant ceramic glass	Heat resistant ceramic glass
The specific precautions that shall be taken when the local space heater is assembled, installed or maintained, are listed in the attached documents:	Installation and maintenance manual User manual		
Maximum capacity to carry a chimney	120 kg *)		
<b>Additional information in order to achieve relevant test results for market surveillance</b>			
Mass of basic fire bed	120 g		
Criterion for the end of the test cycle	5 vol% CO <sub>2</sub>		

\*) if the weight of the chimney or part of the chimney, being carried by the appliance, is more than indicated, the chimney must be supported with a wall bracket.

## 11.2

## Product information according regulation (EU) 2015/1185

## barbas bellfires .

Crafted to wonder

## EU-declaration of conformity

This EC declaration of conformity applies to the product described below and describes the conformity with the following directives:  
**2009/125/EC Directive for the setting of eco-design requirements for energy-related products (eco-design directive)**  
Relevant Regulation: (EU) 2015/1185

## Declaration of Performance

No. 1.232-083-4 - CPR-2013/07/01

**Unique identification code of the product type:** BOX 25 75 with wood log storage module  
**Intended use:** Space heating in residential buildings  
**Manufacturer:** Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands

**System of AVCP:** 3  
**Harmonised technical specifications:** EN 16510-2-1:2022  
**Notified body:** No. 2013

## Essential characteristics

Mechanical resistance and stability		Load bearing capacity	120 kg		
<b>Safety in case of fire - Protection of combustible materials</b>			<b>Minimum distance to combustible materials</b>		
Bottom (d <sub>0</sub> ):			0 cm		
Floor in front (d <sub>f</sub> ):			20 cm		
Ceiling (d <sub>c</sub> ):			75 cm		
Rear (d <sub>r</sub> ):			30 cm		
Side (d <sub>s</sub> ):			40 cm		
Side radiation area (d <sub>0</sub> ):			160 cm		
Front (d <sub>p</sub> ):			160 cm		
<b>Hygiene, health and the environment</b>		<b>At nominal heat output</b>	<b>At part load heat output</b>		
Carbon monoxide emission (CO)		1208 mg/m <sup>3</sup>	1617 mg/m <sup>3</sup>		
Nitrogen oxides emission (NO <sub>x</sub> )		71 mg/m <sup>3</sup>	84 mg/m <sup>3</sup>		
Emission of organic gaseous carbon (OGC)		63 mg/m <sup>3</sup>	77 mg/m <sup>3</sup>		
Particulate matter emission (PM)		28 mg/m <sup>3</sup>	15 mg/m <sup>3</sup>		
<b>Safety and accessibility in use</b>		<b>Data for installation to a chimney</b>			
Flue gas outlet temperature		<b>At nominal heat output</b>	<b>At part load heat output</b>		
Minimum flue draught		349 °C	302 °C		
Flue gas mass flow		12 Pa	7 Pa		
Fire safety of installation to the chimney		10.5 g/s	8.7 g/s		
<b>Energy economy and heat retention</b>		<b>Appliance's thermal heat output and energy efficiency</b>			
Space heat output		<b>At nominal heat output</b>	<b>At part load heat output</b>		
Efficiency		10.9 kW	6.2 kW		
Seasonal space heating efficiency		78.5 %	74 %		
Energy efficiency index (EEI)					
Energy efficiency class		68.5 %	Space heating efficiency		
		104			
		A			
Electric power consumption		<b>At nominal heat output</b>	<b>At part load heat output</b>		
		N/A	N/A		
<b>Sustainable use of natural resources</b>		<b>Standby mode</b>			
Environmental sustainability		NPD			
The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.					
Signed for and on behalf of the manufacturer by:					
Danny Baijens, CEO			Bladel, The Netherlands 20 November 2025		

## 11.3


## Explanation of used notations on typeshield

Notation	Description
$m_{\text{chim}}$	The maximum weight of a chimney the appliance may carry
$d_B$	The minimum distances below the bottom to combustible material
$d_F$	The minimum distances from the front to combustible material in the bottom front radiation area
$d_C$	The minimum distances from the top to combustible material
$d_R$	The minimum distances from the rear to combustible material
$d_S$	The minimum distances from the sides to combustible material
$d_L$	The minimum distances from the front to combustible material in the side front radiation area
$d_P$	The minimum distances from the front to combustible material
$\text{CO}_{\text{nom}}$	Carbon monoxide emission at nominal heat output
$\text{NO}_{x\text{nom}}$	Nitrogen oxide emission at nominal heat output
$\text{OGC}_{\text{nom}}$	Hydrocarbons emission at nominal heat output
$\text{PM}_{\text{nom}}$	Particle emission at nominal heat output
$\text{CO}_{\text{part}}$	Carbon monoxide emission at part load heat output
$\text{NO}_{x\text{part}}$	Nitrogen oxide emission at part load heat output
$\text{OGC}_{\text{part}}$	Hydrocarbons emission at part load heat output
$\text{PM}_{\text{part}}$	Particle emission at part load output
$T_{\text{snom}}$	The flue gas outlet temperature at nominal heat output
$p_{\text{nom}}$	Minimum flue draught at nominal heat output
$\Phi_{f,g \text{ nom}}$	The flue gas mass flow at nominal heat output
$T_{\text{spart}}$	The flue gas outlet temperature at part load heat output
$p_{\text{part}}$	Minimum flue draught at part load heat output
$\Phi_{f,g \text{ part}}$	The flue gas mass flow at part load heat output
$T_{\text{class}}$	Temperature designation of the chimney
$P_{\text{nom}}$	The nominal heat output
$\eta_{\text{nom}}$	The appliance efficiency at nominal heat output
$P_{\text{part}}$	The part load heat output
$\eta_{\text{part}}$	The appliance efficiency at part load heat output
$\eta_s$	The appliance seasonal space heating efficiency at nominal heat output
EEI	The energy efficiency index
$E_{\text{class}}$	The energy efficiency class
INT	The appliance is capable of intermittent operation
CM	Room-sealed appliance with a manually closed and locked door
B	Non-room-sealed appliance
	Read and follow the user operating instructions

## 12 Dimensions

### 12.1 Dimensions BOX 25 75


\*) Combustion air inlet openings ( $\varnothing$  125 mm) at the rear side and bottom of the appliance.

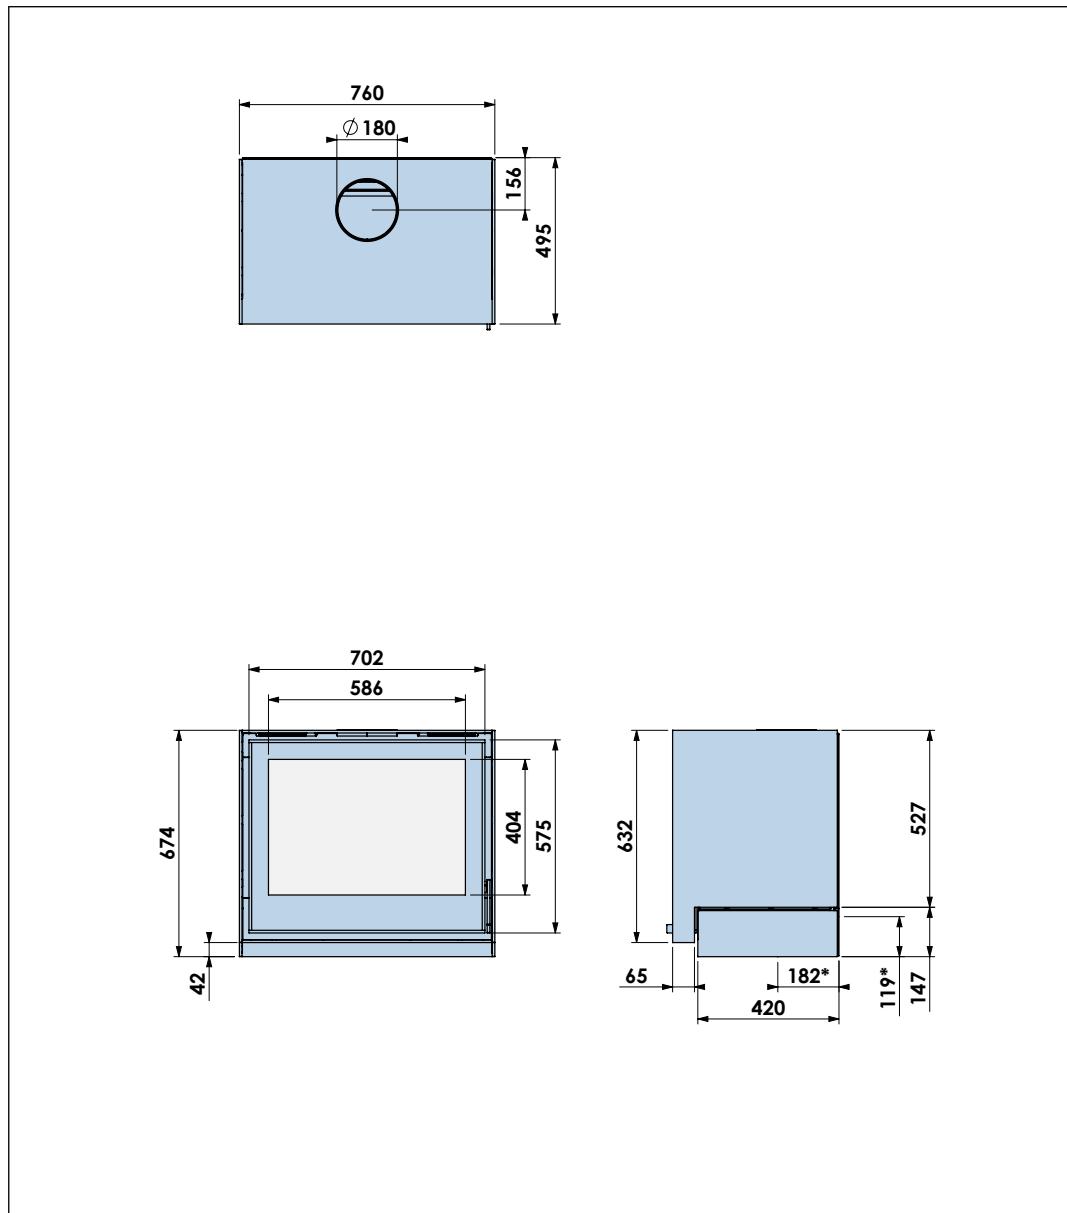

## 12.2


## Dimensions BOX 25 75 with wood log storage module

\*) Combustion air inlet openings ( $\varnothing$  125 mm) at the rear side and bottom of the appliance.

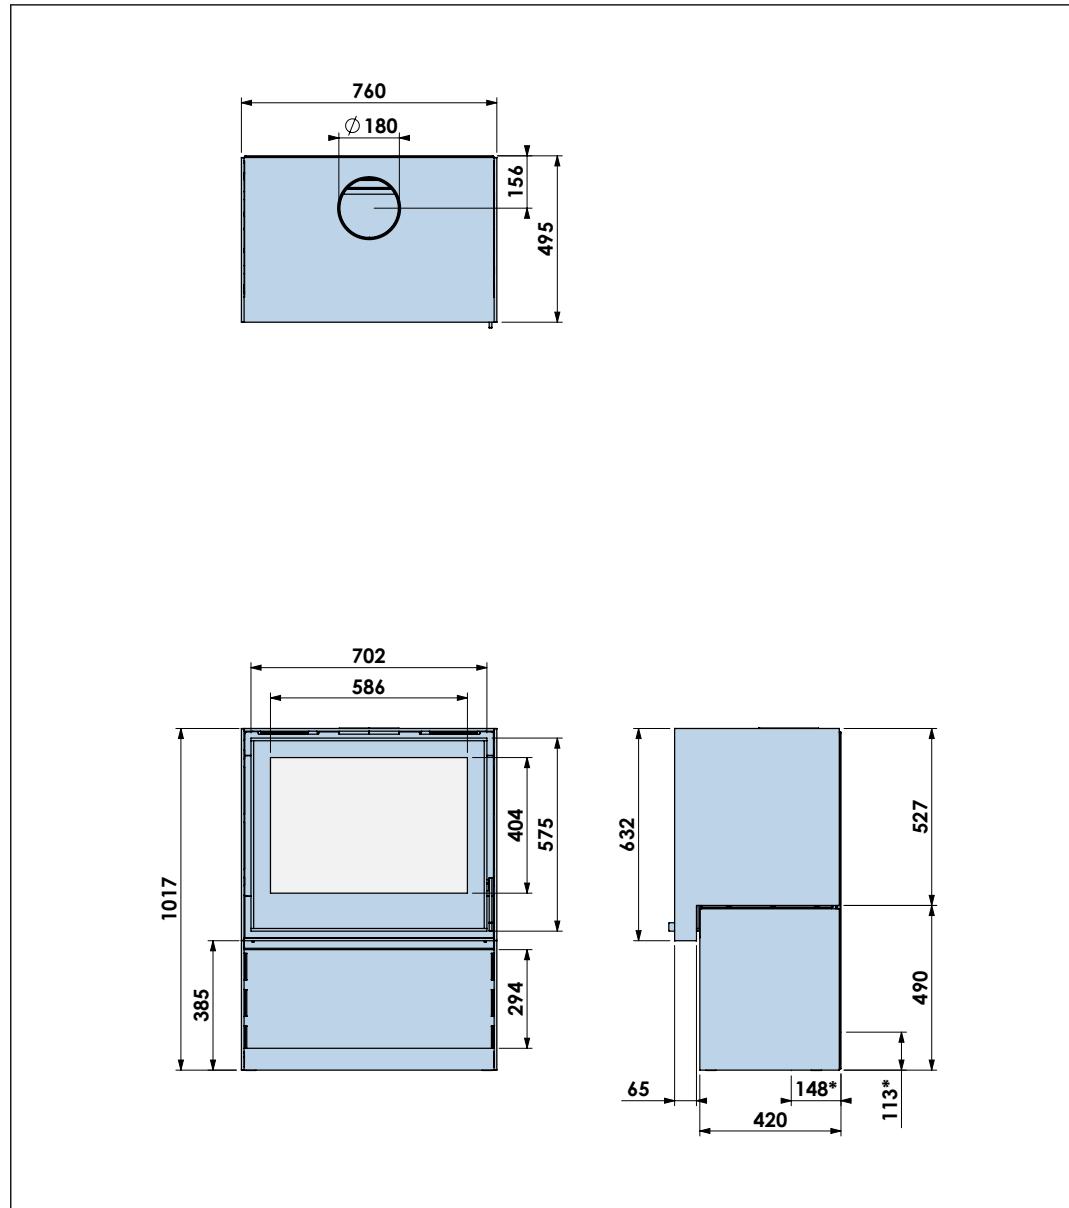

## 12.3

### Dimensions decorative stone base

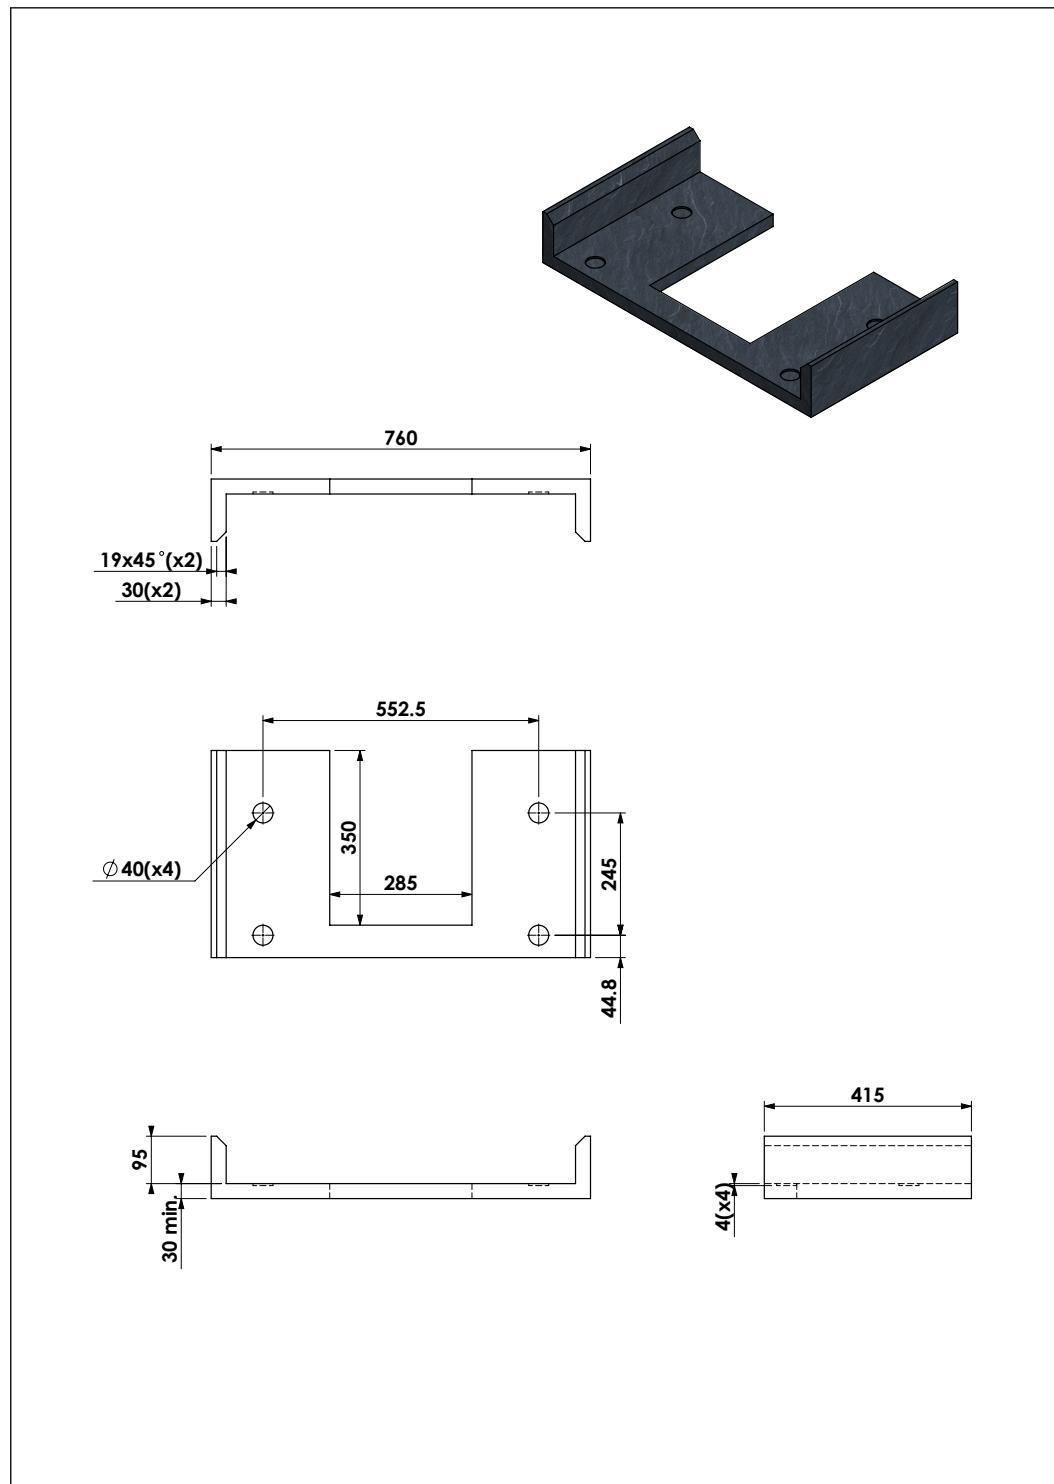

## 13      **Warranty Terms**

To make a claim under the warranty, it is important to register the Barbas appliance after purchase via [www.barbas.com](http://www.barbas.com).

### **Barbas Warranty Terms**

Barbas B.V. guarantees the quality of the supplied Barbas appliance and the quality of the materials used. All Barbas appliances are developed and manufactured according to the highest possible quality standards. If, despite all this, something should prove amiss with the Barbas appliance you have purchased, Barbas B.V. offers the following manufacturer's warranty.

#### **Article 1: Warranty**

1. If Barbas B.V. determines that the Barbas appliance you have purchased is defective as a result of a flaw in the construction or material, Barbas B.V. guarantees to repair or replace the appliance free of charge, without charging any costs for labor or spare parts.
2. Repair or replacement of the Barbas appliance will be undertaken by Barbas B.V. or by a Barbas dealer as designated by Barbas B.V.
3. This warranty is supplementary to the existing legal national warranty of Barbas dealers and Barbas B.V. in the country of purchase and is not intended to restrict your rights and claims based on the applicable legal provisions.

#### **Article 2: Warranty conditions**

1. Should you wish to claim under the warranty, please contact your Barbas dealer.
2. Complaints should be reported as quickly as possible after they have manifested themselves.
3. Complaints will only be accepted if they are reported to the Barbas dealer, together with the serial number of the Barbas appliance which is stated on the enclosed documents.
4. In addition, the original receipt (invoice, receipt, cash receipt) showing the date of purchase must also be submitted.
5. Repairs and replacements during the warranty period do not give any entitlement to an extension of the warranty period. After a repair or replacement of warranty parts, the warranty period shall be deemed to have started on the date of purchasing the Barbas appliance.
6. If a certain part is eligible for the warranty and the original part is no longer available, Barbas B.V. shall ensure that an alternative part of at least the same quality shall be provided.

#### **Article 3: Warranty exclusions**

1. The warranty on the Barbas appliance ceases to be in effect if:
  - a. it is not installed according to the installation instructions, and to national and/or local regulations;
  - b. it has been installed, connected or repaired by a non-Barbas dealer;
  - c. it has not been used or maintained according to the instructions for use;

- d. it has been changed, neglected or roughly treated;
- e. it has been damaged as a result of external causes (outside the appliance itself), for example, lightning strike, water damage or fire;
- 2. In addition, the warranty lapses if the original purchase receipt shows any change, deletion, removal or if it is illegible.

#### **Article 4: Warranty area**

- 1. The warranty is only valid in those countries where Barbas appliances are sold through an official dealer network.

#### **Article 5: Warranty period**

- 1. This warranty will only be granted during the warranty period.
- 2. The body of the Barbas appliance is guaranteed for a period of 10 years against construction and/or material faults, starting from the moment of purchase.
- 3. For other parts of the Barbas appliance, a similar warranty applies from the moment of purchase for a period of two years.
- 4. For user parts such as glass, glass sealing cord and the interior of the combustion chamber, a similar guarantee is given until after the first burning.

#### **Article 6: Liability**

- 1. A claim granted by Barbas B.V. under this warranty does not automatically imply that Barbas B.V. also accepts liability for any possible damage. The liability of Barbas B.V. never extends further than that stated in these warranty conditions. Any liability of Barbas B.V. for consequential damage is expressly excluded.
- 2. That stated in this provision is not valid if and to the extent that it derives from a mandatory provision.
- 3. All agreements entered into by Barbas B.V. are, unless specifically stated otherwise in writing and to the extent that they are permitted based on applicable law, subject to the FME-CWM general sales and delivery conditions for the technology industry.

Barbas B.V.

Hallenstraat 17

5531 AB Bladel

The Netherlands

Email: [info@Barbas.com](mailto:info@Barbas.com)

Carefully retain the enclosed documents; they show the serial number of the appliance. You will need this if you wish to claim under the warranty.

# barbas .

Your Barbas dealer

09.12.2025 - 352582 - 622-001