


barbas .

Installation and maintenance manual

BOX 35 35 70

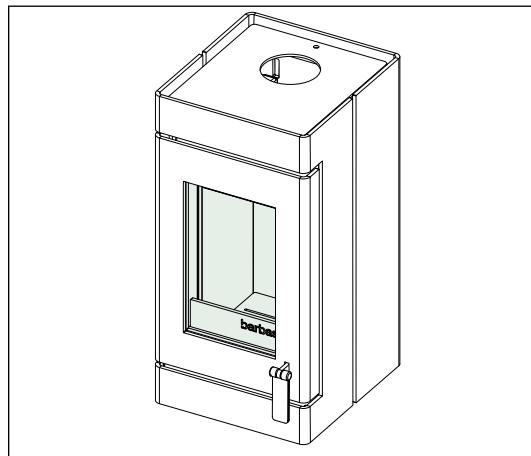

This product is not suitable for primary heating purposes



Version number: 357666 - 572-001
Date: 21-08-2025

Serial number:
Production date:

© Barbas BV

This document or parts thereof may not be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, nor otherwise, without the prior written permission of Barbas BV. This document could contain technical inaccuracies or typographical errors. Barbas BV reserves the right to revise this document from time to time in the contents thereof.

Contact information

Barbas BV

Hallenstraat 17, 5531 AB Bladel, The Netherlands

E-mail: info@barbas.com

www.barbas.com

Contents

1	Declaration of Performance.....	5
1.1	BOX 35 35 70	5
1.2	BOX 35 35 70 with support frame.....	6
2	The Clean Air Act 1993 and Smoke Control Areas.....	7
3	About this document.....	8
3.1	How to work with this document.....	8
3.2	Warnings and cautions used in this document.....	8
3.3	Related documentation.....	8
4	Description.....	9
4.1	Overview of the front of the appliance.....	9
4.2	Overview of the bottom of the appliance.....	10
4.3	Overview of the rear of the appliance.....	11
4.4	Intended use.....	11
5	Safety.....	12
5.1	Safety instructions for installation.....	12
5.2	Safety instructions with regard to the environment.....	12
6	Clearances.....	13
6.1	Safety distances BOX 35 35 70.....	13
6.2	Safety distances BOX 35 35 70 with support frame	14
7	Installation requirements.....	17
7.1	Requirements on the installation of the appliance.....	17
7.2	Installation on a natural stone platform.....	17
7.3	Requirements on the chimney.....	17
7.4	Requirements on the external combustion air pipe.....	18
8	Installation of the BOX 35 35 70 with steel base.....	19
8.1	Install the appliance	19
8.2	Connect the optional external air supply.....	20
8.2.1	Rear connection.....	20
8.2.2	Bottom connection.....	21
8.3	Connect the flue gas pipe.....	22
8.4	Final check on the appliance.....	23

9	Installation of the BOX 35 35 70 with support frame.....	24
9.1	Install the support frame.....	24
9.2	Connect the external air supply.....	25
9.3	Install the appliance on the support frame.....	26
9.4	Connect the flue gas pipe.....	28
9.5	Final check on the appliance.....	28
10	Maintenance.....	29
10.1	Appliance.....	29
10.2	Combustion air supply.....	29
10.3	Chimney.....	29
10.4	Removal of the grate and ash tray.....	29
10.5	Removal of the baffles.....	30
10.5.1	Remove the upper baffle.....	31
10.5.2	Remove the lower baffle.....	31
10.6	Install the grate and ash tray	32
10.7	Installation of the baffles.....	32
10.7.1	Install the lower baffle.....	33
10.7.2	Install the upper baffle.....	33
11	Technical data.....	35
11.1	Technical data.....	35
11.2	Product information according regulation (EU) 2015/1185.....	37
11.3	Explanation of used notations on typeshield.....	38
12	Dimensions	39
12.1	Dimensions BOX 35 35 70	39
12.2	Dimensions BOX 35 35 70 with support frame.....	40
13	Warranty Terms.....	41

1 Declaration of Performance

1.1 BOX 35 35 70

barbas bellfires . Crafted to wonder																																																																																												
EU-declaration of conformity																																																																																												
<p>This EC declaration of conformity applies to the product described below and describes the conformity with the following directives: 2009/125/EC Directive for the setting of eco-design requirements for energy-related products (eco-design directive) Relevant Regulation: (EU) 2015/1185</p>																																																																																												
Declaration of Performance																																																																																												
No. 2.305.080-0 - CPR-2013/07/01																																																																																												
Unique identification code of the product type: BOX 35 35 70 Intended use: Space heating in residential buildings Manufacturer: Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands																																																																																												
System of AVCP: 3 Harmonised technical specifications: EN 16510-2-1:2022 Notified body: No. 1639																																																																																												
Essential characteristics <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;"><i>Mechanical resistance and stability</i></td> <td style="width: 40%; text-align: center;">Load bearing capacity</td> <td style="width: 30%; text-align: center;">120 kg</td> </tr> <tr> <td colspan="3"> Safety in case of fire - Protection of combustible materials <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">Bottom (d₈):</td> <td style="width: 40%; text-align: center;">3 cm</td> </tr> <tr> <td>Floor in front (d₉):</td> <td style="text-align: center;">40 cm</td> </tr> <tr> <td>Ceiling (d₁₀):</td> <td style="text-align: center;">50 cm</td> </tr> <tr> <td>Rear (d₁₁):</td> <td style="text-align: center;">20 cm</td> </tr> <tr> <td>Side (d₁₂):</td> <td style="text-align: center;">25 cm</td> </tr> <tr> <td>Side radiation area (d₁₃):</td> <td style="text-align: center;">40 cm</td> </tr> <tr> <td>Front (d₁₄):</td> <td style="text-align: center;">100 cm</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> Hygiene, health and the environment <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">Carbon monoxide emission (CO)</td> <td style="width: 30%; text-align: center;">At nominal heat output</td> <td style="width: 40%; text-align: center;">At part load heat output</td> </tr> <tr> <td>Nitrogen oxides emission (NO_x)</td> <td style="text-align: center;">1040 mg/m³</td> <td style="text-align: center;">1949 mg/m³</td> </tr> <tr> <td>Emission of organic gaseous carbon (OGC)</td> <td style="text-align: center;">102 mg/m³</td> <td style="text-align: center;">117 mg/m³</td> </tr> <tr> <td>Particulate matter emission (PM)</td> <td style="text-align: center;">59 mg/m³</td> <td style="text-align: center;">132 mg/m³</td> </tr> <tr> <td></td> <td style="text-align: center;">33 mg/m³</td> <td style="text-align: center;">30 mg/m³</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> Safety and accessibility in use <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">At nominal heat output</td> <td style="width: 70%; text-align: center;">Data for installation to a chimney</td> </tr> <tr> <td>Flue gas outlet temperature</td> <td style="text-align: center;">312 °C</td> </tr> <tr> <td>Minimum flue draught</td> <td style="text-align: center;">12 Pa</td> </tr> <tr> <td>Flue gas mass flow</td> <td style="text-align: center;">4.3 g/s</td> </tr> <tr> <td>Fire safety of installation to the chimney</td> <td style="text-align: center;">T400 G minimum</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> Energy economy and heat retention <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">At nominal heat output</td> <td style="width: 70%; text-align: center;">Appliance's thermal heat output and energy efficiency</td> </tr> <tr> <td>Space heat output</td> <td style="text-align: center;">3.8 kW</td> </tr> <tr> <td>Efficiency</td> <td style="text-align: center;">76.9 %</td> </tr> <tr> <td>Seasonal space heating efficiency</td> <td style="text-align: center;">66.9 %</td> </tr> <tr> <td>Energy efficiency index (EEI)</td> <td style="text-align: center;">102</td> </tr> <tr> <td>Energy efficiency class</td> <td style="text-align: center;">A</td> </tr> <tr> <td style="text-align: right;">At nominal heat output</td> <td style="text-align: center;">Space heating efficiency</td> </tr> <tr> <td style="text-align: right;">At part load heat output</td> <td style="text-align: center;">2.8 kW</td> </tr> <tr> <td style="text-align: right;">At part load heat output</td> <td style="text-align: center;">77.6 %</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> Sustainable use of natural resources <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">At nominal heat output</td> <td style="width: 30%; text-align: center;">Standby mode</td> <td style="width: 40%; text-align: center;">N/A</td> </tr> <tr> <td>Electric power consumption</td> <td style="text-align: center;">N/A</td> <td style="text-align: center;">N/A</td> </tr> <tr> <td colspan="3">Environmental sustainability</td> </tr> <tr> <td colspan="3">NPD</td> </tr> </table> </td> </tr> <tr> <td colspan="3"> <p>The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.</p> <p>Signed for and on behalf of the manufacturer by:</p> <p>Danny Baijens, CEO  Bladel, The Netherlands 08 July 2025</p> </td> </tr> </table>			<i>Mechanical resistance and stability</i>	Load bearing capacity	120 kg	Safety in case of fire - Protection of combustible materials <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">Bottom (d₈):</td> <td style="width: 40%; text-align: center;">3 cm</td> </tr> <tr> <td>Floor in front (d₉):</td> <td style="text-align: center;">40 cm</td> </tr> <tr> <td>Ceiling (d₁₀):</td> <td style="text-align: center;">50 cm</td> </tr> <tr> <td>Rear (d₁₁):</td> <td style="text-align: center;">20 cm</td> </tr> <tr> <td>Side (d₁₂):</td> <td style="text-align: center;">25 cm</td> </tr> <tr> <td>Side radiation area (d₁₃):</td> <td style="text-align: center;">40 cm</td> </tr> <tr> <td>Front (d₁₄):</td> <td style="text-align: center;">100 cm</td> </tr> </table>			Bottom (d ₈):	3 cm	Floor in front (d ₉):	40 cm	Ceiling (d ₁₀):	50 cm	Rear (d ₁₁):	20 cm	Side (d ₁₂):	25 cm	Side radiation area (d ₁₃):	40 cm	Front (d ₁₄):	100 cm	Hygiene, health and the environment <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">Carbon monoxide emission (CO)</td> <td style="width: 30%; text-align: center;">At nominal heat output</td> <td style="width: 40%; text-align: center;">At part load heat output</td> </tr> <tr> <td>Nitrogen oxides emission (NO_x)</td> <td style="text-align: center;">1040 mg/m³</td> <td style="text-align: center;">1949 mg/m³</td> </tr> <tr> <td>Emission of organic gaseous carbon (OGC)</td> <td style="text-align: center;">102 mg/m³</td> <td style="text-align: center;">117 mg/m³</td> </tr> <tr> <td>Particulate matter emission (PM)</td> <td style="text-align: center;">59 mg/m³</td> <td style="text-align: center;">132 mg/m³</td> </tr> <tr> <td></td> <td style="text-align: center;">33 mg/m³</td> <td style="text-align: center;">30 mg/m³</td> </tr> </table>			Carbon monoxide emission (CO)	At nominal heat output	At part load heat output	Nitrogen oxides emission (NO _x)	1040 mg/m ³	1949 mg/m ³	Emission of organic gaseous carbon (OGC)	102 mg/m ³	117 mg/m ³	Particulate matter emission (PM)	59 mg/m ³	132 mg/m ³		33 mg/m ³	30 mg/m ³	Safety and accessibility in use <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">At nominal heat output</td> <td style="width: 70%; text-align: center;">Data for installation to a chimney</td> </tr> <tr> <td>Flue gas outlet temperature</td> <td style="text-align: center;">312 °C</td> </tr> <tr> <td>Minimum flue draught</td> <td style="text-align: center;">12 Pa</td> </tr> <tr> <td>Flue gas mass flow</td> <td style="text-align: center;">4.3 g/s</td> </tr> <tr> <td>Fire safety of installation to the chimney</td> <td style="text-align: center;">T400 G minimum</td> </tr> </table>			At nominal heat output	Data for installation to a chimney	Flue gas outlet temperature	312 °C	Minimum flue draught	12 Pa	Flue gas mass flow	4.3 g/s	Fire safety of installation to the chimney	T400 G minimum	Energy economy and heat retention <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">At nominal heat output</td> <td style="width: 70%; text-align: center;">Appliance's thermal heat output and energy efficiency</td> </tr> <tr> <td>Space heat output</td> <td style="text-align: center;">3.8 kW</td> </tr> <tr> <td>Efficiency</td> <td style="text-align: center;">76.9 %</td> </tr> <tr> <td>Seasonal space heating efficiency</td> <td style="text-align: center;">66.9 %</td> </tr> <tr> <td>Energy efficiency index (EEI)</td> <td style="text-align: center;">102</td> </tr> <tr> <td>Energy efficiency class</td> <td style="text-align: center;">A</td> </tr> <tr> <td style="text-align: right;">At nominal heat output</td> <td style="text-align: center;">Space heating efficiency</td> </tr> <tr> <td style="text-align: right;">At part load heat output</td> <td style="text-align: center;">2.8 kW</td> </tr> <tr> <td style="text-align: right;">At part load heat output</td> <td style="text-align: center;">77.6 %</td> </tr> </table>			At nominal heat output	Appliance's thermal heat output and energy efficiency	Space heat output	3.8 kW	Efficiency	76.9 %	Seasonal space heating efficiency	66.9 %	Energy efficiency index (EEI)	102	Energy efficiency class	A	At nominal heat output	Space heating efficiency	At part load heat output	2.8 kW	At part load heat output	77.6 %	Sustainable use of natural resources <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">At nominal heat output</td> <td style="width: 30%; text-align: center;">Standby mode</td> <td style="width: 40%; text-align: center;">N/A</td> </tr> <tr> <td>Electric power consumption</td> <td style="text-align: center;">N/A</td> <td style="text-align: center;">N/A</td> </tr> <tr> <td colspan="3">Environmental sustainability</td> </tr> <tr> <td colspan="3">NPD</td> </tr> </table>			At nominal heat output	Standby mode	N/A	Electric power consumption	N/A	N/A	Environmental sustainability			NPD			<p>The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.</p> <p>Signed for and on behalf of the manufacturer by:</p> <p>Danny Baijens, CEO  Bladel, The Netherlands 08 July 2025</p>		
<i>Mechanical resistance and stability</i>	Load bearing capacity	120 kg																																																																																										
Safety in case of fire - Protection of combustible materials <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">Bottom (d₈):</td> <td style="width: 40%; text-align: center;">3 cm</td> </tr> <tr> <td>Floor in front (d₉):</td> <td style="text-align: center;">40 cm</td> </tr> <tr> <td>Ceiling (d₁₀):</td> <td style="text-align: center;">50 cm</td> </tr> <tr> <td>Rear (d₁₁):</td> <td style="text-align: center;">20 cm</td> </tr> <tr> <td>Side (d₁₂):</td> <td style="text-align: center;">25 cm</td> </tr> <tr> <td>Side radiation area (d₁₃):</td> <td style="text-align: center;">40 cm</td> </tr> <tr> <td>Front (d₁₄):</td> <td style="text-align: center;">100 cm</td> </tr> </table>			Bottom (d ₈):	3 cm	Floor in front (d ₉):	40 cm	Ceiling (d ₁₀):	50 cm	Rear (d ₁₁):	20 cm	Side (d ₁₂):	25 cm	Side radiation area (d ₁₃):	40 cm	Front (d ₁₄):	100 cm																																																																												
Bottom (d ₈):	3 cm																																																																																											
Floor in front (d ₉):	40 cm																																																																																											
Ceiling (d ₁₀):	50 cm																																																																																											
Rear (d ₁₁):	20 cm																																																																																											
Side (d ₁₂):	25 cm																																																																																											
Side radiation area (d ₁₃):	40 cm																																																																																											
Front (d ₁₄):	100 cm																																																																																											
Hygiene, health and the environment <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">Carbon monoxide emission (CO)</td> <td style="width: 30%; text-align: center;">At nominal heat output</td> <td style="width: 40%; text-align: center;">At part load heat output</td> </tr> <tr> <td>Nitrogen oxides emission (NO_x)</td> <td style="text-align: center;">1040 mg/m³</td> <td style="text-align: center;">1949 mg/m³</td> </tr> <tr> <td>Emission of organic gaseous carbon (OGC)</td> <td style="text-align: center;">102 mg/m³</td> <td style="text-align: center;">117 mg/m³</td> </tr> <tr> <td>Particulate matter emission (PM)</td> <td style="text-align: center;">59 mg/m³</td> <td style="text-align: center;">132 mg/m³</td> </tr> <tr> <td></td> <td style="text-align: center;">33 mg/m³</td> <td style="text-align: center;">30 mg/m³</td> </tr> </table>			Carbon monoxide emission (CO)	At nominal heat output	At part load heat output	Nitrogen oxides emission (NO _x)	1040 mg/m ³	1949 mg/m ³	Emission of organic gaseous carbon (OGC)	102 mg/m ³	117 mg/m ³	Particulate matter emission (PM)	59 mg/m ³	132 mg/m ³		33 mg/m ³	30 mg/m ³																																																																											
Carbon monoxide emission (CO)	At nominal heat output	At part load heat output																																																																																										
Nitrogen oxides emission (NO _x)	1040 mg/m ³	1949 mg/m ³																																																																																										
Emission of organic gaseous carbon (OGC)	102 mg/m ³	117 mg/m ³																																																																																										
Particulate matter emission (PM)	59 mg/m ³	132 mg/m ³																																																																																										
	33 mg/m ³	30 mg/m ³																																																																																										
Safety and accessibility in use <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">At nominal heat output</td> <td style="width: 70%; text-align: center;">Data for installation to a chimney</td> </tr> <tr> <td>Flue gas outlet temperature</td> <td style="text-align: center;">312 °C</td> </tr> <tr> <td>Minimum flue draught</td> <td style="text-align: center;">12 Pa</td> </tr> <tr> <td>Flue gas mass flow</td> <td style="text-align: center;">4.3 g/s</td> </tr> <tr> <td>Fire safety of installation to the chimney</td> <td style="text-align: center;">T400 G minimum</td> </tr> </table>			At nominal heat output	Data for installation to a chimney	Flue gas outlet temperature	312 °C	Minimum flue draught	12 Pa	Flue gas mass flow	4.3 g/s	Fire safety of installation to the chimney	T400 G minimum																																																																																
At nominal heat output	Data for installation to a chimney																																																																																											
Flue gas outlet temperature	312 °C																																																																																											
Minimum flue draught	12 Pa																																																																																											
Flue gas mass flow	4.3 g/s																																																																																											
Fire safety of installation to the chimney	T400 G minimum																																																																																											
Energy economy and heat retention <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">At nominal heat output</td> <td style="width: 70%; text-align: center;">Appliance's thermal heat output and energy efficiency</td> </tr> <tr> <td>Space heat output</td> <td style="text-align: center;">3.8 kW</td> </tr> <tr> <td>Efficiency</td> <td style="text-align: center;">76.9 %</td> </tr> <tr> <td>Seasonal space heating efficiency</td> <td style="text-align: center;">66.9 %</td> </tr> <tr> <td>Energy efficiency index (EEI)</td> <td style="text-align: center;">102</td> </tr> <tr> <td>Energy efficiency class</td> <td style="text-align: center;">A</td> </tr> <tr> <td style="text-align: right;">At nominal heat output</td> <td style="text-align: center;">Space heating efficiency</td> </tr> <tr> <td style="text-align: right;">At part load heat output</td> <td style="text-align: center;">2.8 kW</td> </tr> <tr> <td style="text-align: right;">At part load heat output</td> <td style="text-align: center;">77.6 %</td> </tr> </table>			At nominal heat output	Appliance's thermal heat output and energy efficiency	Space heat output	3.8 kW	Efficiency	76.9 %	Seasonal space heating efficiency	66.9 %	Energy efficiency index (EEI)	102	Energy efficiency class	A	At nominal heat output	Space heating efficiency	At part load heat output	2.8 kW	At part load heat output	77.6 %																																																																								
At nominal heat output	Appliance's thermal heat output and energy efficiency																																																																																											
Space heat output	3.8 kW																																																																																											
Efficiency	76.9 %																																																																																											
Seasonal space heating efficiency	66.9 %																																																																																											
Energy efficiency index (EEI)	102																																																																																											
Energy efficiency class	A																																																																																											
At nominal heat output	Space heating efficiency																																																																																											
At part load heat output	2.8 kW																																																																																											
At part load heat output	77.6 %																																																																																											
Sustainable use of natural resources <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">At nominal heat output</td> <td style="width: 30%; text-align: center;">Standby mode</td> <td style="width: 40%; text-align: center;">N/A</td> </tr> <tr> <td>Electric power consumption</td> <td style="text-align: center;">N/A</td> <td style="text-align: center;">N/A</td> </tr> <tr> <td colspan="3">Environmental sustainability</td> </tr> <tr> <td colspan="3">NPD</td> </tr> </table>			At nominal heat output	Standby mode	N/A	Electric power consumption	N/A	N/A	Environmental sustainability			NPD																																																																																
At nominal heat output	Standby mode	N/A																																																																																										
Electric power consumption	N/A	N/A																																																																																										
Environmental sustainability																																																																																												
NPD																																																																																												
<p>The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.</p> <p>Signed for and on behalf of the manufacturer by:</p> <p>Danny Baijens, CEO  Bladel, The Netherlands 08 July 2025</p>																																																																																												

1.2

BOX 35 35 70 with support frame

EU-declaration of conformity		
<p>This EC declaration of conformity applies to the product described below and describes the conformity with the following directives: 2009/125/EC Directive for the setting of eco-design requirements for energy-related products (eco-design directive) Relevant Regulation: (EU) 2015/1185</p>		
<p>Declaration of Performance No. 2.305.082-0 - CPR-2013/07/01</p>		
Unique identification code of the product type:	BOX 35 35 70 with support frame	
Intended use:	Space heating in residential buildings	
Manufacturer:	Barbas Bellfires BV; Hallenstraat 17; 5531 AB Bladel; The Netherlands	
System of AVCP:	3	
Harmonised technical specifications:	EN 16510-2-1:2022	
Notified body:	No. 1639	
Essential characteristics		
<i>Mechanical resistance and stability</i>	Load bearing capacity 120 kg	
<i>Safety in case of fire - Protection of combustible materials</i>	Minimum distance to combustible materials	
Bottom (d ₀):	3 cm	
Floor in front (d _f):	200 - 550	
Ceiling (d _c):	50 cm	
Rear (d _r):	non flammable wall	
Side (d _s):	25 cm	
Side radiation area (d _s):	40 cm	
Front (d _p):	100 cm	
<i>Hygiene, health and the environment</i>	At nominal heat output	At part load heat output
Carbon monoxide emission (CO)	1040 mg/m ³	1949 mg/m ³
Nitrogen oxides emission (NO _x)	102 mg/m ³	117 mg/m ³
Emission of organic gaseous carbon (OGC)	59 mg/m ³	132 mg/m ³
Particulate matter emission (PM)	33 mg/m ³	30 mg/m ³
<i>Safety and accessibility in use</i>	Data for installation to a chimney	
Flue gas outlet temperature	At nominal heat output	At part load heat output
Minimum flue draught	312 °C	259 °C
Flue gas mass flow	12 Pa	8 Pa
Fire safety of installation to the chimney	4.3 g/s	3.7 g/s
<i>Energy economy and heat retention</i>	T400 G minimum	
	Appliance's thermal heat output and energy efficiency	
	At nominal heat output	At part load heat output
Space heat output	3.8 kW	2.8 kW
Efficiency	76.9 %	77.6 %
Seasonal space heating efficiency	Space heating efficiency	
Energy efficiency index (EEI)	66.9 %	
Energy efficiency class	102	
	At nominal heat output	At part load heat output
Electric power consumption	N/A	N/A
	Standby mode	
<i>Sustainable use of natural resources</i>	N/A	
Environmental sustainability	NPD	
<p>The performance of the product identified above is in conformity with the set of declared performances. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.</p> <p>Signed for and on behalf of the manufacturer by:</p> <p>Danny Baijens, CEO  Bladel, The Netherlands 08 July 2025</p>		

2 The Clean Air Act 1993 and Smoke Control Areas

The following Barbas BOX 35 35 70 appliances have been exempted or recommended for exemption under section 21 of the Clean Air Act 1993 and can be used in accordance with the intended use as described in this manual in smoke control areas in the UK.

- Barbas BOX 35 35 70
- Barbas BOX 35 35 70 with support frame

The appliances incorporate a factory-fitted modified air control.

Under the Clean Air Act local authorities may declare the whole or part of the district of the authority to be a smoke control area. It is an offence to emit smoke from a chimney of a building, from a furnace or from any fixed boiler if located in a designated smoke control area. It is also an offence to acquire an "unauthorised fuel" for use within a smoke control area unless it is used in an "exempt" appliance ("exempted" from the controls which generally apply in the smoke control area).

In England appliances are exempted by publication on a list by the Secretary of State in accordance with changes made to sections 20 and 21 of the Clean Air Act 1993 by section 15 of the Deregulation Act 2015. In Scotland appliances are exempted by publication on a list by Scottish Ministers under section 50 of the Regulatory Reform (Scotland) Act 2014. Similarly, In Northern Ireland appliances are exempted by publication on a list by the Department of Agriculture, Environment and Rural Affairs under Section 16 of the Environmental Better regulation Act (Northern Ireland) 2016. In Wales appliances are exempted by regulations made by Welsh Ministers.

Further information on the requirements of the Clean Air Act can be found here: <https://www.gov.uk/smoke-control-area-rules> .

Your local authority is responsible for implementing the Clean Air Act 1993 including designation and supervision of smoke control areas and you can contact them for details of the Clean Air Act requirements.

3 About this document

This document shows the necessary information to do these tasks on the BOX 35 35 70

- Installation
- Maintenance

This document refers to the BOX 35 35 70 as 'the appliance'. This document is an essential part of your appliance. Read it carefully before you do work on the appliance. Keep it in a safe place.

The original instructions of the document are in English. All other language versions of the document are translations of the original instructions. It is not always possible to provide a detailed illustration of every single item of the equipment. The illustrations in this document show a typical setup. The illustrations are for instructional use only.

3.1 How to work with this document

1. Make yourself familiar with the structure and content of the document.
2. Read the safety section in detail.
3. Make sure that you understand all the instructions.
4. Do the procedures completely and in the given sequence.

3.2 Warnings and cautions used in this document

Warning

If you do not obey these instructions, there is a risk that can cause personal injury or death.

Caution

If you do not obey these instructions, there is a risk of damage to the appliance, installation or to property.

Note

A note shows more information.

Symbol	Description
	Visual sign that there is a hazard
	Visual sign that there is a notice

3.3 Related documentation

- Installation and maintenance manual
- User manual


4 Description




Note:

The appliance is a room-sealed appliance only if combustion air comes from the outer side of the building through a pipe that is connected to the combustion air inlet of the appliance. In all other cases the appliance is not a room-sealed appliance and the data for leak tightness as given in section [11.1](#) are not valid.

4.1 Overview of the front of the appliance

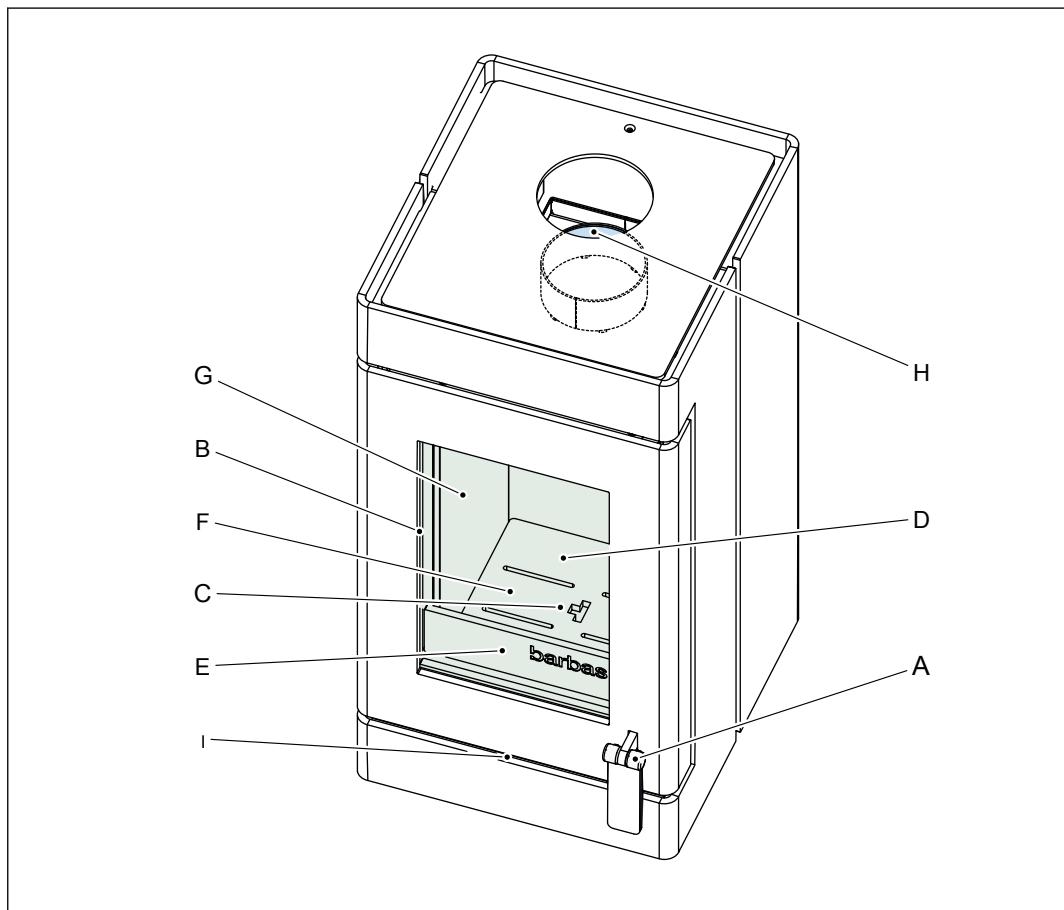

A	Door handle	F	Ash tray (under the grate)
B	Glass	G	Combustion chamber panels
C	Primary air inlet	H	Flue connection
D	Grate	I	Steel base
E	Log guard	J	Control lever (not visible on the figure)

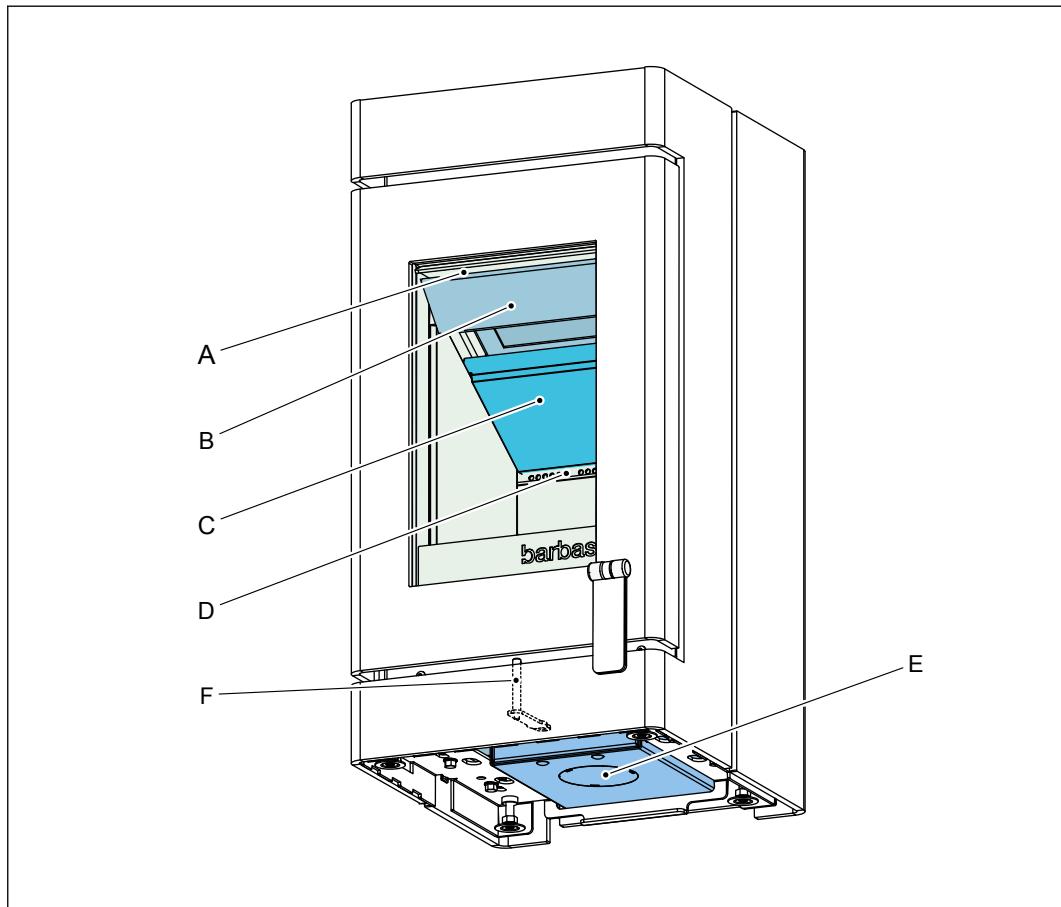
4.2**Overview of the bottom of the appliance**

A Airwash inlet
B Upper baffle
C Lower baffle

D Secondary air inlet
E Connection for external combustion air supply
F Control lever

4.3

Overview of the rear of the appliance

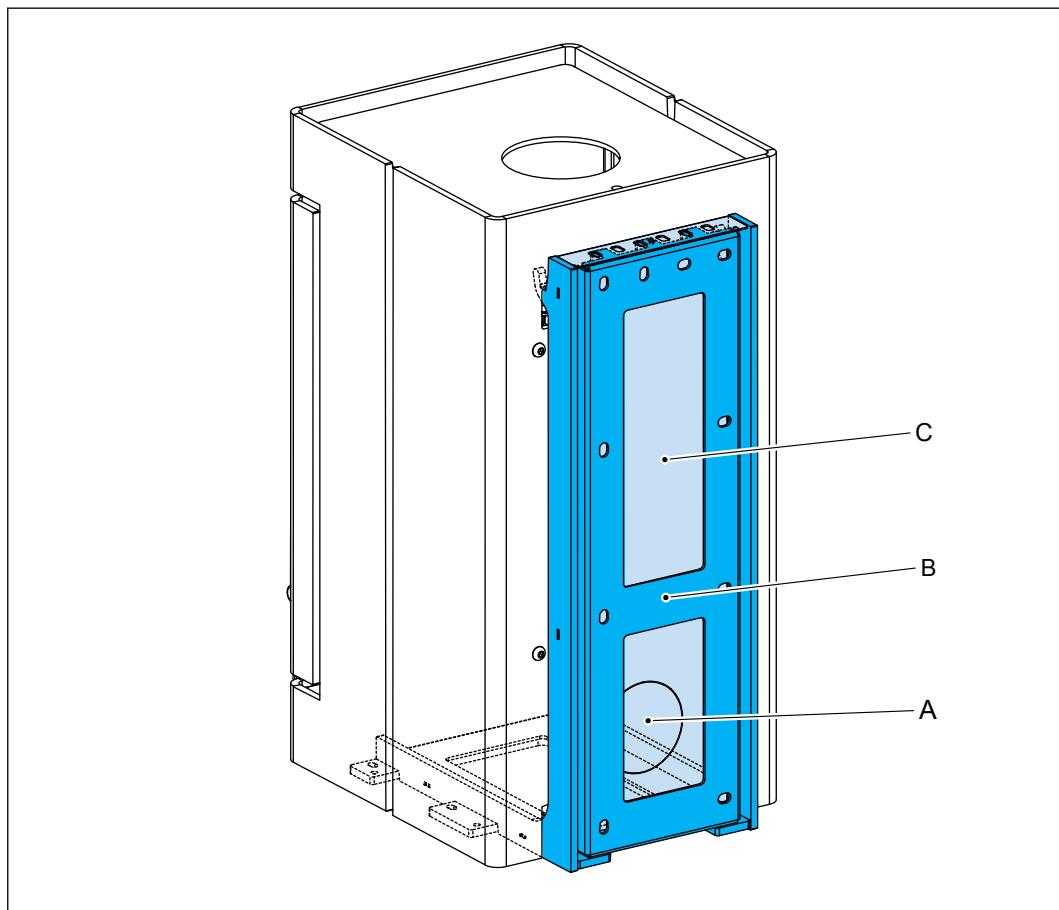

A Connection for external combustion air supply

4.4

Intended use

The appliance is intended for indoor use to heat the room wherein it is installed. Do not use it for other purposes.

It is not allowed to use the appliance as primary heating appliance.

The appliance is intended for use with wood logs or wood briquettes as fuel. Do not use other fuels and waste.

The appliance is intended for use with the door closed.

The appliance may only be used at the location that meets the requirements for the installation of the appliance.

The appliance is intended for intermittent use and is not intended for continuous use.

It is not allowed to connect the appliance on a shared flue gas channel.

The appliance is intended to heat the room by direct heating. It is not allowed to connect the appliance to a central-heating installation.

5 Safety

5.1 Safety instructions for installation

Warning:



- Installation must be done by a qualified installer.
- Install the appliance in accordance with the following installation instructions and the national and local applicable regulations.
- Make sure that the area around the fireplace is free of flammable material at all times. The minimal safe distance is 180 cm.
- If applicable, contact the authorities if it is allowed to connect the appliance to a flue that is also connected to another appliance.
- Do not install the appliance directly against a flammable wall or non-flammable wall. Refer to section [6](#) for minimum clearances between the appliance and the wall.
- Install a carbon monoxide alarm. The carbon monoxide alarm should be battery-powered and designed to operate for the life of the carbon monoxide alarm, following which it should be replaced. Alternatively a mains powered carbon monoxide alarm can be used, however this must be fitted with a sensor failure warning device.

Caution:



- Install the appliance on a floor with adequate load-bearing capacity. Refer to section [11](#) for the weight of the appliance.
- Make sure that the chimney has no creaks and is in general good order.
- Install a suitable cap on the chimney outlet to avoid birds' nests build in the chimney.
- Parts in the appliance can be moved during transportation. Make sure these parts are in the correct position.
- Do not use masking tape on the appliance. Masking tape can damage the finish of the appliance.
- Make sure that the chimney temperature class is minimum T400 sootfire resistant.
- Do not install the appliance in a room with a ventilation system that makes pressures below -15 Pa.

5.2 Safety instructions with regard to the environment

- Dispose of the packing materials in an environmentally friendly way.
- Dispose of batteries as chemical waste.
- Dispose of ceramic heat-resistant glass as household waste. Do not dispose of ceramic heat-resistant glass in a glass recycling container.
- Dispose of an obsolete appliance according to instructions of the authorities or the fitter.
- Obey the local regulations.

6 Clearances

Warning:




- Obey the instructions in this section. Failure to follow these instruction can create a fire hazard.
- Do not put the appliance directly against a flammable or non-flammable wall.

Caution: Make sure that flammable materials near the appliance can never reach a temperature above 85 degrees centigrade



- BOX 35 35 70, refer to section [6.1](#).
- BOX 35 35 70 with support frame, refer to section [6.2](#).

6.1 Safety distances BOX 35 35 70

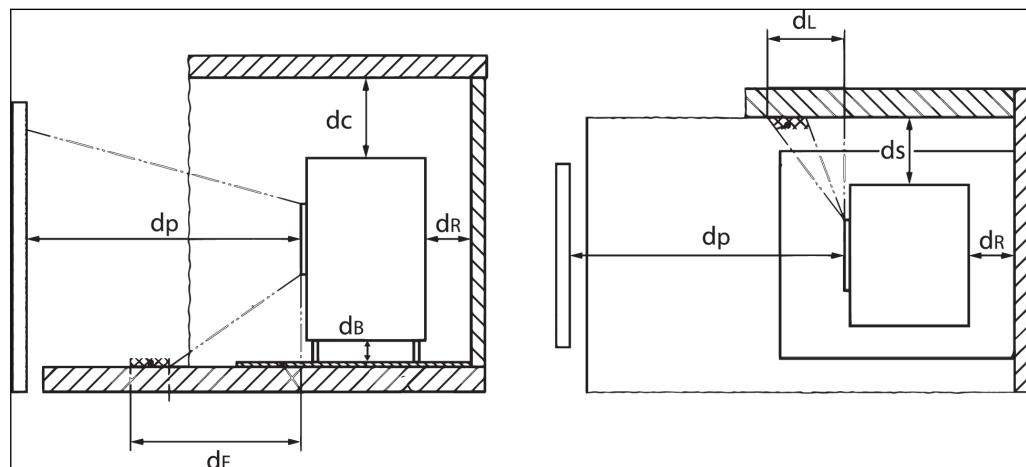

BOX 35 35 70			
Label	Minimum distance to flammable materials in cm	Remark	Minimum distance to non-flammable materials in cm
d_C	50		10
d_P	100		50
d_F	40		-
d_B	See remark.	Install a non-flammable floor plate with a thickness of minimum 3 cm (floor stone) when the appliance is put on a flammable floor. The width of the floor plate must be minimum 15 cm from each side of the appliance. The depth of the floor plate in front of the appliance (d_F) is minimum 40 cm. If the appliance is put on a flammable platform, make sure the depth of the non-flammable hearth is the same size as the platform in front of the appliance.	-
d_L	40		-
d_S	25		5
d_R	20		5

Note:


Heat radiation from the appliance can cause cracks in a floor plate of natural stone if put directly in front of the appliance. Make sure the floor plate is resistant to temperatures of more than 100 °C. Refer to the supplier of the natural stone for advice

6.2**Safety distances BOX 35 35 70 with support frame****Warning:**


Do not install the appliance against a flammable wall.

**Note:**

Use the support frame to attach the appliance on a non-flammable wall.

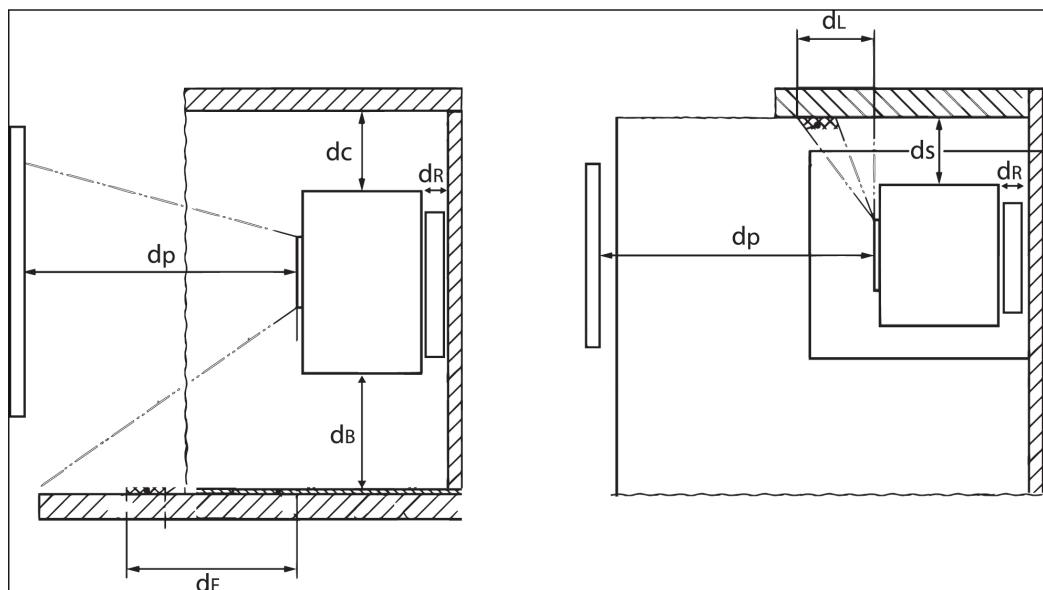

BOX 35 35 70 with support frame			
Label	Minimum distance to flammable materials in cm	Remark	Minimum distance to non-flammable materials in cm
d_C	50		10
d_P	100		50
d_F	20 - 55	Install a non-flammable floor plate with a thickness of minimum 3 cm (floor stone) when the appliance is put on a flammable floor. The width of the floor plate must be minimum 15 cm from each side of the appliance. The depth of the floor plate in front of the appliance is dependent on the distance between the underside of the appliance and the floor. Refer to the graph hereunder.	-
d_B	0		-
d_L	40		-
d_S	25		5
d_R	See remark	Do not install on a flammable wall.	equal to thickness of the support frame

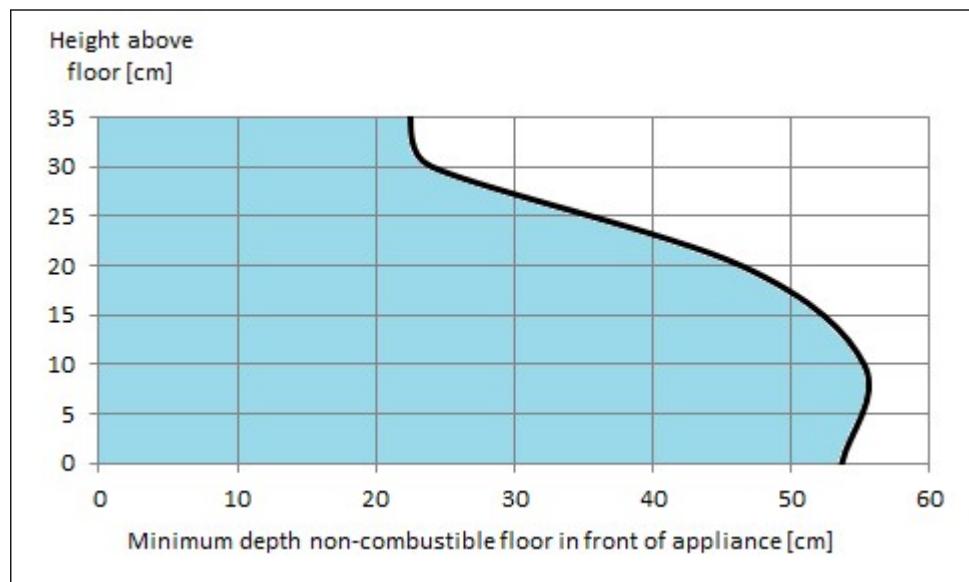

Example for the graph: If the bottom of the BOX 35 35 70 with support frame is 25 cm above the floor (vertical axis on the graph), the depth of the non-flammable floor in front of the appliance (horizontal axis on the graph) is minimum 35 cm.

7 Installation requirements


7.1 Requirements on the installation of the appliance

- Make sure that the location agrees with the safety requirements. Refer to section [5.1](#).
- The minimum size of the room of installation is 34 m³.
- Make sure the floor is made of concrete or a solid pedestal of non-combustible material.
- Make sure the floor can support the weight of the appliance. Refer to section [11.1](#) for the weight of the appliance.
- Make sure that the floor temperatures below and in front of the appliance cannot be higher than 85 °C, during use of the appliance. Refer to section [6](#).
- The non-combustible floor must have a width that extends at least 150 mm from each side of the appliance and a minimum depth in front of the appliance according the requirements in section [6](#).
- Make sure the room where the appliance is installed has correct ventilation.
- Make sure that combustion air can flow into the appliance without obstruction.
- If applicable, install a valve in the external combustion air pipe.
- The carbon monoxide alarm must be fitted and fixed in place within the same room as the appliance and can be placed either on the ceiling or wall between 1 meter and 3 meter horizontally from the appliance. If fitting to the ceiling it must be at least 300mm from any wall. If fitting to a wall, it must be placed as high as possible above any doors or windows at 150mm below the ceiling.

7.2 Installation on a natural stone platform

Obey the requirements if the appliance is put on a natural stone platform.

- The platform must have minimum thickness of 3 cm.
- The platform must support the weight of the appliance directly underneath it.
- Ask your natural stone dealer for additional advice regarding the specific type of stone in combination with the appliance.

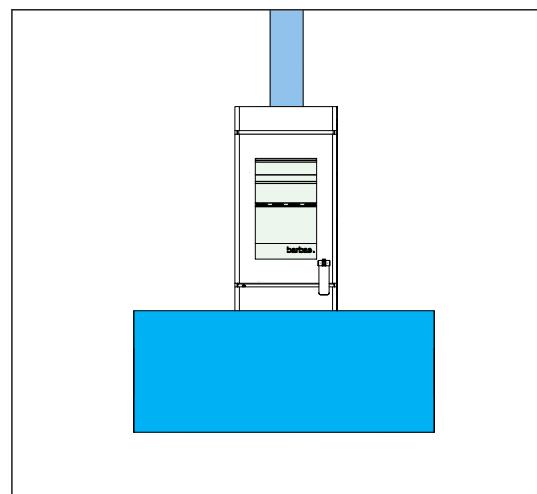

7.3 Requirements on the chimney

- Make sure the design and installation of the chimney is in accordance with EN 15287-2:2008, EN 13384-1:2015+A1:2019 and the good operation of the chimney is proven according EN 13384-2:2015+A1:2019 for the situation on site.
- Make sure that in case of use of an existing (masonry) chimney, it is in good order and applicable for the appliance. Ask your dealer or chimney sweeper for advice.
- Make sure the flue system obeys the national and local applicable regulations.
- Make sure the weight of the chimney is not supported by the appliance.

- Only connect the appliance to a chimney that is also connected with other appliances if it is permitted by local regulations and if the chimney allows to connect multiple appliances to it. Ask your installer for advice.
- The flue system must have a temperature class designation of minimum T400.
- The inner diameter of the chimney must be minimum mm over the total length.
- Use a steel chimney pipe with a wall thickness of minimum 2 mm between the appliance and the existing chimney.
- Do not use more than 2 bends of 45°.
- Do not use horizontal flue pipes.
- The chimney outlet must be minimum 5 meter above the top of the appliance.
- The chimney outlet must be minimum 40 cm above the top of a sloped roof.
- The chimney outlet must be minimum 1 meter above a flat roof.
- The chimney outlet must be free from any objects (buildings, trees, etc.) within a horizontal range of minimum 5 meter.
- Make sure to remove the chimney valve when present in the existing chimney.
- Make sure your fire insurance policy covers any damage caused by a chimney fire.

7.4


Requirements on the external combustion air pipe

- Make sure the external combustion air pipe obeys the national and local applicable regulations.
- The inner diameter of the combustion air pipe must be minimum 80 mm over the total length.
- Use a flexible stainless steel or aluminum pipe.
- The maximum length of the external combustion air pipe is 5 meter.
- Do not use more than 1 bend of 90°.
- Make sure to cover the inlet of the external combustion inlet pipe with a suitable grate.
- It is recommended to install a valve in the external combustion air valve, to avoid debris or fallen leaves in the line and to avoid water vapour condensation in the appliance.

8 Installation of the BOX 35 35 70 with steel base

8.1 Install the appliance

1. Put the appliance in the designated position.
2. Obey the safety distances. Refer to section [6.1](#).
3. If necessary, put a nonflammable plate under the appliance. Refer to section [6.1](#).
4. Make sure that the flue connection on the appliance is correct in line with the flue pipe to the ceiling.
5. Make sure the appliance is installed horizontally. If necessary, adjust the adjustable feet with a 13 mm fork spanner. Use a spirit lever.

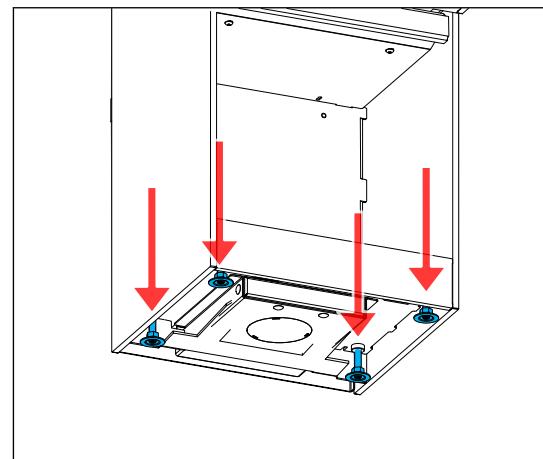

6. Go to section [8.2](#) for instruction for the installation of the combustion air supply pipe.

8.2

Connect the optional external air supply

- The appliance has the possibility to connect a supply pipe for external combustion air. During operation the appliance gets combustion air from this air duct.
- It is strongly recommended to install a valve in the external combustion air supply pipe, to avoid debris in the pipe and to avoid water vapor condensation in the appliance when not in use.


Connection on the rear of the appliance, refer to section [8.2.1](#).

Connection on the bottom of the appliance, refer to section [8.2.2](#).


8.2.1

Rear connection

1. Remove the 2 screws that hold the round plate at the rear of the appliance. A round break out plate is now visible.

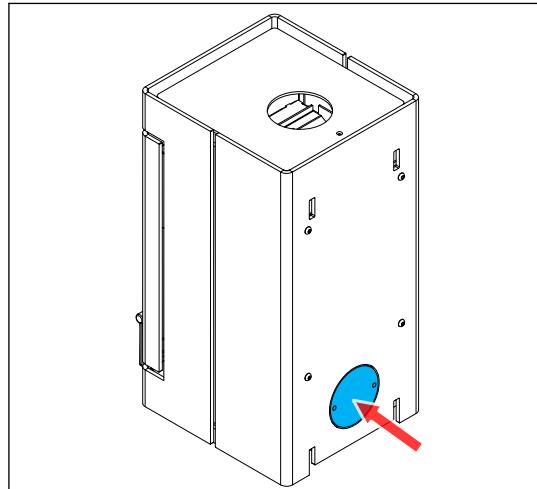


2. Remove the round break out plate with a hammer.

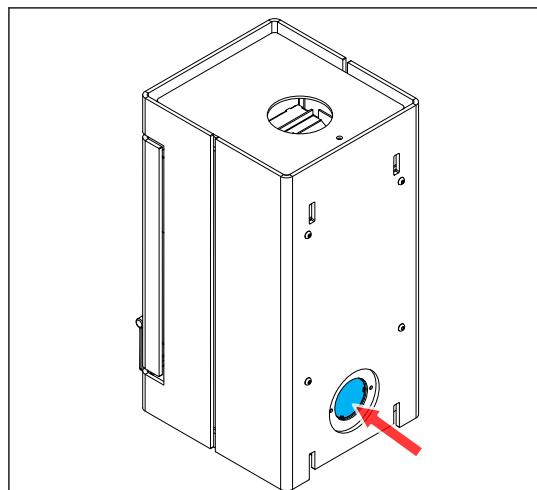

3. Put the connection ring in the open external air inlet opening.
4. Bend out the 3 lips on the connection ring to attach the connection ring on the inlet opening.

5. Apply a sealing compound (e.g. silicone sealant or similar) between the inlet opening and the connection ring.

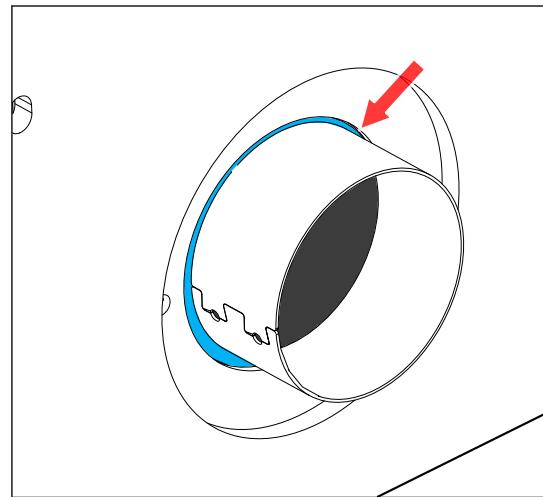


6. Identify the location in the outer wall for the external combustion air supply inlet.
7. Make a hole in the outer wall with at a minimum diameter of 80.
8. Put a flexible aluminum pipe or rigid steel pipe in the hole.
9. Attach the end of the pipe on the connection ring. Use a hose clamp or screws.
10. Install a grate in the hole in the outer wall and attach the other end of the pipe to it.

8.2.2


Bottom connection

1. Remove the round break out plate at the bottom of the appliance with a hammer.

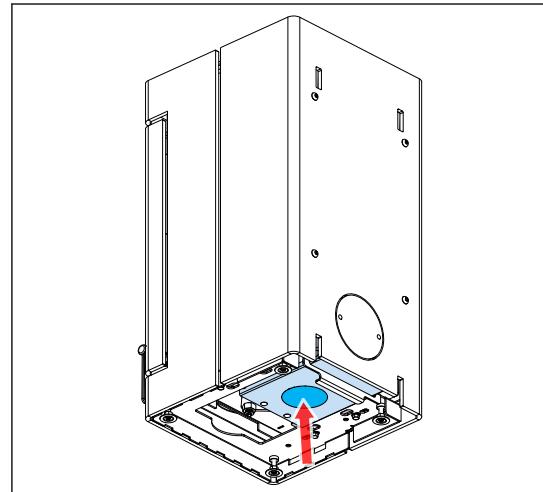

2. If necessary, put the connection ring in the open external air inlet opening.
3. Bend out the 3 lips on the connection ring to attach the connection ring on the inlet opening.

4. Apply a sealing compound (e.g. silicone sealant or similar) between the inlet opening and the connection ring

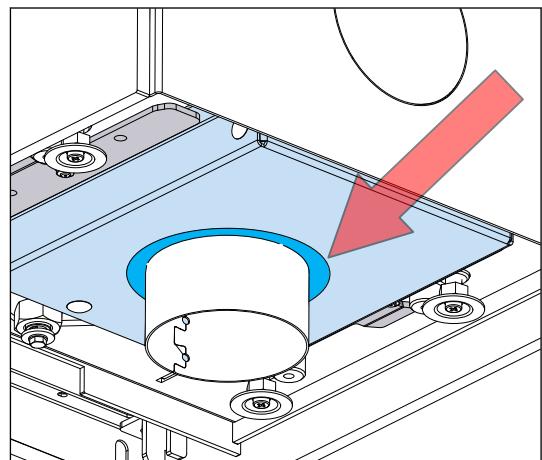

5. Identify the location in the floor for the external combustion air supply inlet.
6. Make a hole in the floor with at a minimum diameter of 80.
7. Put a flexible aluminum pipe in the hole.
8. Attach the other end of the flexible aluminum pipe on the connection ring. Use a hose clamp or screws.

8.3

Connect the flue gas pipe

Preliminary requirements

- If the appliance is installed on an unlined, masonry flue with a large diameter, use an insulated flue lining system .
- Make sure the design and installation of the chimney is in accordance with EN 15287-2:2008, EN 13384-1:2015+A1:2019 and the good operation of the chimney is proven according EN 13384-2:2015+A1:2019 for the situation on site.

Only do this procedure after finish of the procedure in section [8.2](#).



Caution: During operation of the appliance the outer side of the flue system becomes hot. Refer to section [6.1](#) for minimum distances to flammable material.



Note: If the appliance is installed on an unlined, masonry flue with a large diameter, consider using a flue lining system to improve the performance of the appliance.

Procedure

1. Connect the flue to the flue gas connection on the appliance. If necessary use a steel flue adaptor.
2. If the flue is connected to an existing (masonry) chimney, make sure that the gap between the flue and the existing chimney is sealed with ceramic wool or any other applicable component (ask your flue system supplier for advice)
3. Make sure that all mechanical connections of the flue system are correctly used.
4. Make sure that all of the flue system is gas-tight,

8.4 Final check on the appliance

1. Make sure the door closes and opens easy.
2. Make sure the control lever moves easy to left and right without undue noise.
3. Make sure the plates on the side and rear wall of the combustion chamber and the baffles are in the correct position.


Contact your dealer if the final check shows a defect.

9 Installation of the BOX 35 35 70 with support frame


1. Install the support frame. Refer to section [9.1](#).
2. Install the external combustion air supply . Refer to section [9.2](#).
3. Install the appliance on the support frame. Refer to section [9.3](#).
4. Connect the flue gas pipe. Refer to section [9.4](#).
5. Do a final check. Refer to section [9.5](#).

9.1 Install the support frame


1. Use the steel template to mark the locations on the wall for the 4 corner screws by which the support frame is attached to the wall and to mark the location for the external air supply. Make sure the template is horizontal when marking the locations. Use a spirit lever.

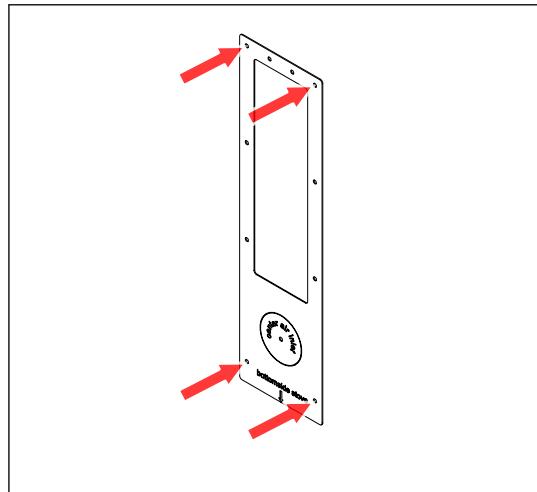


2. Drill the 4 holes.
3. Remove the heat shield from the support frame. Use a 3 mm allen key.

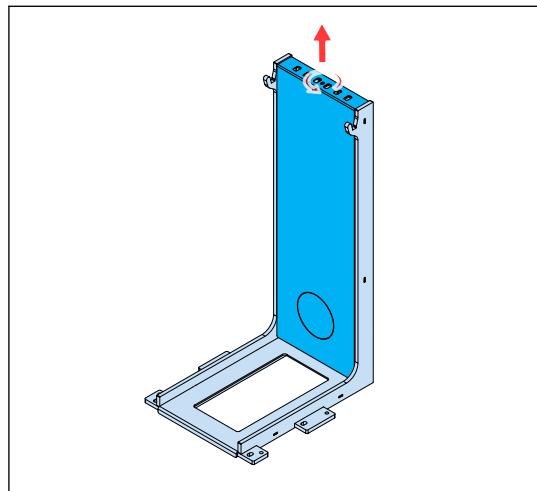

4. Attach the support frame to the wall with appropriate screws. Use plugs when necessary.

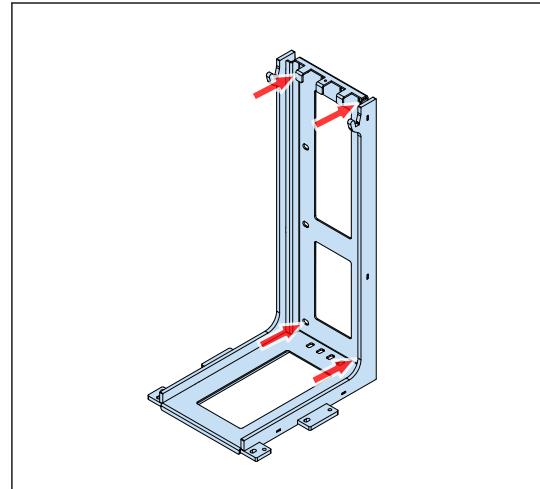

5. Attach the heat shield to the support frame with the allen screw. Use a 3 mm allen key

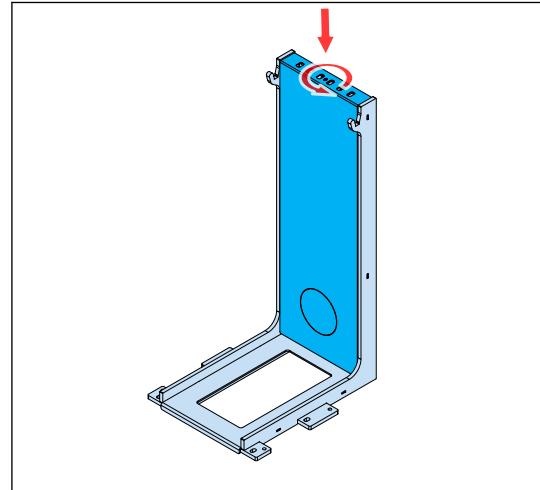


6. Identify the location in the wall for the external combustion air supply inlet.
7. Make a hole in the wall with a minimum diameter sufficient for a flexible aluminum pipe with a diameter of 80 mm.
8. Continue the installation procedure with section [9.2](#).

9.2


Connect the external air supply

Only do this procedure after finish of the procedure in section [9.1](#).


1. Remove the 2 screws that hold the round plate at the rear of the appliance. A round break out plate is now visible.

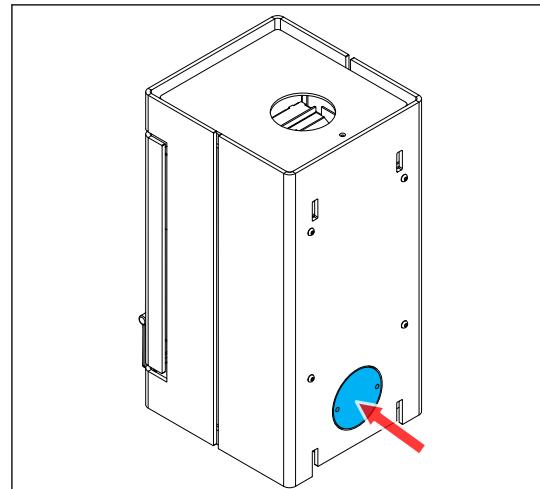

2. Remove the round break out plate with a hammer.

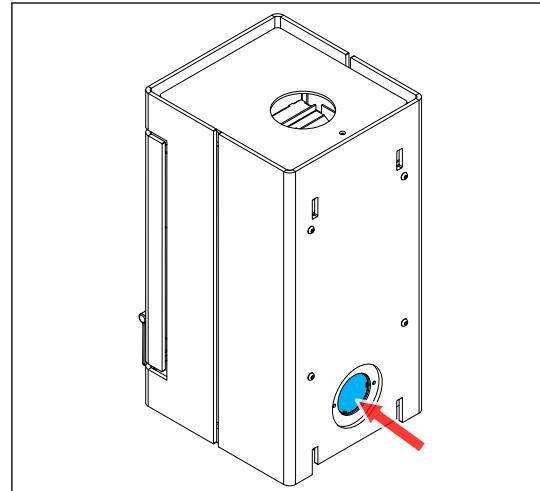

3. Put the connection ring in the open external air inlet opening.
4. Bend out the 3 lips on the connection ring to attach the connection ring on the inlet opening.
5. Apply a sealing compound (e.g. silicone sealant or similar) between the inlet opening and the connection ring.

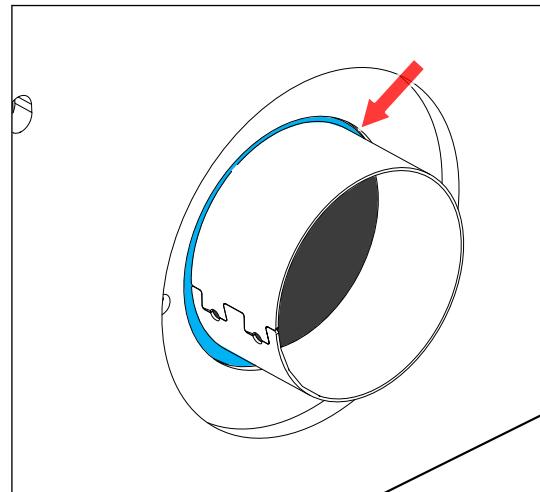




6. Attach a flexible aluminum pipe with a length of approximately 53 mm plus the thickness of the wall . Use a hose clamp or screws.
7. Continue the installation procedure with section [9.3](#).

9.3


Install the appliance on the support frame

Only do this procedure after finish of the procedure in section [9.2](#).

1. Lift the appliance until the flexible aluminum pipe is on the same height as the hole in the wall.
2. Move the appliance in the direction of the wall and guide the flexible pipe into the hole in the wall.
3. Move the appliance further on the support frame. Lower the appliance until it sits tight on the support frame.
4. Make sure the appliance is horizontal on the support frame. If necessary, adjust the adjustable feet with a 4 mm allen key. Use a spirit lever.

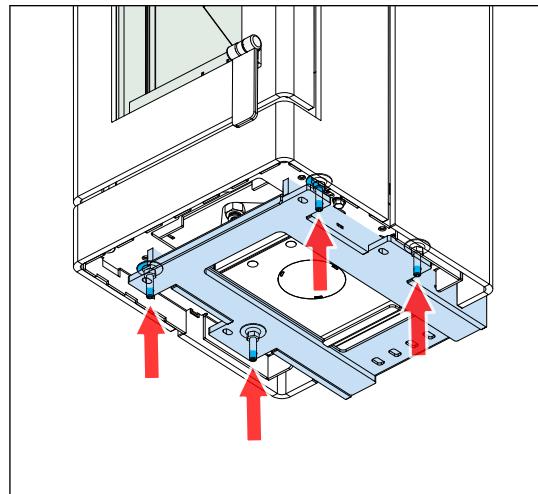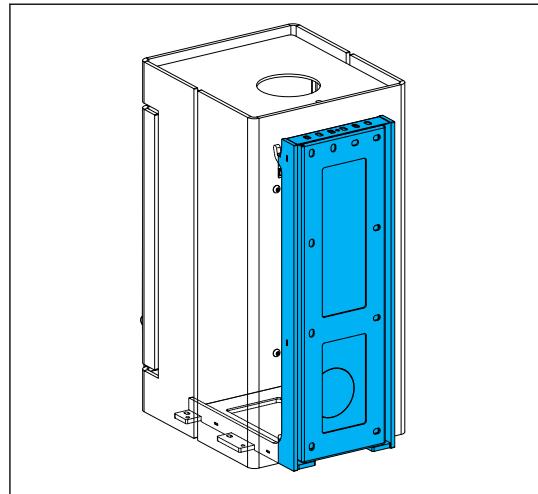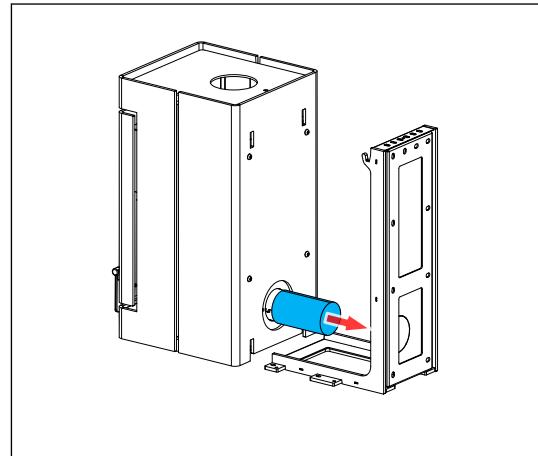

5. Attach the appliance on the support frame with the 4 screws.

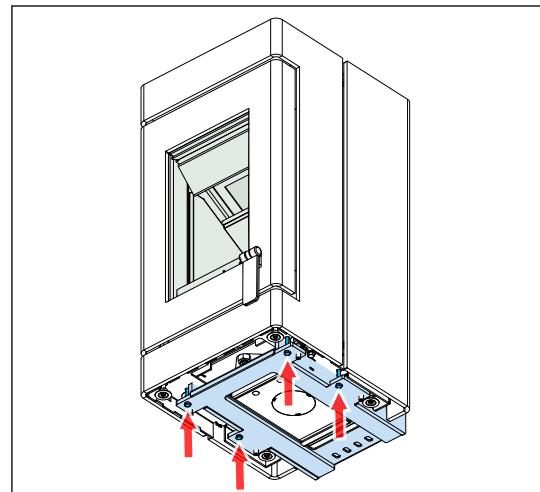

9.4 Connect the flue gas pipe

Preliminary requirements

- If the appliance is installed on an unlined, masonry flue with a large diameter, use an insulated flue lining system .
- Make sure the design and installation of the chimney is in accordance with EN 15287-2:2008, EN 13384-1:2015+A1:2019 and the good operation of the chimney is proven according EN 13384-2:2015+A1:2019 for the situation on site.

Only do this procedure after finish of the procedure in section [9.3](#).



Caution: During operation of the appliance the outer side of the flue system becomes hot. Refer to section [6.2](#) for minimum distances to flammable material.



Note: If the appliance is installed on an unlined, masonry flue with a large diameter, consider using a flue lining system to improve the performance of the appliance.

Procedure

1. Connect the flue to the flue gas connection on the appliance. If necessary use a steel flue adaptor.
2. If the flue is connected to an existing (masonry) chimney, make sure that the gap between the flue and the existing chimney is sealed with ceramic wool or any other applicable component (ask your flue system supplier for advice)
3. Make sure that all mechanical connections of the flue system are correctly used.
4. Make sure that all of the flue system is gas-tight,

9.5 Final check on the appliance

1. Make sure the door closes and opens easy.
2. Make sure the control lever moves easy to left and right without undue noise.
3. Make sure the plates on the side and rear wall of the combustion chamber and the baffles are in the correct position.

Contact your dealer if the final check shows a defect.

10 Maintenance

Warning:



Make sure that the appliance has cooled down completely before doing the procedures in this section.

Do all procedures in this section when necessary.

10.1 Appliance

1. Remove ashes from the floor of the combustion chamber.
2. Examine the door seals. Replace damaged seals.
3. Remove the grate and empty the ash tray.
4. Examine the baffle for damage. Replace when damaged.
5. Clean both sides of the glass with glass spray or ceramic hob cleaner.
6. Clean the inside of the appliance with a soft brush.
7. Clean the metal parts on the outside of the appliance with a dry lint free cloth. Use Barbas heat resistant paint spray to repair lacquer damage.

10.2 Combustion air supply

1. Make sure that the inlet of the pipe of the external combustion air supply is not blocked by leaves or other debris.
2. Clean the inlet of the pipe of the external combustion air supply.

10.3 Chimney

Note:



It is recommended to contact a registered chimney sweep company to inspect and clean the chimney.

1. Remove the lower baffle and upper baffle before the chimney sweep work. Refer to section [10.5](#) for the procedure to remove the baffles.
2. Sweep and inspect the chimney
3. Make sure there is no blockage in the chimney, for example by birds' nests.
4. Examine for cracks, loose parts and flue gas leakage. It is recommended to use an inspection camera.
5. Install the lower baffle and upper baffle. Refer to section [10.7](#) for the procedure to install the baffles.


10.4 Removal of the grate and ash tray

Note:




Make sure to remove all ashes and unburnt wood from the combustion chamber before the start of this procedure.

1. Lift the front log guard (1) and move the left side up.
2. Remove the front log guard (2)

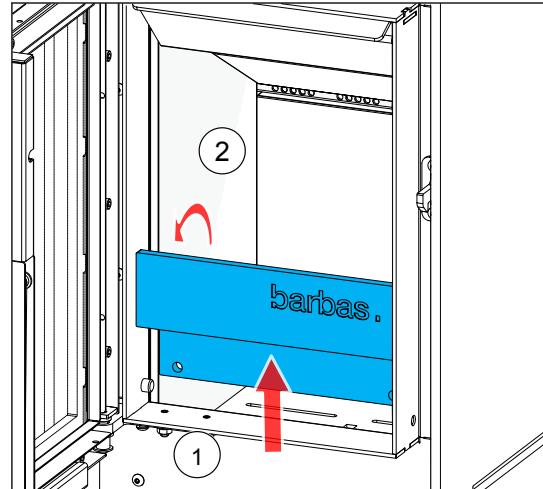

3. Remove the grate.

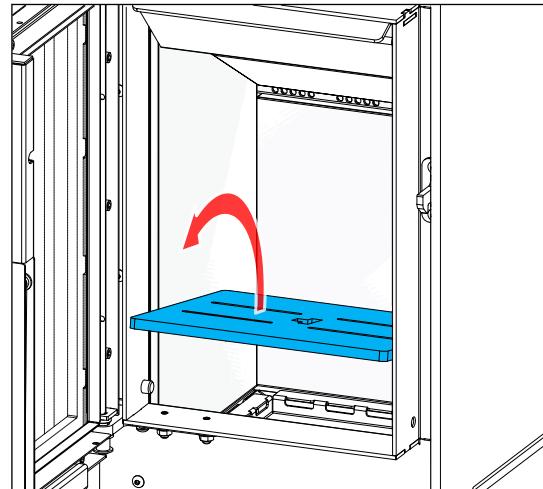

4. Remove the ash tray and empty it.

10.5 Removal of the baffles




Note:

Make sure to remove all ashes and unburnt wood from the combustion chamber before the start of this procedure.

1. Remove the upper baffle. Refer to section [10.5.1](#).
2. Remove the lower baffle. Refer to section [10.5.2](#).

10.5.1 Remove the upper baffle


1. Open the door.
2. Push up the front of the upper baffle (1) and pull it forward (2) and move downward to a vertical position (3).

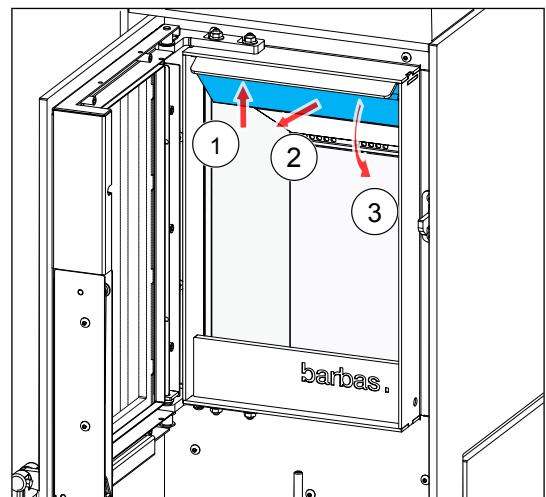

10.5.2 Remove the lower baffle


Only do this procedure after finish of the procedure in section [10.5.1](#).

1. Push up the right side of the lower baffle a small distance (1).
2. Lower the left side of the lower baffle a small distance (2) and remove the baffle from the appliance (3).

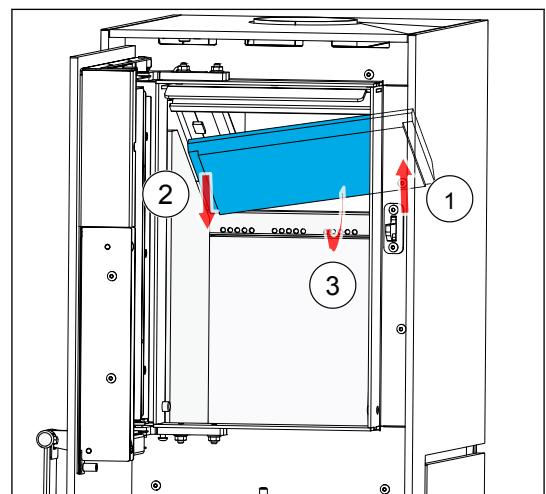


10.6 Install the grate and ash tray

1. Put the ash tray in the appliance.
2. Put the grate on the ashtray.

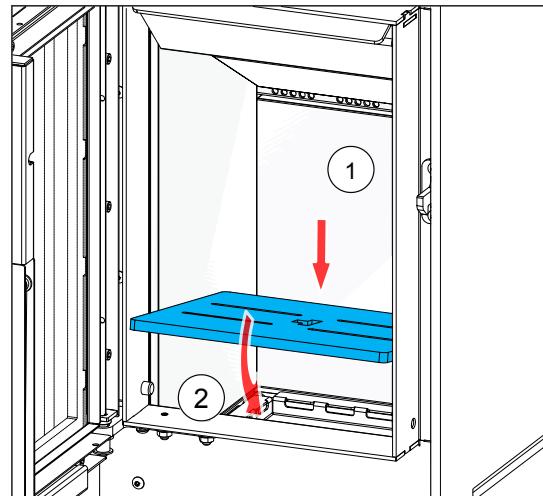

3. Put the front log guard in the appliance.

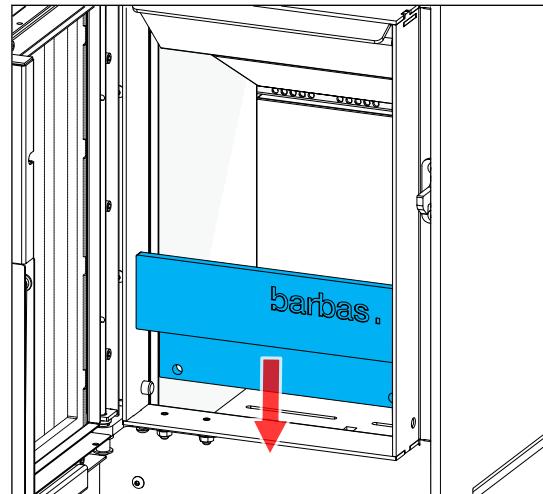


10.7 Installation of the baffles

1. Install the lower baffle. Refer to section [10.7.1](#).
2. Install the upper baffle. Refer to section [10.7.2](#).


10.7.1

Install the lower baffle

1. Move the lower baffle up under an angle into the combustion chamber (1) and put the right side of the baffle above the side panels (2) on the right.

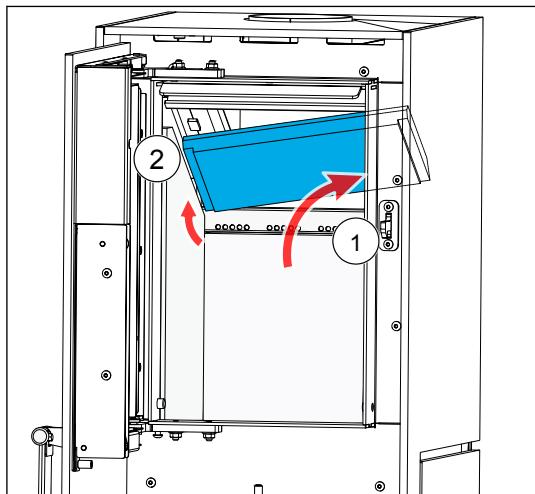

2. Move the left side of the lower baffle up and put it on top of the side panels on the left. If it does not fit, make sure the side panels are firmly seated against the side wall of the appliance.
3. Put the rear side of the baffle against the rear wall (3).

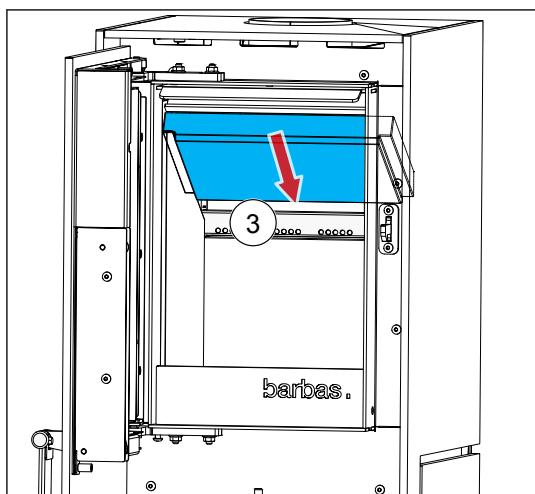


4. Make sure the lower baffle is horizontal and against the rear wall.

10.7.2


Install the upper baffle

Only do this procedure after finish of the procedure in section [10.7.1](#).

1. Move the upper baffle up and put the rear side above the lower baffle (1).

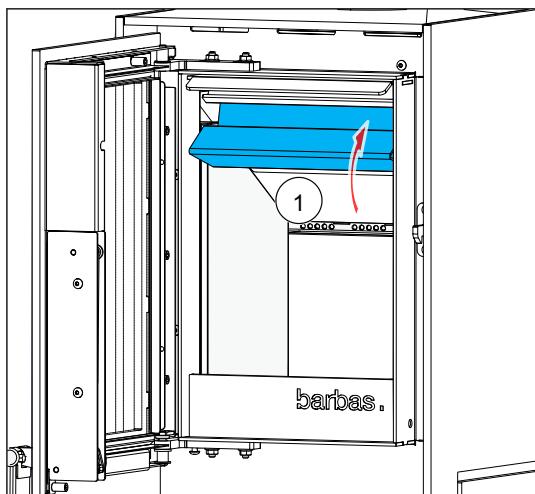

2. Move the front of the upper baffle up (2) and put the edge on the metal strip under the air wash inlet (3).

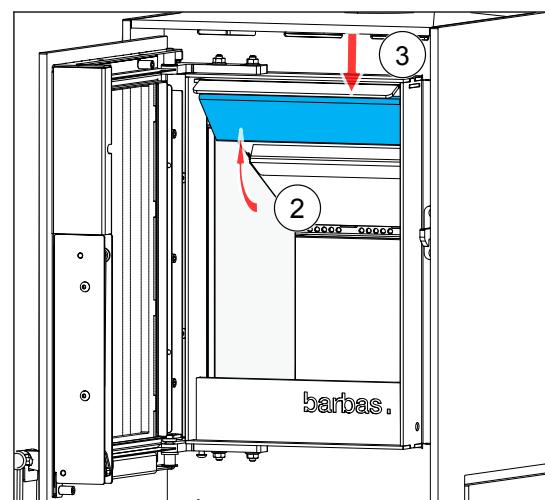

11 Technical data

11.1 Technical data

Name	Barbas	
Model	• BOX 35 35 70 • BOX 35 35 70 with support frame	
EPREL registration number	2393794	
Tested in accordance with	EN16510-2-1	
Energy efficiency index	102	
Energy efficiency class	A	
Fuel	Wood logs, Wood briquettes	
Indirect heating function	No	
Room sealed	Yes	
Leak rate at 10 Pa	< 3 m ³ /h (at 273 K, 1013 hPa)	
Seasonal efficiency	66.9 %	
	At nominal heat output	At part load heat output
Fuel load	0.8 kg	0.6 kg
Heat output (net)	3.8 kW	2.8 kW
Useful efficiency	76.9 %	77.6 %
Emissions (at 13 % O₂, 273 K, 1013 hPa)		
• carbon monoxide (CO)	1040 mg/Nm ³	1949 mg/Nm ³
• particles (PM)	33 mg/Nm ³	30 mg/Nm ³
• organic gaseous compounds (OGC)	59 mg/Nm ³	132 mg/Nm ³
• nitrogen oxides (NO _x)	102 mg/Nm ³	117 mg/Nm ³
Flue gas mass flow	4.3 g/s	3.7 g/s
Flue gas outlet temperature	312 °C	259 °C
Flue gas temperature	260 °C	216 °C
Minimum chimney draught	12 Pa	8 Pa
Minimum temperature class of the chimney	T 400	
Flue gas connection	Outer diameter 98 mm, suitable for a pipe with an inner diameter of 100 mm	
External combustion air connection	80 mm	
Weight		
• BOX 35 35 70 • BOX 35 35 70 with support frame	• 113 kg • 125 kg	
Minimum distance to flammable materials	Refer to chapter 6	
Used materials		

• Combustion chamber side and back panels	Vermiculite 750 kg/m ³
• Combustion floor and grate	Steel
• Lower baffle	Vermiculite 750 kg/m ³
• Upper baffle	Vermiculite 750 kg/m ³
• Front glass	Heat resistant ceramic glass
The specific precautions that shall be taken when the local space heater is assembled, installed or maintained, are listed in the attached documents:	<ul style="list-style-type: none"> • Installation and maintenance manual • User manual
Maximum capacity to carry a chimney	120 kg *)


Additional information in order to achieve relevant test results for market surveillance

Mass of basic fire bed	120 g
Criterion for the end of the test cycle	5 vol% CO ₂

*) if the weight of the chimney or part of the chimney, being carried by the appliance, is more than indicated, the chimney must be supported with a wall bracket.

11.2

Product information according regulation (EU) 2015/1185

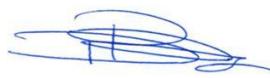Model identifier	BOX 35 35 70																	
Equivalent models	BOX 35 35 70 with support frame																	
Indirect heating function	No																	
Direct heat output	3.8 kW																	
Indirect heat output	- kW																	
Fuel	Preferred fuel (only one)	Other suitable fuel(s)	Emissions at nominal heat output (*) [mg/Nm ³ (13 % O ₂)]				Emissions at minimum heat output (*) (**) [mg/Nm ³ (13 % O ₂)]											
			PM	OGC	CO	NO _x	PM	OGC	CO	NO _x								
Wood logs, moisture content < 25 %	yes	no	33	59	1040	102	30	132	1949	117								
Compressed wood, moisture content < 12 %	no	no																
Other woody biomass	no	no																
Non-woody biomass	no	no																
Anthracite and dry steam coal	no	no																
Hard coke	no	no																
Low temperature coke	no	no																
Bituminous coal	no	no																
Lignite briquettes	no	no																
Peat briquettes	no	no																
Blended fossil fuel briquettes	no	no																
Other fossil fuel	no	no																
Blended biomass and fossil fuel briquettes	no	no																
Other blend of biomass and solid fuel	no	no																
Characteristics when operating with the preferred fuel																		
Seasonal space heating efficiency η _s [%]	67																	
Energy efficiency index (EEI)	102																	
Item	Symbol	Value	Unit	Item	Symbol	Value	Unit											
Heat output									Useful efficiency (NCV as received)									
Nominal heat output	P _{nom}	3.8	kW	Useful efficiency at nominal heat output	η _{th,nom}	76.9	%											
Minimum heat output (indicative)	P _{min}	2.8	kW	Useful efficiency at minimum heat output (indicative)	η _{th,min}	77.6	%											
Auxiliary power consumption									Type of heat output/room temperature control (select one)									
At nominal heat output	e _l _{max}	N.A.	kW	Single-stage heat output, no room temperature control						yes								
At minimum heat output	e _l _{min}	N.A.	kW	Two or more manual stages, no room temperature control						no								
In standby mode	e _l _{SB}	N.A.	kW	With mechanic thermostat room temperature control						no								
Permanent pilot flame power requirement									With electronic room temperature control									
Pilot flame power requirement (if applicable)	P _{pilot}	N.A.	kW	With electronic room temperature control plus day timer						no								
				With electronic room temperature control plus week timer						no								
Other control options (multiple selection possible)																		
				Room temperature control, with presence detection						no								
				Room temperature control, with open window detection						no								
				With distance control option						no								
Contact details	Barbas Bellfires BV Hallenstraat 17 5531 AB BLADEL The Netherlands				www.barbas.com													
(*) PM = particulate matter, OGC = organic gaseous compounds, CO = carbon monoxide, NO _x = nitrogen oxides (**) Only required if correction factors F(2) or F(3) are applied.																		
Signed for and on behalf of the manufacturer by: Danny Baijens, CEO Bladel; 19 June 2025																		


11.3

Explanation of used notations on typeshield

Notation	Description
m_{chim}	The maximum weight of a chimney the appliance may carry
d_B	The minimum distances below the bottom to combustible material
d_F	The minimum distances from the front to combustible material in the bottom front radiation area
d_C	The minimum distances from the top to combustible material
d_R	The minimum distances from the rear to combustible material
d_S	The minimum distances from the sides to combustible material
d_L	The minimum distances from the front to combustible material in the side front radiation area
d_P	The minimum distances from the front to combustible material
CO_{nom}	Carbon monoxide emission at nominal heat output
$\text{NO}_{x\text{nom}}$	Nitrogen oxide emission at nominal heat output
OGC_{nom}	Hydrocarbons emission at nominal heat output
PM_{nom}	Particleemission at nominal heat output
CO_{part}	Carbon monoxide emission at part load heat output
$\text{NO}_{x\text{part}}$	Nitrogen oxide emission at part load heat output
OGC_{part}	Hydrocarbons emission at part load heat output
PM_{part}	Particle emission at part load output
T_{snom}	The flue gas outlet temperature at nominal heat output
p_{nom}	Minimum flue draught at nominal heat output
$\Phi_{f,g \text{ nom}}$	The flue gas mass flow at nominal heat output
T_{spart}	The flue gas outlet temperature at part load heat output
p_{part}	Minimum flue draught at part load heat output
$\Phi_{f,g \text{ part}}$	The flue gas mass flow at part load heat output
T_{class}	Temperature designation of the chimney
P_{nom}	The nominal heat output
η_{nom}	The appliance efficiency at nominal heat output
P_{part}	The part load heat output
η_{part}	The appliance efficiency at part load heat output
η_s	The appliance seasonal space heating efficiency at nominal heat output
EEI	The energy efficiency index
E_{class}	The energy efficiency class
INT	The appliance is capable of intermittent operation
CM	Room-sealed appliance with a manually closed and locked door
B	Non-room-sealed appliance
	Read and follow the user operating instructions

12 Dimensions


12.1 Dimensions BOX 35 35 70

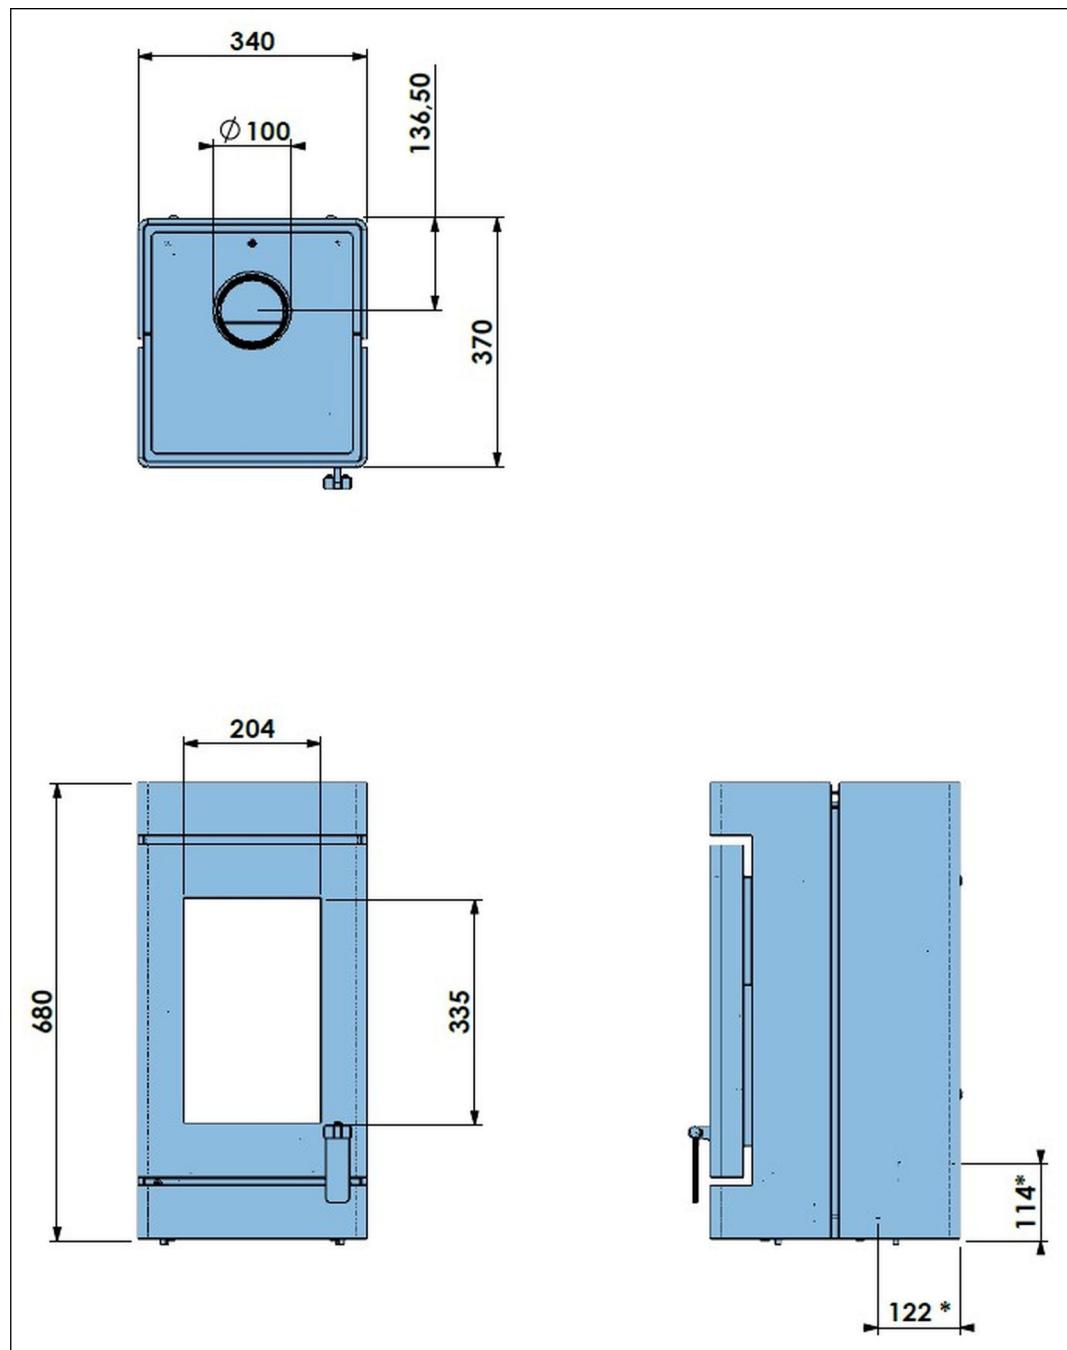

*) Combustion air inlet openings (\varnothing 80) at the rear and bottom of the appliance.

12.2

Dimensions BOX 35 35 70 with support frame

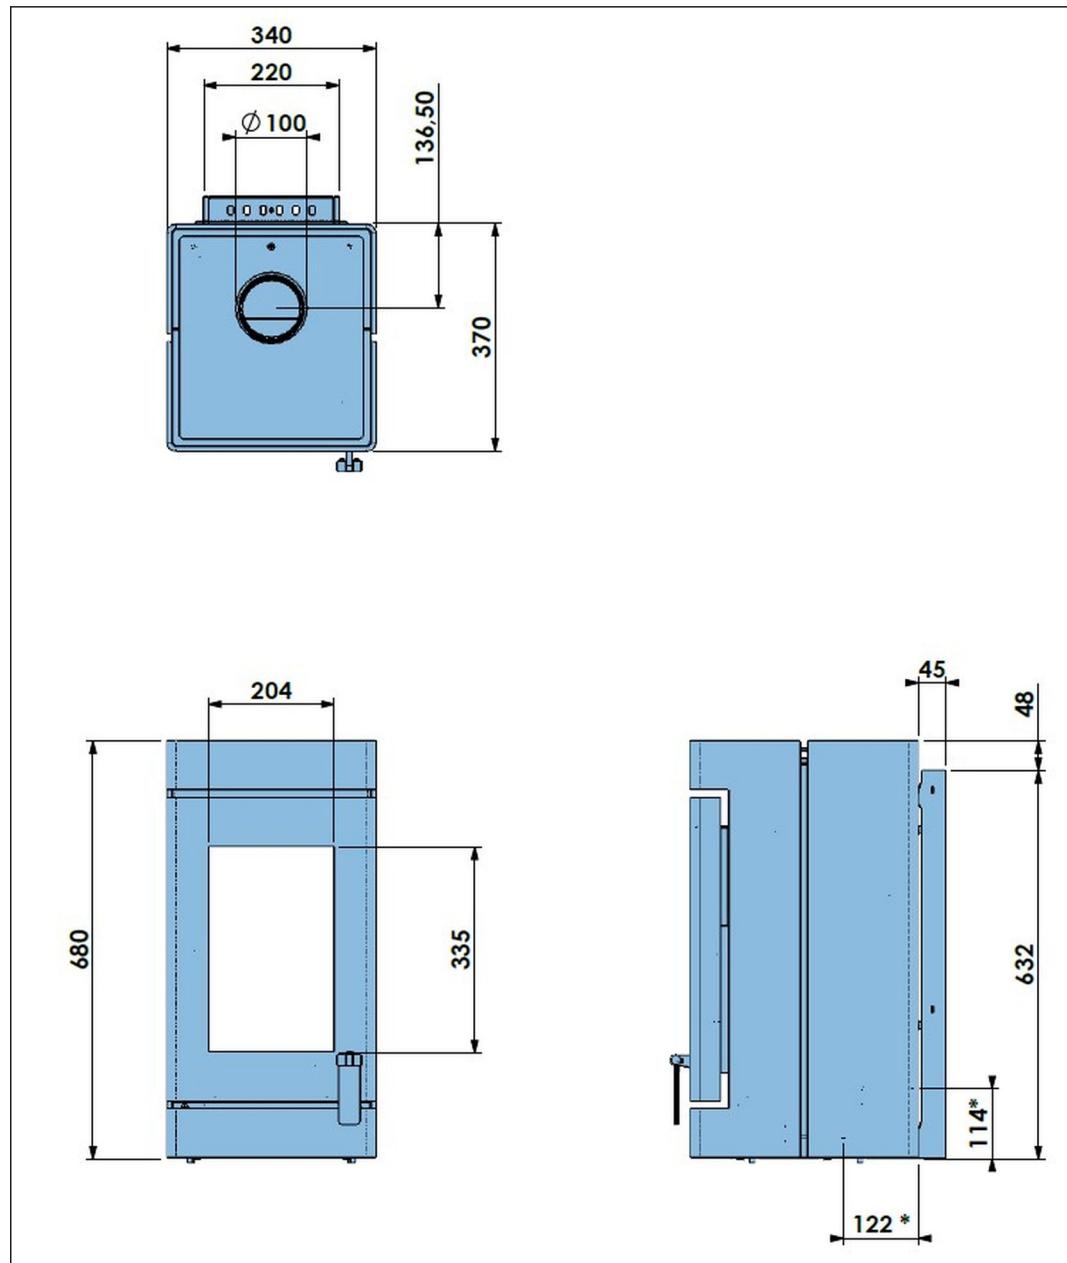

*) Combustion air inlet openings (\varnothing 80 mm) at the rear and bottom of the appliance.

13

Warranty Terms

To make a claim under the warranty, it is important to register the Barbas appliance after purchase via www.barbas.com.

Barbas Warranty Terms

Barbas B.V. guarantees the quality of the supplied Barbas appliance and the quality of the materials used. All Barbas appliances are developed and manufactured according to the highest possible quality standards. If, despite all this, something should prove amiss with the Barbas appliance you have purchased, Barbas B.V. offers the following manufacturer's warranty.

Article 1: Warranty

1. If Barbas B.V. determines that the Barbas appliance you have purchased is defective as a result of a flaw in the construction or material, Barbas B.V. guarantees to repair or replace the appliance free of charge, without charging any costs for labor or spare parts.
2. Repair or replacement of the Barbas appliance will be undertaken by Barbas B.V. or by a Barbas dealer as designated by Barbas B.V.
3. This warranty is supplementary to the existing legal national warranty of Barbas dealers and Barbas B.V. in the country of purchase and is not intended to restrict your rights and claims based on the applicable legal provisions.

Article 2: Warranty conditions

1. Should you wish to claim under the warranty, please contact your Barbas dealer.
2. Complaints should be reported as quickly as possible after they have manifested themselves.
3. Complaints will only be accepted if they are reported to the Barbas dealer, together with the serial number of the Barbas appliance which is stated on the enclosed documents.
4. In addition, the original receipt (invoice, receipt, cash receipt) showing the date of purchase must also be submitted.
5. Repairs and replacements during the warranty period do not give any entitlement to an extension of the warranty period. After a repair or replacement of warranty parts, the warranty period shall be deemed to have started on the date of purchasing the Barbas appliance.
6. If a certain part is eligible for the warranty and the original part is no longer available, Barbas B.V. shall ensure that an alternative part of at least the same quality shall be provided.

Article 3: Warranty exclusions

1. The warranty on the Barbas appliance ceases to be in effect if:
 - a. it is not installed according to the installation instructions, and to national and/or local regulations;
 - b. it has been installed, connected or repaired by a non-Barbas dealer;
 - c. it has not been used or maintained according to the instructions for use;

- d. it has been changed, neglected or roughly treated;
- e. it has been damaged as a result of external causes (outside the appliance itself), for example, lightning strike, water damage or fire;
2. In addition, the warranty lapses if the original purchase receipt shows any change, deletion, removal or if it is illegible.

Article 4: Warranty area

1. The warranty is only valid in those countries where Barbas appliances are sold through an official dealer network.

Article 5: Warranty period

1. This warranty will only be granted during the warranty period.
2. The body of the Barbas appliance is guaranteed for a period of 10 years against construction and/or material faults, starting from the moment of purchase.
3. For other parts of the Barbas appliance, a similar warranty applies from the moment of purchase for a period of two years.
4. For user parts such as glass, glass sealing cord and the interior of the combustion chamber, a similar guarantee is given until after the first burning.

Article 6: Liability

1. A claim granted by Barbas B.V. under this warranty does not automatically imply that Barbas B.V. also accepts liability for any possible damage. The liability of Barbas B.V. never extends further than that stated in these warranty conditions. Any liability of Barbas B.V. for consequential damage is expressly excluded.
2. That stated in this provision is not valid if and to the extent that it derives from a mandatory provision.
3. All agreements entered into by Barbas B.V. are, unless specifically stated otherwise in writing and to the extent that they are permitted based on applicable law, subject to the FME-CWM general sales and delivery conditions for the technology industry.

Barbas B.V.

Hallenstraat 17

5531 AB Bladel

The Netherlands

Email: info@Barbas.com

Carefully retain the enclosed documents; they show the serial number of the appliance. You will need this if you wish to claim under the warranty.

barbas .

Your Barbas dealer

21.08.2025 - 357666 - 572-001